

Service Manual

Serial Number Range

S-80 S-85

from \$80-3082 to \$8004-3737

Part No. 77832

Rev D

February 2012

Introduction February 2012

Introduction

Important

Read, understand and obey the safety rules and operating instructions in the *Genie S-80* and *S-85 Operator's Manual* before attempting any maintenance or repair procedure.

This manual provides detailed scheduled maintenance information for the machine owner and user. It also provides troubleshooting fault codes and repair procedures for qualified service professionals.

Basic mechanical, hydraulic and electrical skills are required to perform most procedures. However, several procedures require specialized skills, tools, lifting equipment and a suitable workshop. In these instances, we strongly recommend that maintenance and repair be performed at an authorized Genie dealer service center.

Compliance

Machine Classification

Group B/Type 3 as defined by ISO 16368

Machine Design Life

Unrestricted with proper operation, inspection and scheduled maintenance.

Technical Publications

Genie has endeavored to deliver the highest degree of accuracy possible. However, continuous improvement of our products is a Genie policy. Therefore, product specifications are subject to change without notice.

Readers are encouraged to notify Genie of errors and send in suggestions for improvement. All communications will be carefully considered for future printings of this and all other manuals.

Contact Us:

http://www.genielift.com e-mail:awp.techpub@terex.com

Serial Number Information

Genie offers the following Service Manuals for these models:

Title Part N	lo.
Genie S-80 and S-85 Service Manual (from serial number 101 to 785)3403	32
Genie S-80 and S-85 Service Manual (from serial number 786 to 965)522	70
Genie S-80 and S-85 Service Manual (from serial number 966 to 3081)720	62
Genie S-80 and S-85 Service Manual (from serial number 3738 to 5380) 11110	65
Genie S-80 and S-85 Service Manual (from serial number 5381 to 7999) 12214	49
Genie S-80, S-85 and S-80X Service Manu (from serial number 8000) 12298	

Copyright © 2011 Terex Coporation

77832 Rev D February 2012 Fourth Edition, Fourth Printing

"Genie" and "S" are registered trademarks of Terex South Dakota, Inc. in the USA and many other countries.

Printed on recycled paper

Printed in U.S.A.

Revision History

Revision	Date	Section	Procedure / Schematic Page / Description
D	2/2012	Introduction	Revision History Added
		3 - Maint.	3-1
REFERENCE	XAMPLES:		

Kubota Engine_Section 2_Specifications. A-6,B-3,C-7_Section 3_Maintenance Procedure. 3-2,6-4,9-1_Section 4_Repair Procedure.

Fault Codes_Section 5.

6-35, 6-56, 6-104_Section 6_Schematic Page #.

Electronic Version

Click on any procedure or page number highlighted in blue to view the update.

Genîe

REVISION HISTORY, CONTINUED

Revision	Date	Section	Procedure / Schematic Page / Description
REFERENCE	EXAMPLES:		

Kubota Engine_Section 2_Specifications. A-6,B-3,C-7_Section 3_Maintenance Procedure. 3-2,6-4,9-1_Section 4_Repair Procedure. Fault Codes_Section 5. 6-35,6-56,6-104_Section 6_Schematic Page #.

Electronic Version

Click on any procedure or page number highlighted in blue to view the update.

Genîe

Serial Number Legend



A TEREX BRAND

Model: S-80

Serial number: \$8006-12345

Model year: 2006 Manufacture date: 01/05/06

Electrical schematic number: E0180

Machine unladen weight:

Rated work load (including occupants): 500 lb / 227 kg

Maximum number of platfrm occupants: 2 Maximum allowable side force : 150 lb / 670 N Maximum allowable inclination of the chassis:

0 deg

Maximum wind speed: 28 mph/ 12.5 m/sMaximum platform height: 60 ft 6 in/ 18.3 mMaximum platform reach: 34 ft 3 in/ 10.4 m

Gradeability: N/A

Country of manufacture: USA This machine complies with:


ANSI A92.5 CAN B.354.4


Terex South Dakota, Inc. 500 Oak Wood Road PO Box 1150 Watertown, SD 57201 USA



PN - 7705



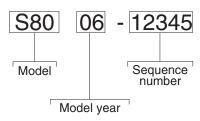

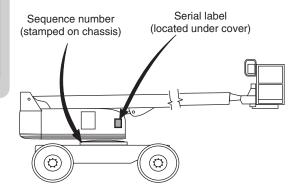

Safety Rules



Danger

Failure to obey the instructions and safety rules in this manual, and the *Genie S-80* and *Genie S-85 Operator's Manual* will result in death or serious injury.

Many of the hazards identified in the operator's manual are also safety hazards when maintenance and repair procedures are performed.

Do Not Perform Maintenance Unless:

- ✓ You are trained and qualified to perform maintenance on this machine.
- ☑ You read, understand and obey:
 - manufacturer's instructions and safety rules
 - employer's safety rules and worksite regulations
 - applicable governmental regulations
- ✓ You have the appropriate tools, lifting equipment and a suitable workshop.

Personal Safety

Any person working on or around a machine must be aware of all known safety hazards. Personal safety and the continued safe operation of the machine should be your top priority.



Read each procedure thoroughly. This manual and the decals on the machine use signal words to identify the following:



Safety alert symbol—used to alert personnel to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

A DANGER

Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

AWARNING

Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

ACAUTION

Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.

NOTICE

Indicates a potentially hazardous situation which, if not avoided, may result in property damage.



Be sure to wear protective eye wear and other protective clothing if the situation warrants it.



Be aware of potential crushing hazards such as moving parts, free swinging or unsecured components when lifting or

placing loads. Always wear approved steel-toed shoes.

SAFETY RULES

Workplace Safety



Be sure to keep sparks, flames and lighted tobacco away from flammable and combustible materials like battery gases

and engine fuels. Always have an approved fire extinguisher within easy reach.



Be sure that all tools and working areas are properly maintained and ready for use. Keep work surfaces clean and free of

debris that could get into machine components and cause damage.



Be sure any forklift, overhead crane or other lifting or supporting device is fully capable of supporting and stabilizing the

weight to be lifted. Use only chains or straps that are in good condition and of ample capacity.



Be sure that fasteners intended for one time use (i.e., cotter pins and self-locking nuts) are not reused. These components

may fail if they are used a second time.



Be sure to properly dispose of old oil or other fluids. Use an approved container. Please be environmentally safe.



Be sure that your workshop or work area is properly ventilated and well lit.

Table of Contents

Introduction	
	Important Information
	Serial Number Information
	Revision Historyii
	Serial Number Legend
Section 1	Safety Rules
	General Safety Rulesv
Section 2	Specifications
	Machine Specifications
	Performance Specifications
	Hydraulic Specifications
	Manifold Component Specifications
	GM 3.0L EFI Engine Specifications
	Deutz F4L-913 Engine
	Perkins 704-30 Engine Specifications
	Machine Torque Specifications
	Hydraulic Hose and Fitting Torque Specifications
	SAE and Metric Fastener Torque Charts
Section 3	Scheduled Maintenance Procedures
	Introduction
	Pre-Delivery Preparation
	Maintenance Inspection Report

Section 3	Sche	Scheduled Maintenance Procedures, continued				
	Chec	Checklist A Procedures				
	A-1	Perform Pre-operation Inspection	3 - 7			
	A-2	Perform Function Tests	3 - 7			
	A-3	Perform Engine Maintenance	3 - 8			
	A-4	Check the Hydraulic Filter Condition Indicators	3 - 9			
	A-5	Test the Oscillate Axle	3 - 10			
	A-6	Test the Extendable Axles	3 - 10			
	A-7	Perform 30 Day Service	3 - 11			
	A-8	Perform Engine Maintenance - Deutz Models	3 - 12			
	A-9	Inspect the Fuel Filter/Water Separator - Diesel Models	3 - 12			
	A-10	Grease the Turntable Rotation Bearing and Rotate Gear	3 - 13			
	A-11	Perform Engine Maintenance	3 - 14			
	A-12	Perform Engine Maintenance - Deutz Models	3 - 15			
	A-13	Replace the Drive Hub Oil	3 - 15			
	A-14	Perform Engine Maintenance - GM and Perkins Models	3 - 17			
	Chec	cklist B Procedures				
	B-1	Inspect the Battery(s)	3 - 18			
	B-2	Inspect the Electrical Wiring	3 - 19			
	B-3	Test the Key Switch	3 - 21			
	B-4	Check the Exhaust System	3 - 21			
	B-5	Inspect the Engine Air Filter	3 - 22			
	B-6	Check the Oil Cooler and Cooler Fins - Deutz Models	3 - 23			
	B-7	Confirm the Proper Brake Configuration	3 - 24			

Section 3	Sche	duled Maintenance Procedures, continued	
	B-8	Inspect the Tires, Wheels and Lug Nut Torque	3 - 25
	B-9	Check the Drive Hub Oil Level and Fastener Torque	3 - 26
	B-10	Check and Adjust the Engine RPM	3 - 27
	B-11	Perform Engine Maintenance	3 - 29
	B-12	Check the Oscillate Directional Valve Linkage	3 - 30
	B-13	Test the Ground Control Override	3 - 30
	B-14	Test the Platform Self-leveling	3 - 31
	B-15	Test the Engine Idle Select Operation	3 - 31
	B-16	Test the Fuel Select Operation - GM Models	3 - 32
	B-17	Test the Drive Enable System	3 - 33
	B-18	Test the Drive Brakes	3 - 34
	B-19	Test the Drive Speed - Stowed Position	3 - 35
	B-20	Test the Drive Speed - Raised or Extended Position	3 - 35
	B-21	Test the Alarm Package (if equipped)	3 - 36
	B-22	Inspect the Fuel and Hydraulic Tank Cap Venting Systems	3 - 37
	B-23	Perform Hydraulic Oil Analysis	3 - 38
	B-24	Perform Engine Maintenance - GM Models	3 - 39
	Chec	klist C Procedures	
	C-1	Perform Engine Maintenance - Deutz and Perkins Models	3 - 40
	C-2	Grease the Platform Overload Mechanism (if equipped)	3 - 41

Section 3	Sche	eduled Maintenance Procedures, continued	
	C-3	Test the Platform Overload System (if equipped)	3 - 41
	C-4	Replace the Engine Air Filter Element - Deutz and Perkins Models	3 - 44
	C-5	Replace the Fuel Filter/ Water Separator Element - Diesel Models	3 - 44
	C-6	Perform Engine Maintenance - GM Models	3 - 46
	Chec	cklist D Procedures	
	D-1	Check the Boom Wear Pads	3 - 47
	D-2	Check the Extendable Axle Wear Pads	3 - 48
	D-3	Check the Free-wheel Configuration	3 - 49
	D-4	Check the Turntable Rotation Bearing Bolts	3 - 50
	D-5	Inspect for Turntable Bearing Wear	3 - 51
	D-6	Perform Engine Maintenance - Deutz and Perkins Models	3 - 53
	D-7	Replace the Hydraulic Filter Elements	3 - 54
	D-8	Replace the Drive Hub Oil	3 - 55
	D-9	Perform Engine Maintenance - Deutz Models	3 - 57
	Chec	cklist E Procedures	
	E-1	Test or Replace the Hydraulic Oil	3 - 58
	E-2	Perform Engine Maintenance - Perkins Models	3 - 60
	E-3	Grease the Steer Axle Wheel Bearings, 2WD Models	3 - 60
	E-4	Perform Engine Maintenance - Deutz and Perkins Models	3 - 62
Section 4	Repa	air Procedures	
	Introd	duction	4 - 1
	Platf	form Controls	
	1-1	ALC-500 Circuit Board	4 - 2
	1-2	Joysticks	4 - 3
	Platf	form Components	
	2-1	Platform	4 - 8
	2-2	Platform Leveling Slave Cylinder	4 - 9

Section 4	Repa	air Procedures, continued				
	2-3	Platform Rotator	4 - 10			
	2-4	Platform Overload System	4 - 13			
	Jib E	Boom Components, S-85				
	3-1	Jib Boom	4 - 16			
	3-2	Jib Boom Lift Cylinder	4 - 17			
	Boo	m Components				
	4-1	Cable Track	4 - 18			
	4-2	Boom	4 - 21			
	4-3	Boom Lift Cylinder	4 - 24			
	4-4	Boom Extension Cylinders	4 - 26			
	4-5	Platform Leveling Master Cylinder	4 - 28			
	Turn	Turntable Covers				
	5-1	Turntable Covers	4 - 29			
	Engi	Engines				
	6-1	RPM Adjustment	4 - 30			
	6-2	Flex Plate	4 - 30			
	6-3	Engine Fault Codes - GM Models	4 - 34			
	Grou	und Controls				
	7-1	Control Relays	4 - 35			
	7-2	Power Relay	4 - 36			
	7-3	Terminal Strip	4 - 37			
	Hydı	raulic Pumps				
	8-1	Function Pump	4 - 38			
	8-2	Drive Pump	4 - 39			

Section 4	Repa	Repair Procedures, continued				
	Mani	Manifolds				
	9-1	Function Manifold Components - View 1	4 - 41			
	9-2	Function Manifold Components - View 2	4 - 45			
	9-3	Valve Adjustments - Function Manifold	4 - 47			
	9-4	Turntable Rotation Manifold Components	4 - 49			
	9-5	Brake/Two-speed Manifold Components	4 - 50			
	9-6	Jib Boom Select Manifold Components, S-85	4 - 51			
	9-7	Axle Select Manifold Components	4 - 53			
	9-8	2WD Traction Manifold Components	4 - 55			
	9-9	4WD Traction Manifold Components	4 - 57			
	9-10	Valve Adjustments - Traction Manifold	4 - 59			
	9-11	Valve Coils	4 - 60			
	Fuel	Fuel and Hydraulic Tanks				
	10-1	Fuel Tank	4 - 62			
	10-2	Hydraulic Tank	4 - 63			
	Turn	table Rotation Components				
	11-1	Turntable Rotation Drive Hub Assembly	4 - 65			
	2WD	Steer Axle Components				
	12-1	Yoke and Hub	4 - 68			
	12-2	Steer Cylinder	4 - 69			
	12-3	Tie Rod Cylinder	4 - 70			

Section 4	Repair Procedures, continued			
	4WD Steer Axle Components			
	13-1 Yoke and Drive Hub			
	13-2 Drive Motor 4 - 73			
	13-3 Drive Hub 4 - 74			
	13-4 Steer Cylinders 4 - 74			
	13-5 Tie Rod Cylinders 4 - 75			
	Non-steer Axle Components			
	14-1 Drive Motor 4 - 76			
	14-2 Drive Hub			
	Oscillating Axle Components			
	15-1 Oscillate Axle Cylinders			
	15-2 Oscillate Directional Valve			
	Extendable Axle Components			
	16-1 Extendable Axles			
	16-2 Axle Extension Cylinder			
Section 5	Fault Codes			
	Introduction 5 - 1			
	Fault Codes 5 - 2			
	Fault Code Chart 5 - 3			
Section 6	Schematics			
	Introduction			
	Electrical Symbols Legend			
	Hydraulic Symbols Legend 6 - 3			

	Schematics, continued	Section 6
6 - 6	Connector Pin Legend	
6 - 7	GM 3.0L Engine Wiring Harness	
located at end of manual	Electrical Schematic, S-80 Deutz F4L 913 Models (before serial number 3577)	
6 - 10	Ground Control Box Wiring Diagram, S-80 Deutz F4L 913 Models (before serial number 3577)	
6 - 11	Platform Control Box Wiring Diagram, S-80 Deutz F4L 913 Models (before serial number 3577)	
6 - 14	Electrical Schematic, S-80 Deutz F4L 913 Models (after serial number 3576)	
6 - 18	Electrical Schematic, S-80, CE Models Deutz F4L 913 Models (after serial number 3576)	
6 - 22	Ground Control Box Wiring Diagram, S-80 Deutz F4L 913 Models (after serial number 3576)	
6 - 23	Platform Control Box Wiring Diagram, S-80 Deutz F4L 913 Models (after serial number 3576)	
6 - 26	Ground Control Box Wiring Diagram, S-80, CE Models Deutz F4L 913 Models (after serial number 3576)	
6 - 27	Platform Control Box Wiring Diagram, S-80, CE Models Deutz F4L 913 Models (after serial number 3576)	
located at end of manual	Electrical Schematic, S-80 GM 3.0L Models (before serial number 3577)	
6 - 30	Ground Control Box Wiring Diagram, S-80 GM 3.0L Models (before serial number 3577)	

Section 6	Schematics, continued
	Platform Control Box Wiring Diagram, S-80 GM 3.0L Models (before serial number 3577)
	Electrical Schematic, S-80 GM 3.0L Models (after serial number 3576)
	Ground Control Box Wiring Diagram, S-80 GM 3.0L Models (after serial number 3576)
	Platform Control Box Wiring Diagram, S-80 GM 3.0L Models (after serial number 3576)
	Electrical Schematic, S-80 Perkins 704-30 Models (before serial number 3577) located at end of manual
	Ground Control Box Wiring Diagram, S-80 Perkins 704-30 Models (before serial number 3577)
	Platform Control Box Wiring Diagram, S-80 Perkins 704-30 Models (before serial number 3577)
	Electrical Schematic, S-80 Perkins 704-30 Models (after serial number 3576)
	Ground Control Box Wiring Diagram, S-80 Perkins 704-30 Models (after serial number 3576)
	Platform Control Box Wiring Diagram, S-80 Perkins 704-30 Models (after serial number 3576)
	Electrical Schematic, S-85 Deutz F4L 913 Models (before serial number 3577) located at end of manual
	Ground Control Box Wiring Diagram, S-85 Deutz F4L 913 Models (before serial number 3577)
	Platform Control Box Wiring Diagram, S-85 Deutz F4L 913 Models (before serial number 3577)

Section 6	Schematics, continued
	Electrical Schematic, S-85 Deutz F4L 913 Models (after serial number 3576)
	Electrical Schematic, S-85, CE Models Deutz F4L 913 Models (after serial number 3576)
	Ground Control Box Wiring Diagram, S-85 Deutz F4L 913 Models (after serial number 3576)
	Platform Control Box Wiring Diagram, S-85 Deutz F4L 913 Models (after serial number 3576)
	Ground Control Box Wiring Diagram, S-85, CE Models Deutz F4L 913 Models (after serial number 3576)
	Platform Control Box Wiring Diagram, S-85, CE Models Deutz F4L 913 Models (after serial number 3576)
	Electrical Schematic, S-85 GM 3.0L Models (before serial number 3577)located at end of manua
	Ground Control Box Wiring Diagram, S-85 GM 3.0L Models (before serial number 3577)
	Platform Control Box Wiring Diagram, S-85 GM 3.0L Models (before serial number 3577)
	Electrical Schematic, S-85 GM 3.0L Models (after serial number 3576)
	Ground Control Box Wiring Diagram, S-85 GM 3.0L Models (after serial number 3576)
	Platform Control Box Wiring Diagram, S-85 GM 3.0L Models (after serial number 3576)

Section 6	Schematics, continued
	Electrical Schematic, S-85 Perkins 704-30 Models (before serial number 3577)located at end of manua
	Ground Control Box Wiring Diagram, S-85 Perkins 704-30 Models (before serial number 3577)
	Platform Control Box Wiring Diagram, S-85 Perkins 704-30 Models (before serial number 3577)
	Electrical Schematic, S-85 Perkins 704-30 Models (before serial number 3577)
	Ground Control Box Wiring Diagram, S-85 Perkins 704-30 Models (after serial number 3576)
	Platform Control Box Wiring Diagram, S-85 Perkins 704-30 Models (after serial number 3576)
	Dual Battery Option 6 - 97
	Hydraulic Schematic, 2WD Models
	Hydraulic Schematic, 4WD Models6 - 101

Specifications

Machine Specifications

Tires and wheels	
Tire size	15-22.5 SAT 385/65-22.5
Tire ply rating	16
Overall tire diameter	43.5 in 110.5 cm
Tire pressure	100 psi 6.9 bar
Wheel diameter	22.5 in 57 cm
Wheel width	11.75 in 29.8 cm
Wheel lugs	10 @ ³ /4 -16
Lug nut torque, dry	420 ft-lbs 569.4 Nm
Lug nut torque, lubricated	320 ft-lbs 434 Nm
Fluid capacities	
Fuel tank	33 gallons 124.9 liters
LPG tank	33.5 pounds 15.2 kg
Hydraulic tank	45 gallons 170 liters
Hydraulic system (including tank)	57 gallons 215 liters
Turntable rotation drive hub	32 fl oz 0.95 liters
Drive hubs	61 fl oz 1.8 liters

For operational specifications, refer to the Operator's Manual.

classification GL5

Performance Specifications

Drive speed, maximum	n	
Stowed position		3.3 mph 5.3 km/h 40 ft/8.2 sec 12.2 m/8.2 sec
Raised or extended po	sition	0.68 mph 1.1 km/h 40 ft/43 sec 12.2 m/43 sec
Braking distance, max	kimum	
High range on paved s	urface	3 ft 90 cm
Gradeability	Refer	to the Operator's Manual
Boom function speeds from platform controls		mum
Jib boom up (S-85)		60 to 70 seconds
Jib boom down (S-85)		40 to 50 seconds
Boom up		89 to 93 seconds
Boom down		90 to 94 seconds
Boom extend		73 to 79 seconds
Boom retract		79 to 84 seconds
Turntable rotate, 360° boom fully stowed		80 to 84 seconds
Turntable rotate, 360° boom raised or extende	ed	210 to 240 seconds
Platform rotate, 160°		8 to 12 seconds
Platform level up		50 to 60 seconds
Platform level down		40 to 50 seconds

Hydraulic Specifications

Hydraulic Oil Specifications		
Hydraulic oil type ISO viscosity grade Viscosity index	Chevron Rykon MV equivalent Multi-viscosity 200	
Cleanliness level, mir	nimum 15/13	
Water content, maxim	um 200 ppm	
•		

Chevron Rykon MV oil is fully compatible and mixable with Shell Donax TG (Dexron III) oils.

Genie specifications require hydraulic oils which are designed to give maximum protection to hydraulic systems, have the ability to perform over a wide temperature range, and have a minimum viscosity index rating greater than 140. They should provide excellent antiwear, oxidation, corrosion inhibition, seal conditioning, and foam and aeration suppression properties.

Optional fluids	
Biodegradable	Petro Canada Environ MV46 Statoil Hydra Way Bio Pa 32 BP Biohyd SE-S
Fire resistant	UCON Hydrolube HP-5046 Quintolubric 822
Mineral based	Shell Tellus T32 Shell Tellus T46 Chevron Aviation A

Note: Use Chevron Aviation A hydraulic oil when in ambient temperatures consistently below 0°F/-17°C.

Note: Use Shell Tellus T46 hydraulic oil when oil temperatures consistently exceed 205°F / 96°C.

Note: Genie specifications require additional equipment and special installation instructions for the approved optional fluids. Consult the Genie Service Department before use.

Drive pump	
Type: bi-directional variable displace	ment piston pump
Flow rate @ 2300 rpm	30.3 gpm 114.7 L/min
Drive pressure, maximum	4200 psi 290 bar
Charge pump	
Type:	gerotor
Displacement	0.85 cu in 13.9 cc
Flow rate @ 2300 rpm	8 gpm 30.3 L/min
Charge pressure @ 2300 rpm Neutral position	320 psi 22 bar
Function pump	
Type: two-section to	andem gear pump
Displacement - Pump 1 (inner)	1.4 cu in 22.9 cc
Flow rate @ 2300 rpm	12.7 gpm 48 L/min
Displacement - Pump 2 (outer)	0.24 cu in 4 cc
Flow rate @ 2300 rpm	2.25 gpm 8.5 L/min
Auxiliary pump	
Type: fixed displace	ement gear pump
Displacement - static	0.151 cu in 2.47 cc

Function manifold	
System relief pressure (measured at PTEST port)	2900 psi 200 bar
Boom down relief pressure (measured at PTEST port)	2100 psi 145 bar
Boom extend (measured at PTEST port)	2500 psi 172 bar
Steer/axle extend flow regulator	3.5 gpm 13.2 L/min
Oscillate relief pressure	850 psi 58.6 bar
Drive manifold	
Hot oil relief pressure	280 psi 19.3 bar
Brakes	
Brake release pressure	310 psi 21.4 bar
Drive motors	
Displacement per revolution, var (2 speed motor)	iable 0.9 to 2.7 cu in 14.7 to 45 cc
Hydraulic filters	
High pressure filter	Beta 3 ≥ 200
High pressure filter bypass pressure	102 psi 7 bar
Medium pressure filter	Beta 3 ≥ 200
Medium pressure filter bypass pressure	51 psi 3.5 bar
Hydraulic tank return filter	10 micron with 25 psi / 1.7 bar bypass

Manifold Component Specifications

Plug torque	
SAE No. 2	50 in-lbs / 6 Nm
SAE No. 4	14 ft-lbs / 18.9 Nm
SAE No. 6	23 ft-lbs / 31.2 Nm
SAE No. 8	36 ft-lbs / 48.8 Nm
SAE No. 10	62 ft-lbs / 84.1 Nm
SAE No. 12	84 ft-lbs / 113.9 Nm

Valve coil resistance specifications	
Proportional solenoid valve (schematic items K, W and CC)	4 to 6Ω
2 position 3 way solenoid valve (schematic items D, R, X, TT and UU)	5.5 to 7Ω
3 position 4 way solenoid valve (schematic items A, E, N and S)	5 to 7Ω
2 position 3 way solenoid valve (schematic items KK, MM, VV and WW)	5.5 to 7Ω
2 position 3 way solenoid valve (schematic item G)	3.5 to 5Ω

GM 3.0L EFI Engine

•	
Displacement	181 cu in 3 liters
Number of cylinders	4
Bore & stroke	4 x 3.6 inches 101.6 x 91.44 mm
Horsepower Intermittent Continuous Intermittent	67 @ 2300 rpm 60 @ 2300 rpm 50 kW @ 2300 rpm
Continuous	45 kW @ 2300 rpm
Firing order	1 - 3 - 4 - 2
Lowidle	1650 rpm 386.1 Hz
High idle	2300 rpm 538.2 Hz
Compression ratio	9.25:1
Compression pressure - minim Pressure (psi or bar) of lowest c must be at least 75% of highest	ylinder 6.9 bar
Valve clearances	Zero lash + 1 full turn
Lubrication system	
Oil pressure - minimum (operating temp. @ 2000 rpm)	18 psi 1.24 bar
Oil capacity (including filter)	5 quarts 4.7 liters
Oil viscosity requirements	
Extreme operating temperatures alternative engine oil. For oil requencine Operator Handbook on y	uirements, refer to the
Fuel requirement	

For fuel requirements, refer to the engine Operator's

Manual on your machine.

Starter motor	
Normal engine cranking speed	350 rpm
Current draw, normal load	400A
Current draw, maximum load	600A
Current draw, minimum	100A
Batteries	
Туре	12V DC
Group	31
Size	13 x 6 ¹³ / ₁₆ x 9 ³ / ₈ inches 33 x 17.3 x 23.8 cm
Quantity	1
Cold cranking ampere	1000A
Reserve capacity @ 25A rate	200 minutes
Electronic fuel pump	
Fuel pressure, static	9 to 11 psi 0.6 to 0.76 bar
Fuel flow rate	0.3 gpm 1.14 L/min
Ignition system	
Spark plug type	AC ACMR-43-LTS
Spark plug gap	0.040 inches 1.01 mm
Engine coolant	
Capacity	12 quarts 11.4 liters
Alternator	
Output	66A, 12V DC
Fan belt deflection	¹ / ₂ inch 12 mm

Continuous improvement of our products is a Genie policy. Product specifications are subject to change without notice.

Genîe

Deutz F4L-913 Engine

	•
Displacement	249.3 cu in
	4.085 liters
Number of cylinders	4
Bore and stroke	4.02 x 4.92 inches 102.1 x 125 mm
Horsepower	76 @ 2300 rpm 57 kW @ 2300 rpm
Firing order	1 - 3 - 4 - 2
Compression ratio	18:1
Compression pressure Pressure (psi or bar) of the lo least 75% of the highest cylin	
Low idle - no load	1300 rpm 385.7 Hz
High idle - no load	2300 rpm 570.4 Hz
Valve clearance, cold	
Intake	0.006 in 0.15 mm
Exhaust	0.006 in 0.15 mm
Lubrication system	
Oil pressure	40 to 60 psi 2.75 to 4.14 bar
Oil capacity (including filter)	14.3 quarts 13.5 liters
Oil viscosity requirements	
Units ship with 15W-40. Extreme operating temperatural ternative engine oil. For oil	requirements, refer to the

Engine Operator Handbook on your machine.

Injection system	
Injection pump make	IMSA
Injection pump pressure	8702 psi 600 bar
Injector opening pressure	3626 psi 250 bar
Fuel requirement	
For fuel requirements, refer to Manual on your machine.	the engine Operator's
Batteries	
Туре	12V DC
Group	31
Size	13 x 6 ¹³ / ₁₆ x 9 ³ / ₈ inches 33 x 17.3 x 23.8 cm
Quantity	1
Cold cranking ampere	1000A
Reserve capacity @ 25A rate	200 minutes
Alternator	55A, 12V DC
Fan belt deflection	³ /8 to ¹ /2 inch 9 to 12 mm

Continuous improvement of our products is a Genie policy. Product specifications are subject to change without notice.

Genîe

Perkins 704-30 Engine

Displacement	183 cu in 3 liters
Number of cylinders	4
Bore and stroke	3.82 x 3.94 inches 97 x 100 mm
Horsepower	61 @ 2300 rpm 45 kW @ 2300 rpm
Firing order	1 - 3 - 4 - 2
Compression ratio	17.5:1
Compression pressure	300 to 500 psi 20.7 to 34.5 bar
Pressure (psi or bar) of lowes within 50 psi / 3.45 bar of high	
Lowidle	1600 rpm 246.7 Hz
Highidle	2500 rpm 385.4 Hz
Governor	centrifugal mechanical
Valve clearance, cold	
Intake	0.014 in 0.35 mm
Exhaust	0.014 in 0.35 mm
Lubrication system	
Oil pressure (at 2300 rpm)	41 psi 2.8 bar
Oil capacity (including filter)	7.4 quarts 7 liters
Oil viscosity requirements	
Units ship with 15W-40. Extreme operating temperatural alternative engine oil. For oil reference operator Handbook o	requirements, refer to the

Injection system	
Injection pump make	Zexel PFR-KX
Injection pump pressure	2755 ps 190 ba
Injector opening pressure	3626 ps 250 ba
Fuel requirement	
For fuel requirements, refer to Manual on your machine.	the engine Operator's
Engine coolant	
Capacity	11.5 quarts 10.9 liters
Batteries	
Туре	12V DC
Group	31
Size	13 x 6 ¹³ / ₁₆ x 9 ³ / ₈ inches 33 x 17.3 x 23.8 cm
Quantity	1
Cold cranking ampere	1000A
Reserve capacity @ 25A rate	200 minutes
Alternator	65A, 12V DC
Fan belt deflection	³ /8 in 10 mm

Machine Torque Specifications

Platform rotator			
1-8 center bolt, Gr 5, dry	640 ft-lbs 867 Nn		
3/8 -16 bolts, Gr 8, lubricated *(use blue thread locking compound)	35 ft-lbs* 57 Nm		
Turntable rotate assembly			
Rotate bearing mounting bolts, lubricated	180 ft-lbs 244 Nm		
Rotate drive hub mounting bolts, dry	110 ft-lbs 149 Nm		
Rotate drive hub mounting bolts, lubricated	80 ft-lbs 108 Nm		
Backlash plate mounting bolts, dry	280 ft-lbs 379 Nm		
Drive motor and hubs			
Drive hub mounting bolts, dry	247 ft-lbs 335 Nm		
Drive hub mounting bolts, lubricated *(use blue thread locking compound)	185 ft-lbs* 251 Nm		
Drive motor mounting bolts, dry	110 ft-lbs 149 Nm		
Drive motor mounting bolts, lubricated	80 ft-lbs 108 Nm		

Hydraulic Hose and Fitting Torque Specifications

Your machine is equipped with Parker Seal-Lok® fittings and hose ends. Genie specifications require that fittings and hose ends be torqued to specification when they are removed and installed or when new hoses or fittings are installed.

SAE O-ring Boss Port

(tube fitting - installed into Aluminum)

SAE Dash size	Torque
-4	14 ft-lbs / 18.9 Nm
-6	23 ft-lbs / 31.2 Nm
-8	36 ft-lbs / 48.8 Nm
-10	62 ft-lbs / 84.1 Nm
-12	84 ft-lbs / 113.9 Nm
-16	125 ft-lbs / 169.5 Nm
-20	151 ft-lbs / 204.7 Nm
-24	184 ft-lbs / 250 Nm

SAE O-ring Boss Port

(tube fitting - installed into Steel)

SAE Dash size	Torque
-4	15 ft-lbs / 20.3 Nm
-6	35 ft-lbs / 47.5 Nm
-8	60 ft-lbs / 81.3 Nm
-10	100 ft-lbs / 135.6 Nm
-12	135 ft-lbs / 183 Nm
-16	200 ft-lbs / 271 Nm
-20	250 ft-lbs / 334 Nm
-24	305 ft-lbs / 414 Nm
	•

Seal-Lok® fittings

1 Replace the O-ring. The O-ring must be replaced anytime the seal has been broken. The O-ring cannot be re-used if the fitting or hose end has been tightened beyond finger tight.

NOTICE

The O-rings used in the Parker Seal Lok® fittings and hose ends are custom-size O-rings. They are not standard SAE size O-rings. They are available in the O-ring field service kit (Genie part number 49612).

- 2 Lubricate the O-ring before installation.
- 3 Be sure that the face seal O-ring is seated and retained properly.
- 4 Position the tube and nut squarely on the face seal end of the fitting and tighten the nut finger tight.
- 5 Tighten the nut or fitting to the appropriate torque per given size as shown in the table.
- 6 Operate all machine functions and inspect the hoses and fittings and related components to confirm that there are no leaks.

Seal-Lok® Fittings

(hose end)

SAE Dash size	Torque
-4	18 ft-lbs / 24.4 Nm
-6	30 ft-lbs / 40 Nm
-8	40 ft-lbs / 55 Nm
-10	60 ft-lbs / 80 Nm
-12	85 ft-lbs / 115 Nm
-16	110 ft-lbs / 150 Nm
-20	140 ft-lbs / 190 Nm
-24	180 ft-lbs / 245 Nm

SAE FASTENER TORQUE CHART • This chart is to be used as a guide only unless noted elsewhere in this manual •												
SIZE	THREAD		Gra	de 5	?)	Grade 8				A574 High Strength Black Oxide Bolts		
		LUI	BED	DI	RY	LU	LUBED DRY			LUBED		
		in-lbs	N m	in-lbs	N m	in-lbs	N m	in-lbs	N m	in-lbs	Nm	
1/4	20	80	9	100	11.3	110	12.4	140	15.8	130	14.7	
	28	90	10.1	120	13.5	120	13.5	160	18	140	15.8	
		LUI	BED	DI	RY	LUI	BED	DI	RY	LU	BED	
		ft-lbs	N m	ft-lbs	N m	ft-lbs	N m	ft-lbs	N m	ft-lbs	Nm	
5/16	18	13	17.6	17	23	18	24	25	33.9	21	28.4	
3/10	24	14	19	19	25.7	20	27.1	27	36.6	24	32.5	
3/8	16	23	31.2	31	42	33	44.7	44	59.6	38	51.5	
3/0	24	26	35.2	35	47.4	37	50.1	49	66.4	43	58.3	
7/16	14	37	50.1	49	66.4	50	67.8	70	94.7	61	82.7	
.,	20	41	55.5	55	74.5	60	81.3	80	108.4	68	92.1	
1/2	13	57	77.3	75	101.6	80	108.4	110	149	93	126	
	20	64	86.7	85	115	90	122	120	162	105	142	
9/16	12	80	108.4	110	149	120	162	150	203	130	176	
	18	90	122	120	162	130	176	170	230	140	189	
5/8	11	110	149	150	203	160	217	210	284	180	244	
	18	130	176	170	230	180	244	240	325	200	271	
3/4	10	200	271	270	366	280	379	380	515	320	433	
	16	220	298	300	406	310	420	420	569	350	474	
7/8	9	320	433	430	583	450	610	610	827	510	691	
	14	350	474	470	637	500	678	670	908	560	759	
1	8	480	650	640	867	680	922	910	1233	770	1044	
	12	530	718	710	962	750	1016	990	1342	840	1139	
1 ¹ / ₈	7	590	800	790	1071	970	1315	1290	1749	1090	1477	
	12	670	908	890	1206	1080	1464	1440	1952	1220	1654	
1 ¹ / ₄	7	840	1138	1120	1518	1360	1844	1820	2467 2725	1530 1700	2074 2304	
	12 6	930 1460	1260 1979	1240 1950	1681 2643	1510 2370	2047 3213	2010 3160	4284	2670	2304 3620	
1 ¹ / ₂	12				0.0							
	12	1640	2223	2190	2969	2670	3620	3560	4826	3000	4067	

	METRIC FASTENER TORQUE CHART • This chart is to be used as a guide only unless noted elsewhere in this manual •															
Size	ize Class 4.6 (4.6)						ss 8.8 (8.8) Class 10.9 (10.9)			10.9	Class 12.9 (12.9)					
(mm)	LUE	3ED	DF	₹Y	LU	BED	DF	RY	LUE	BED	DF	₹Y	LUE	3ED	DF	₹Y
	in-lbs	Nm	in-lbs	Nm	in-lbs	Nm	in-lbs	Nm	in-lbs	Nm	in-lbs	Nm	in-lbs	Nm	in-lbs	Nm
5	16	1.8	21	2.4	41	4.63	54	6.18	58	6.63	78	8.84	68	7.75	91	10.3
6	19	3.05	36	4.07	69	7.87	93	10.5	100	11.3	132	15	116	13.2	155	17.6
7	45	5.12	60	6.83	116	13.2	155	17.6	167	18.9	223	25.2	1.95	22.1	260	29.4
	LUBED DRY		LUBED		DRY		LUBED		D DRY		LUBED		DRY			
	LUE	SED	ᅵᅡ	KT	LO	SED	ᆝ	KY.	LU	SED	Di-	T Y	LO	SED	Di-	KY
	ft-lbs	N m	ft-lbs	Nm	ft-lbs	N m	ft-lbs	N m	ft-lbs	SED N m	ft-lbs	N m	ft-lbs	N m	ft-lbs	Nm
8																
8 10	ft-lbs	Nm	ft-lbs	Nm	ft-lbs	Nm	ft-lbs	Nm	ft-lbs	Nm	ft-lbs	Nm	ft-lbs	Nm	ft-lbs	Nm
	ft-lbs 5.4	N m 7.41	ft-lbs 7.2	N m 9.88	ft-lbs 14	N m	ft-lbs 18.8	N m 25.5	ft-lbs 20.1	N m 27.3	ft-lbs 26.9	N m 36.5	ft-lbs 23.6	N m	ft-lbs 31.4	Nm 42.6
10	ft-lbs 5.4 10.8	N m 7.41 14.7	7.2 14.4	9.88 19.6	ft-lbs 14 27.9	N m 19.1 37.8	ft-lbs 18.8 37.2	N m 25.5 50.5	ft-lbs 20.1 39.9	N m 27.3 54.1	ft-lbs 26.9 53.2	N m 36.5 72.2	ft-lbs 23.6 46.7	N m 32 63.3	ft-lbs 31.4 62.3	Nm 42.6 84.4
10	ft-lbs 5.4 10.8 18.9	N m 7.41 14.7 25.6	ft-lbs 7.2 14.4 25.1	9.88 19.6 34.1	ft-lbs 14 27.9 48.6	N m 19.1 37.8 66	ft-lbs 18.8 37.2 64.9	Nm 25.5 50.5 88	ft-lbs 20.1 39.9 69.7	Nm 27.3 54.1 94.5	ft-lbs 26.9 53.2 92.2	N m 36.5 72.2 125	ft-lbs 23.6 46.7 81	N m 32 63.3 110	ft-lbs 31.4 62.3 108	Nm 42.6 84.4 147
10 12 14	5.4 10.8 18.9 30.1	N m 7.41 14.7 25.6 40.8	ft-lbs 7.2 14.4 25.1 40	9.88 19.6 34.1 54.3	ft-lbs 14 27.9 48.6 77.4	N m 19.1 37.8 66 105	ft-lbs 18.8 37.2 64.9 103	N m 25.5 50.5 88 140	ft-lbs 20.1 39.9 69.7 110	Nm 27.3 54.1 94.5 150	ft-lbs 26.9 53.2 92.2 147	N m 36.5 72.2 125 200	ft-lbs 23.6 46.7 81 129	N m 32 63.3 110 175	ft-lbs 31.4 62.3 108 172	Nm 42.6 84.4 147 234
10 12 14 16	5.4 10.8 18.9 30.1 46.9	Nm 7.41 14.7 25.6 40.8 63.6	7.2 14.4 25.1 40 62.5	9.88 19.6 34.1 54.3 84.8	ft-lbs 14 27.9 48.6 77.4 125	Nm 19.1 37.8 66 105 170	ft-lbs 18.8 37.2 64.9 103 166	N m 25.5 50.5 88 140 226	ft-lbs 20.1 39.9 69.7 110 173	Nm 27.3 54.1 94.5 150 235	ft-lbs 26.9 53.2 92.2 147 230	Nm 36.5 72.2 125 200 313	ft-lbs 23.6 46.7 81 129 202	Nm 32 63.3 110 175 274	ft-lbs 31.4 62.3 108 172 269	Nm 42.6 84.4 147 234 365
10 12 14 16 18	ft-lbs 5.4 10.8 18.9 30.1 46.9 64.5	Nm 7.41 14.7 25.6 40.8 63.6 87.5	7.2 14.4 25.1 40 62.5 86.2	9.88 19.6 34.1 54.3 84.8 117	ft-lbs 14 27.9 48.6 77.4 125 171	Nm 19.1 37.8 66 105 170 233	ft-lbs 18.8 37.2 64.9 103 166 229	N m 25.5 50.5 88 140 226 311	ft-lbs 20.1 39.9 69.7 110 173 238	N m 27.3 54.1 94.5 150 235 323	ft-lbs 26.9 53.2 92.2 147 230 317	N m 36.5 72.2 125 200 313 430	ft-lbs 23.6 46.7 81 129 202 278	Nm 32 63.3 110 175 274 377	ft-lbs 31.4 62.3 108 172 269 371	Nm 42.6 84.4 147 234 365 503



This page intentionally left blank.

Scheduled Maintenance Procedures



Observe and Obey:

- ☑ Maintenance inspections shall be completed by a person trained and qualified on the maintenance of this machine.
- ☑ Scheduled maintenance inspections shall be completed daily, quarterly, six months, annually and every two years as specified on the Maintenance Inspection Report. The frequency and extent of periodic examinations and tests may also depend on national regulations.

AWARNING Failure to perform each procedure as presented and scheduled could result in death, serious injury or substantial machine damage.

- ☑ Immediately tag and remove from service a damaged or malfunctioning machine.
- ☑ Repair any machine damage or malfunction before operating machine.
- ☑ Unless otherwise specified, perform each procedure with the machine in the following configuration:
 - Machine parked on a firm, level surface
 - · Boom in the stowed position
 - Turntable rotated with the boom between the circle-end (yellow arrow) wheels
 - · Turntable secured with the turntable rotation lock pin
 - · Key switch in the off position with the key removed
 - Wheels chocked
 - · All external AC power supply disconnected from the machine

About This Section

This section contains detailed procedures for each scheduled maintenance inspection.

Each procedure includes a description, safety warnings and step-by-step instructions.

Symbols Legend



Safety alert symbol—used to alert personnel to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

A DANGER

Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

AWARNING

Indicates a potentially hazardous situation which, if not avoided. could result in death or serious injury.

ACAUTION

Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.

Indicates potentially hazardous situation which, if not avoided, may result in property damage.

- O Indicates that a specific result is expected after performing a series of steps.
- M Indicates that an incorrect result has occurred after performing a series of steps.

SCHEDULED MAINTENANCE PROCEDURES

Maintenance Symbols Legend

Note: The following symbols have been used in this manual to help communicate the intent of the instructions. When one or more of the symbols appear at the beginning of a maintenance procedure, it conveys the meaning below.



Indicates that tools will be required to perform this procedure.



Indicates that new parts will be required to perform this procedure.



Indicates that a cold engine will be required to perform this procedure.



Indicates that a warm engine will be required to perform this procedure.



Indicates that dealer service is required to perform this procedure.

Pre-delivery Preparation Report

The pre-delivery preparation report contains checklists for each type of scheduled inspection.

Make copies of the *Pre-delivery Preparation Report* to use for each inspection. Store completed forms as required.

Maintenance Schedule

There are five types of maintenance inspections that must be performed according to a schedule—daily, quarterly, six months, annual, and two year. To account for repeated procedures, the Scheduled Maintenance Procedures Section and the Maintenance Inspection Report have been divided into five subsections—A, B, C, D and E. Use the following chart to determine which group(s) of procedures are required to perform a scheduled inspection.

Inspection	Checklist
Daily or every 8 hours	A
Quarterly or every 250 hours	A + B
Six month or every 500 hours	A + B + C
Annual or every 1000 hours	A + B + C + D
Two year or every 2000 hours	A + B + C + D + E

Maintenance Inspection Report

The maintenance inspection report contains checklists for each type of scheduled inspection.

Make copies of the *Maintenance Inspection Report* to use for each inspection. Maintain completed forms for a minimum of 4 years or in compliance with your employer, jobsite and governmental regulations and requirements.

Pre-Delivery Preparation

Fundamentals

It is the responsibility of the dealer to perform the Pre-delivery Preparation.

The Pre-delivery Preparation is performed prior to each delivery. The inspection is designed to discover if anything is apparently wrong with a machine before it is put into service.

A damaged or modified machine must never be used. If damage or any variation from factory delivered condition is discovered, the machine must be tagged and removed from service.

Repairs to the machine may only be made by a qualified service technician, according to the manufacturer's specifications.

Scheduled maintenance inspections shall be performed by qualified service technicians, according to the manufacturer's specifications and the requirements listed in the responsibilities manual.

Instructions

Make copies of this form to use for each Pre-Delivery Preparation.

Use the operator's manual on your machine.

The Pre-delivery Preparation consists of completing the Pre-operation Inspection, the Maintenance items and the Function Tests.

Use this form to record the results. Place a check in the appropriate box after each part is completed. Follow the instructions in the operator's manual.

If any inspection receives an N, remove the machine from service, repair and re-inspect it. After repair, place a check in the R box.

Legend

Y = yes, completed

N = no, unable to complete

R = repaired

Inspector company

Comments

Pre-Delivery Preparation	Y	N	R
Pre-operation inspection completed			
Maintenance items completed			
Function tests completed			

Model
Serial number
Date
Machine owner
Inspected by (print)
Inspector signature
Inspector title



Terex South Dakota, Inc USA 500 Oak Wood Road PO Box 1150 Watertown, SD 57201-6150 (605) 882-4000 Genie UK The Maltings, Wharf Road Grantham, Lincolnshire NG31-6BH England (44) 1476-584333



This page intentionally left blank.

Maintenance Inspection Report

Model	Checklist A Y N F
Serial number	A-1 Pre-operation inspection
Date	A-2 Function tests
	A-3 Engine maintenance
Hour meter	A-4 Filter condition indicator
Machine owner	A-5 Oscillate axle
Machine Owner	A-6 Extendable axles
Inspected by (print)	Perform after 40 hours:
	A-7 30 day service
Inspector signature	Perform after 50 hours:
Inspector title	A-8 Engine maintenance - Deutz models
Inspector company	Perform every 100 hours:
Instructions	A-9 Inspect filter/separator - Diesel models
Make copies of this report to use for each inspection. Diese models A-10 Grease rotation bearing	
• Select the appropriate checklist(s) for	A-11 Engine maintenance
the type of inspection to be performed.	Perform after 125 hours:
Daily or 8 hour	A-12 Engine maintenance - Deutz models
Inspection: A	Perform after 150 hours:
Quarterly or 250 hour	A-13 Replace drive hub oil
Inspection: A+B	Perform every 200 hours:
Six Month or 500 hour Inspection: A+B+C	A-14 Engine maintenance - GM and Perkins
Annual or 1000 hour Inspection: A+B+C+D	models
2 Year or 2000 hour Inspection: A+B+C+D+E	

Chec	klist B	Υ	N	R
B-1	Battery(s)			
B-2	Electrical wiring			
B-3	Key switch			
B-4	Exhaust system			
B-5	Engine air filter			
B-6	Oil cooler and fins-			
	Deutz models			
B-7	Brake configuration			
B-8	Tires, wheels and lug nut torque			
B-9	Drive hub maintenance			
B-10	Engine RPM			
B-11	Engine maintenance			
B-12	Oscillate directional Control			
B-13	Ground control override			
B-14	Platform self-leveling			
B-15	Engine idle select			
B-16	Fuel select operation			
B-17	Drive enable system			
B-18	Drive brakes			
B-19	Drive speed-stowed			
B-20	Drive speed-raised or extended			
B-21	Alarm package			
B-22	Fuel and hydraulic tank venting systems			
B-23	Hydraulic oil analysis			
Perfo	orm every 400 hours:			_

B-24 Engine maintenance -

GM models

- Place a check in the appropriate box after each inspection procedure is completed.
- Use the step-by-step procedures in this section to learn how to perform these inspections.
- If any inspection receives an "N", tag and remove the machine from service, repair and re-inspect it. After repair, place a check in the "R" box.

Legend

Y = yes, acceptable

N = no, remove from service

R = repaired

Co	nm	m	ei	nts

	_	
	r et	1117
•	_	шч

MAINTENANCE INSPECTION REPORT

Instructions

- Make copies of this report to use for each inspection.
- Select the appropriate checklist(s) for the type of inspection to be performed.

Daily or 8 hour Inspection:	А
Quarterly or 250 Inspection:) hour A+B
Six Month or 5 Inspection:	500 hour A+B+C
Annual or 1000 Inspection:	hour A+B+C+D
2 Year or 2000 h Inspection:	nour A+B+C+D+E

- Place a check in the appropriate box after each inspection procedure is completed.
- Use the step-by-step procedures in this section to learn how to perform these inspections.
- If any inspection receives an "N", tag and remove the machine from service, repair and re-inspect it. After repair, place a check in the "R" box.

Legend

Y = yes, acceptable

N = no, remove from service

R = repaired

Che	cklist C	Υ	Ν	R
C-1	Engine maintenance - Deutz and Perkins models			
C-2	Grease platform overload (if equipped)			
C-3	Test the platform overload (if equipped)			
C-4	Air filter element			
C-5	Replace filter/separator - Deutz and Perkins models			
Dorf	orm every 800 hours:			

Perform every 800 hours:

C-6	Engine maintenance -		
	GM models		

Che	cklist D	Υ	N	R
D-1	Boom wear pads			
D-2	Axle wear pads			
D-3	Free-wheel configuration			
D-4	Turntable rotation bearing bolts			
D-5	Turntable bearing wear			
D-6	Engine maintenance - Deutz and Perkins models			
D-7	Replace hydraulic filters			
D-8	Drive hub oil			

Perform every 1500 hours:

D-9	Engine maintenance -		
	Deutz models		

Che	cklist E	Υ	N	R
E-1	Hydraulic oil			
E-2	Engine maintenance - Perkins models			
E-3	Grease axle bearings, 2WD models			

Perform every 3000 hours:

E-4	Engine maintenance - Deutz and Perkins models		
		_	_

Comments

Checklist A Procedures

A-1 Perform Pre-operation Inspection

Completing a pre-operation inspection is essential to safe machine operation. The pre-operation inspection is a visual inspection performed by the operator prior to each work shift. The inspection is designed to discover if anything is apparently wrong with a machine before the operator performs the function tests. The pre-operation inspection also serves to determine if routine maintenance procedures are required.

Complete information to perform this procedure is available in the Operator's Manual on your machine.

A-2 Perform Function Tests

Completing the function tests is essential to safe machine operation. Function tests are designed to discover any malfunctions before the machine is put into service. A malfunctioning machine must never be used. If malfunctions are discovered, the machine must be tagged and removed from service.

Complete information to perform this procedure is available in the Operator's Manual on your machine.

CHECKLIST A PROCEDURES

A-3 Perform Engine Maintenance





Note: Engine specifications require that this procedure be performed daily or every 8 hours, whichever comes first.

Proper engine maintenance, following the engine manufacturer's maintenance schedule, is essential to good engine performance and service life. Failure to perform the maintenance procedures can lead to poor engine performance and component damage.

Required maintenance procedures and additional engine information are available in the: Deutz 913 Operator Handbook (Deutz part number 0297 7341) OR the GM 3.0L Operator Handbook (GM part number 36100007) OR the Perkins 704-30 Operator Handbook (Perkins part number TPD 1336E).

Deutz 913 Operator Handbook Genie part number	62446
GM 3.0L Operator Handbook Genie part number	101095
Perkins 704-30 Operator Handbook Genie part number	101840

To access the engine:

1 Remove the engine tray retaining fastener located under the engine tray. Swing the engine tray out away from the machine and secure it from moving.



AWARNING Crushing hazard. Failure to install the fastener into the engine tray anchor hole to secure the engine tray from moving could result in death or serious injury.


A-4 Check the Hydraulic Filter Condition Indicators

Note: Genie specifications require that this procedure be performed daily or every 8 hours, whichever comes first.

Maintaining the hydraulic filters in good condition is essential to good system performance and safe machine operation. The filter condition indicators will show when the hydraulic flow is bypassing a clogged filter. If the filters are not frequently checked and replaced, impurities will remain in the hydraulic system and cause component damage.

Note: There are three hydraulic filters located on the machine: one tank return filter, one medium pressure filter and one high pressure filter. The tank return and high pressure filter have a condition indicator on them. The medium pressure filter does not have a filter condition indicator.

- 1 Start the engine from the platform controls.
- 2 Change the engine idle to high rpm (rabbit symbol).

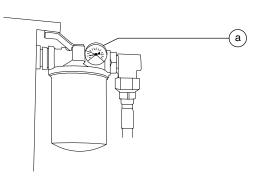

a filter condition indicator gauge

Tank Return Filter

- 3 Open the ground control side turntable cover and inspect the filter condition indicator gauge.
- Result: The needle on the gauge should be operating in the green area.
- Result: If the needle is in the red area, this indicates that the hydraulic filter is being bypassed and the filter should be replaced. See D-7, Replace the Hydraulic Filter Elements.

High Pressure Filter

Note: The high pressure filter is located to the left of the medium pressure filter below the hydraulic pumps. A filter condition indicator is located on the top of the high pressure filter.

- 4 Open the engine side turntable cover and Inspect the filter condition indicator.
- Result: The filter condition indicators should be operating with the plungers in the green area.
- Result: If the indicator displays the plunger in the red area, this indicates that the hydraulic filter is being bypassed and the filter should be replaced. See D-7, Replace the Hydraulic Filter Elements.

A-5 Test the Oscillate Axle



Note: Genie specifications require that this procedure be performed daily or every 8 hours, whichever comes first.

Proper axle oscillation is essential to safe machine operation. If the axle oscillation system is not operating correctly, the stability of the machine is compromised and it may tip over.

Note: Tip-over hazard. Failure to perform this procedure on a firm, level surface will compromise the stability of the machine and could result in the machine tipping over.

- 1 Start the engine from the platform controls.
- 2 Drive the right steer tire up onto a 6 inch / 15 cm block or curb.
- Result: The three remaining tires should stay in firm contact with the ground and the chassis should remain level at all times.
- 3 Drive the left steer tire up onto a 6 inch / 15 cm block or curb.
- Result: The three remaining tires should stay in firm contact with the ground and the chassis should remain level at all times.
- 4 Drive both steer tires up onto a 6 inch / 15 cm block or curb.
- Result: The non-steer tires should stay in firm contact with the ground.

Note: If the chassis does not remain level during the test, refer to Repair Procedure 15-2, *How to Set Up the Directional Valve Linkage.*

A-6 Test the Extendable Axles

Note: Genie specifications require that this procedure be performed daily or every 8 hours, whichever comes first.

Note: Tip-over hazard. Do not raise or extend the boom unless both axles are fully extended. If the axle extension system is not operating correctly, the stability of the machine is compromised and it may tip over.

Note: Be sure the axles are retracted before performing this procedure.

- 1 Turn the key switch to ground control and pull out the red Emergency Stop buttons to the on position at both the ground and platform controls.
- 2 Start the engine from the ground controls.
- 3 Move and hold the function enable switch to either side and activate the boom up function.
- Result: The boom should raise to horizontal and then stop. The boom should not raise above the limit switch unless both axles are extended.
- 4 Move and hold the function enable switch to either side and activate the boom down function.
- Result: The boom should lower and return to the stowed position.
- 5 Move and hold the function enable switch to either side and activate the boom extend function.
- Result: The boom will extend approximately 1 foot / 30 cm and then stop. The boom should not extend farther unless both axles are extended.

- 6 Move and hold the function enable switch to either side and activate the boom retract function.
- Result: The boom should retract.
- 7 Turn the key switch to platform controls.
- 8 Press down the foot switch and move the drive control handle in the forward direction and activate the axle extend function.
- Result: The machine will drive forward and the axles should extend.

Note: The axle extend function will only work while the machine is moving.

Note: The steer function will override the axle extend or the axle retract function.

- 9 Turn the key switch to ground controls.
- 10 At the ground controls, hold the function enable switch to either side and activate the boom up and boom down function.
- Result: The boom should raise and lower normally.
- 11 At the ground controls, move and hold the function enable switch to either side and activate the boom extend and boom retract function.
- Result: The boom should extend and retract normally.

A-7 Perform 30 Day Service







The 30 day maintenance procedure is a one time sequence of procedures to be performed after the first 30 days or 40 hours of usage, whichever comes first. After this interval, refer to the maintenance tables for continued scheduled maintenance.

- 1 Perform the following maintenance procedures:
 - A-3 Perform Engine Maintenance -All Models
 - A-10 Grease the Turntable Bearing and Rotate Gear
 - B-8 Inspect the Tires, Wheels and Lug Nut Torque
 - B-9 Check the Drive Hub Oil Level and Fastener Torque
 - D-4 Check the Turnable Rotation Bearing Bolts
 - D-7 Replace the Hydraulic Filter Elements

A-8 Perform Engine Maintenance -Deutz Models





Note: Engine specifications require that this procedure be performed after 50 hours of operation.

Proper engine maintenance, following the engine manufacturer's maintenance schedule, is essential to good engine performance and service life. Failure to perform the maintenance procedures can lead to poor engine performance and component damage.

Required maintenance procedures for commissioning new and overhauled engines and additional engine information are available in the Deutz 913 Operator Handbook (Deutz part number 0297 7341).

Deutz 913 Operator Handbook

Genie part number

62446

To access the engine:

1 Remove the engine tray retaining fastener located under the engine tray. Swing the engine tray out away from the machine and secure it from moving.



Crushing hazard. Failure to install the fastener into the engine tray anchor hole to secure the engine tray from moving could result in death or serious injury.

A-9 Inspect the Fuel Filter/Water

Separator - Deutz and Perkins Models





Note: Genie specifications require that this procedure be performed every 100 hours or monthly, whichever comes first.


Proper maintenance of the fuel filter/water separator is essential for good engine performance. Failure to perform this procedure can lead to poor engine performance and/or hard starting, and continued use may result in component damge. Extremely dirty conditions may require this procedure be performed more often.



Explosion and fire hazard. Engine fuels are combustible. Perform this procedure in an open, wellventilated area away from heaters, sparks, flames and lighted tobacco. Always have an approved fire extinguisher within easy reach.

Note: Perform this procedure with the engine off.

- 1 Open the turntable cover at the engine side of the machine. Locate the fuel filter/water separator.
- 2 Inspect the filter bowl for water.
- Result: Water is not visible in the filter bowl.
- Result: There is water present. Proceed to step 3.
- 3 Loosen the vent plug located on the head of the fuel filter/water separator.

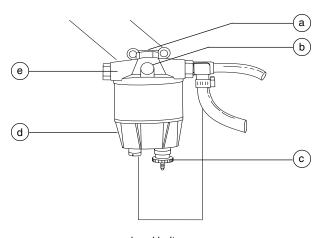

- a head bolt
- b vent plug
- c drain plug
- d filter bowl
- e separator head
- 4 Loosen the drain plug located at the bottom of the bowl. Allow the water to drain into a suitable container until fuel starts to come out. Immediately tighten the drain plug.
- 5 Clean up any fuel that may have spilled.

Note: If the fuel filter/water separator is completely drained, you must prime the fuel filter/water separator before starting the engine. See C-5, Replace The Fuel Filter/Water Separator Element, for instructions on how to prime the fuel filter/water separator.

6 Start the engine from the ground controls and check the fuel filter/water separator and vent plug for leaks.



Explosion and fire hazard. If a fuel leak is discovered, keep any additional personnel from entering the area and do not operate the machine. Repair the leak immediately.

A-10 Grease the Turntable Rotation Bearing and Rotate Gear





Note: Genie specifications require that this procedure be performed every 100 hours of operation. Perform this procedure more often if dusty conditions exist.

Frequent application of lubrication to the turntable bearing and rotate gear is essential to good machine performance and service life. Continued use of an improperly greased bearing and gear will result in component damage.

- 1 Locate the grease fitting on the platform end of the tank side bulkhead.
- 2 Pump grease into the turntable rotation bearing. Rotate the turntable in increments of 4 to 5 inches / 10 to 13 cm at a time and repeat this step until the entire bearing has been greased.
- 3 Apply grease to each tooth of the drive gear, located under the turntable.

Grease Specification

Chevron Ultra-duty grease, EP NLGI 2 (lithium based) or equivalent

Δ-11 **Perform Engine Maintenance**





Note: Engine specifications require that this procedure be performed every 100 hours.

Proper engine maintenance, following the engine manufacturer's maintenance schedule, is essential to good engine performance and service life. Failure to perform the maintenance procedures can lead to poor engine performance and component damage.

Required maintenance procedures and additional engine information are available in the Deutz 913 Operator Handbook (Deutz part number 0297 7341) OR the GM 3.0L Operator Handbook (GM part number 36100007) OR the Perkins 704-30 Operator Handbook (Perkins part number TPD 1336E).

Deutz 913 Operator Handbook	
Genie part number	62446
GM 3.0L Operator Handbook Genie part number	101095
Perkins 704-30 Operator Handbook Genie part number	101840

To access the engine:

1 Remove the engine tray retaining fastener located under the engine tray. Swing the engine tray out away from the machine and secure it from moving.



AWARNING Crushing hazard. Failure to install the fastener into the engine tray anchor hole to secure the engine tray from moving could result in death or serious injury.

A-12 Perform Engine Maintenance -Deutz Models





Note: Engine specifications require that this procedure be performed every 125 hours of operation.

Proper engine maintenance, following the engine manufacturer's maintenance schedule, is essential to good engine performance and service life. Failure to perform the maintenance procedures can lead to poor engine performance and component damage.

Required maintenance procedures and additional engine information are available in the *Deutz 913 Operator Handbook* (Deutz part number 0297 7341).

Deutz 913 Operator Handbook

Genie part number

62446

To access the engine:

1 Remove the engine tray retaining fastener located under the engine tray. Swing the engine tray out away from the machine and secure it from moving.



Crushing hazard. Failure to install the fastener into the engine tray anchor hole to secure the engine tray from moving could result in death or serious injury.

A-13 Replace the Drive Hub Oil






Note: Manufacturer specifications require that this one-time procedure be performed after the first 150 hours.

Replacing the drive hub oil is essential for good machine performance and service life. Failure to replace the drive hub oil after the first 150 hours may cause the machine to perform poorly and continued use may cause component damage.

Drive Hubs:

- Select the drive hub to be serviced. Drive the machine until one of the two plugs is at the lowest point.
- 2 Remove both plugs and drain the oil into a suitable container.
- 3 Drive the machine until one plug is at the top and the other is at 90 degrees.

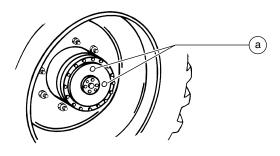

a drive hub plugs

- 4 Fill the hub with oil from the top hole until the oil level is even with the bottom of the side plug hole. Install the plugs.
- 5 Repeat this procedure for each drive hub.

Turntable Rotate Drive Hub:

Note: When removing a hose assembly or fitting, the O-ring on the fitting and/or hose end must be replaced and then torqued to specification during installation. Refer to Section 2, Hydraulic Hose and Fitting Torque Specifications.


1 Secure the turntable from rotating with the turntable rotation lock pin.

Note: The turntable rotation lock pin is located next to the boom rest pad.

- 2 Tag, disconnect and plug the hydraulic hoses from the turntable rotate drive motor. Cap the fittings on the drive motor.
- 3 Attach a suitable lifting device to the lifting eyes located near the drive motor.
- 4 Remove the drive hub mounting bolts. Carefully remove the turntable rotate drive hub assembly from the machine.

AWARNING Crushing hazard. The turntable rotate drive hub assembly could become unbalanced and fall if not properly supported by the lifting device.

5 Remove the plug from the side of the drive hub. Drain the oil from the hub into a suitable container.

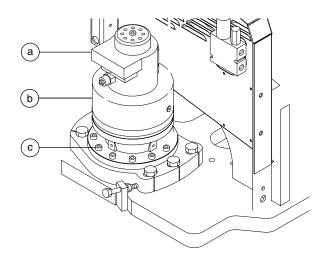

- а motor
- drive hub b
- drive hub mounting bolts
- 6 Install the drive hub assembly onto the machine. Torque the drive hub mounting bolts to specification. Refer to Section 2, Specifications.
- 7 Fill the drive hub with oil from the side plug hole until the oil level is even with the bottom of the hole. Apply pipe thread sealant to the plug. Install the plug.
- 8 Adjust turntable rotation gear backlash. Refer to Repair Procedure 11-1, How to Adjust the Turntable Rotation Gear Backlash.

Δ-14 **Perform Engine Maintenance -GM and Perkins Models**





Note: Engine specifications require that this procedure be performed every 200 hours.

Proper engine maintenance, following the engine manufacturer's maintenance schedule, is essential to good engine performance and service life. Failure to perform the maintenance procedures can lead to poor engine performance and component damage.

Required maintenance procedures and additional engine information are available in the GM 3.0L Operator Handbook (GM part number 36100007) OR the Perkins 704-30 Operator Handbook (Perkins part number TPD 1336E).

GM 3.0L Operator Handbook Genie part number	101095
Perkins 704-30 Operator Handbook Genie part number	101840

To access the engine:

1 Remove the engine tray retaining fastener located under the engine tray. Swing the engine tray out away from the machine and secure it from moving.



AWARNING Crushing hazard. Failure to install the fastener into the engine tray anchor hole to secure the engine tray from moving could result in death or serious injury.

Checklist B Procedures

B-1 Inspect the Battery(s)





Note: Genie specifications require that this procedure be performed every 250 hours or quarterly, whichever comes first.

Proper battery condition is essential to good engine performance and operational safety. Improper fluid levels or damaged cables and connections can result in engine component damage and hazardous conditions. A single battery configuration is standard. A dual battery option is available, where one battery is used to start the engine and the other is used to power the control system and auxiliary power unit. The two batteries are charged by the alternator through a battery separator.

AWARNING Electrocution/burn hazard. Contact with hot or live circuits could result in death or serious injury. Remove all rings, watches and other jewelry.

AWARNING

Bodily injury hazard. Batteries contain acid. Avoid spilling or contacting battery acid. Neutralize battery acid spills with baking soda and water.

- 1 Put on protective clothing and eye wear.
- 2 Be sure that the battery cable connections are free of corrosion.

Note: Adding terminal protectors and a corrosion preventative sealant will help eliminate corrosion on the battery terminals and cables.

- 3 Be sure that the battery hold downs and cable connections are tight.
- 4 Be sure that the battery separator wire connections are tight (if equipped).
- 5 Fully charge the battery(s) and allow the battery(s) to rest at least 6 hours.
- 6 Remove the battery vent caps and check the specific gravity of each battery cell with a hydrometer. Note the results.
- 7 Check the ambient air temperature and adjust the specific gravity reading for each cell as follows:
- Add 0.004 to the reading of each cell for every 10° / 5.5° C above 80° F / 26.7° C.
- Subtract 0.004 from the reading of each cell for every 10° / 5.5° C below 80° F / 26.7° C.
- Result: All battery cells display an adjusted specific gravity of 1.277 or higher. The battery is fully charged. Proceed to step 11.
- Result: One or more battery cells display a specific gravity of 1.217 or below. Proceed to step 8.
- 8 Perform an equalizing charge, OR fully charge the battery(s) and allow the battery(s) to rest at least 6 hours.
- 9 Remove the battery vent caps and check the specific gravity of each battery cell with a hydrometer. Note the results.

- 10 Check the ambient air temperature and adjust the specific gravity reading for each cell as follows:
- Add 0.004 to the reading of each cell for every 10° / 5.5° C above 80° F / 26.7° C.
- Subtract 0.004 from the reading of each cell for every 10° / 5.5° C below 80° F / 26.7° C.
- Result: All battery cells display a specific gravity of 1.277 or greater. The battery is fully charged. Proceed to step 11.
- Result: The difference in specific gravity readings between cells is greater than 0.1 OR the specific gravity of one or more cells is less than 1.177. Replace the battery.
- 11 Check the battery acid level. If needed, replenish with distilled water to 1/8 inch / 3 mm below the bottom of the battery fill tube. Do not overfill.
- 12 Install the vent caps and neutralize any electrolyte that may have spilled.

B-2 Inspect the Electrical Wiring




Note: Genie specifications require that this procedure be performed every 250 hours or quarterly, whichever comes first.

Maintaining electrical wiring in good condition is essential to safe operation and good machine performance. Failure to find and replace burnt, chafed, corroded or pinched wires could result in unsafe operating conditions and may cause component damage.

AWARNING Electrocution/burn hazard. Contact with hot or live circuits could result in death or serious injury. Remove all rings, watches and other jewelry.

- 1 Open the turntable cover at the engine side of the machine.
- 2 Remove the engine tray retaining fastener. Swing the engine tray out away from the machine.

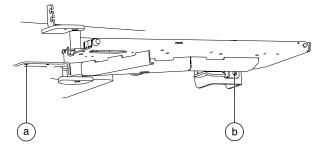

- engine tray anchor hole engine tray retaining fastener
- 3 Locate the engine tray anchor hole on the turntable.

4 Install the bolt that was just removed into the anchor hole to secure the engine tray from moving.

AWARNING

Crushing hazard. Failure to install the bolt into the engine pivot plate to secure it from moving could result in death or serious injury.

- 5 Inspect the following areas for burnt, chafed, corroded, pinched and loose wires:
 - · Engine wiring harness
 - · Battery area wiring
- 6 Open the turntable cover at the ground controls side of the machine.
- 7 Inspect the following areas for burnt, chafed, corroded, pinched and loose wires:
 - Inside of the ground control box
 - · Hydraulic manifold wiring
 - · Hydraulic oil cooler wiring
- 8 Inspect for a liberal coating of dielectric grease in the following locations:
 - · All wire harness connectors to ground control box
- 9 Start the engine from the ground controls and raise the secondary boom above the turntable covers.
- 10 Inspect the turntable area for burnt, chafed and pinched cables.
- 11 Lower the secondary boom to the stowed position and turn the engine off.
- 12 Inspect the following areas for burnt, chafed, corroded, pinched and loose wires:
 - · Cable track on the boom
 - · Cables on the boom and jib boom
 - · Jib boom/platform rotate manifold
 - · Inside of the platform control box

- 13 Inspect for a liberal coating of dielectric grease in the following location:
 - All wire harness connectors to platform control box
- 14 Remove the engine tray retaining fastener from the engine tray anchor hole at the pivot end of the engine tray.
- 15 Swing the engine tray in towards the machine.
- 16 Install the engine tray retaining fasteners.

AWARNING Crushing hazard. Failure to install the bolt into the engine pivot plate to secure it from moving could result in death or serious injury.

B-3 Test the Key Switch

Note: Genie specifications require that this procedure be performed every 250 hours or quarterly, whichever comes first.

Proper key switch action and response is essential to safe machine operation. The machine can be operated from the ground or platform controls and the activation of one or the other is accomplished with the key switch. Failure of the key switch to activate the appropriate control panel could cause a hazardous operating situation.

- 1 Pull out the red Emergency Stop button to the on position at both the ground and platform controls.
- 2 Turn the key switch to ground control, start the engine and then turn the key switch to platform control.
- 3 Check all machine function from the **ground** controls.
- Result: All machine functions should not operate.
- 4 Turn the key switch to ground control.
- 5 Check all machine function from the **platform** controls.
- Result: All machine functions should not operate.
- 6 Turn the key switch to the off position.
- Result: The engine should stop and no functions should operate.

B-4 Check the Exhaust System



Note: Genie specifications require that this procedure be performed every 250 hours or quarterly, whichever comes first.

Maintaining the exhaust system is essential to good engine performance and service life. Running the engine with a damaged or leaking exhaust system can cause component damage and unsafe operating conditions.



AWARNING Bodily injury hazard. Do not inspect while the engine is running. Remove the key to secure from operation.



Burn hazard. Beware of hot engine components. Contact with hot engine components may result in severe burns.

To access the engine:

1 Remove the engine tray retaining fastener located under the engine tray. Swing the engine tray out away from the machine and secure it from moving.



AWARNING Crushing hazard. Failure to install the fastener into the engine tray anchor hole to secure the engine tray from moving could result in death or serious injury.

- 2 Be sure that all nuts and bolts are tight.
- 3 Inspect all welds for cracks.
- 4 Inspect for exhaust leaks; i.e., carbon buildup around seams and joints.
- 5 Swing the engine pivot plate in towards the machine.
- 6 Install the bolts that were just removed into the original holes to secure the engine pivot plate.

AWARNING

Crushing hazard. Failure to install the bolts into the engine pivot plate to secure it from moving could result in death or serious injury.

B-5 Inspect the Engine Air Filter




Note: Genie requires that this procedure be performed every 250 hours or quarterly, whichever comes first. Perform this procedure more often if dusty conditions exist.

Maintaining the engine air filter in good condition is essential to good engine performance and service life. Failure to perform this procedure can lead to poor engine performance and component damage.

Note: Perform this procedure with the engine off.

Open the engine side cover. Empty the dust discharge valve by pressing together the sides of the discharge slot. Clean the discharge slot as needed.

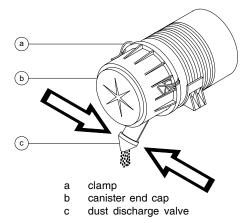

- 2 Release the latches on the air cleaner cap. Remove the end cap from the air cleaner canister.
- 3 Remove the filter element.
- 5 Clean the inside of the canister and the end cap with a damp cloth.
- 6 Inspect the air filter element. If needed, blow from the inside out using low pressure dry compressed air, or carefully tap out dust. Replace the filter if needed.
- 7 Install the filter element.
- 8 Install the air filter canister end cap and secure the end cap latches.

Note: Be sure the discharge slot is pointing down.

B-6 Check the Oil Cooler and **Cooling Fins - Deutz Models**





Note: Genie specifications require that this procedure be performed every 250 hours or quarterly, whichever comes first.

Maintaining the oil cooler in good condition is essential for good engine performance. Operating a machine with a damaged oil cooler may result in engine damage. Also, restricting air flow through the oil cooler will affect the performance of the cooling system.

AWARNING Bodily injury hazard. Do not inspect while the engine is running. Remove the key to secure from operation.




Burn hazard. Beware of hot engine components. Contact with hot engine components may result in severe burns.

Oil cooler

- 1 Remove the engine tray retaining fastener located under the engine tray. Swing the engine tray out and away from the machine.
- 2 Install the fastener that was just removed through the engine tray and into the engine tray anchor hole in the turntable.

AWARNING Crushing hazard. Failure to install the fastener into the engine tray anchor hole to secure the engine tray from moving could result in death or serious injury.

- 3 Remove the fasteners from the engine side cover, then remove the cover.
- 4 Inspect the oil cooler for leaks and physical damage.

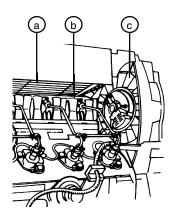

- a oil cooler
- b cylinder head cooling fins
- c fan blower fins
- 5 Clean the oil cooler of debris and foreign material.

Cooling and fan blower fins

- 6 Inspect the fan blower fins for physical damage.
- 7 Clean the fan blower fins of debris and foreign material.
- 8 Inspect the head cooling passages and fins for physical damage or foreign material, using a flashlight.
- 9 Clean the cylinder head cooling passages of debris and foreign material.
- 10 Install the engine side cover.
- 11 Swing the engine back to its original position and install the engine pivot plate retaining fastener.

 
B-7 Confirm the Proper Brake Configuration



Note: Genie specifications require that this procedure be performed every 250 hours or quarterly, whichever comes first.


Proper brake configuration is essential to safe operation and good machine performance. Hydrostatic brakes and hydraulically-released, spring-applied individual wheel brakes can appear to operate normally when they are actually not fully operational.

1 Check each drive hub disconnect cap to be sure it is in the engaged position.



2 Be sure the free-wheel valve on the drive pump is closed (clockwise).

Note: The free-wheel valve is located on the bottom of the drive pump.

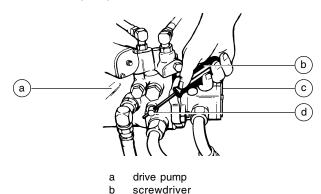

Note: The free-wheel valve should always remain closed.

lift pump

free-wheel valve

С

B-8 Inspect the Tires, Wheels and Lug Nut Torque



Note: Genie specifications require that this procedure be performed every 250 hours or quarterly, whichever comes first.

Maintaining the tires and wheels in good condition, including proper wheel fastener torque, is essential to safe operation and good performance. Tire and/or wheel failure could result in a machine tip-over. Component damage may also result if problems are not discovered and repaired in a timely fashion.

AWARNING Bodily injury hazard. An overinflated tire can explode and could result in death or serious injury.

Tip-over hazard. Do not use temporary flat tire repair products.

Note: The tires on some machines are foam filled and do not need air added to them.

- 1 Check all tire treads and sidewalls for cuts, cracks, punctures and unusual wear.
- 2 Check each wheel for damage, bends and cracked welds.
- 3 Check each lug nut for proper torque. Refer to Section 2, Specifications.
- 4 Check the pressure in each air-filled tire. Add air as necessary. Refer to Section 2 Specifications.

B-9 Check the Drive Hub Oil Level and Fastener Torque






Note: Genie specifications require that this procedure be performed every 250 hours or quarterly, whichever comes first.

Failure to maintain proper drive hub oil levels may cause the machine to perform poorly and continued use may cause component damage.

Drive hubs

1 Drive the machine to rotate the hub until the plugs are located one on top and the other at 90 degrees.

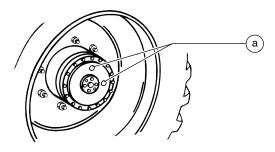


a drive hub plugs

- 2 Remove the plug located at 90 degrees and check the oil level.
- Result: The oil level should be even with the bottom of the side plug hole.
- 3 If necessary, remove the top plug and add oil until the oil level is even with the bottom of the side plug hole. Refer to Section 2, Specifications.
- 4 Apply pipe thread sealant to the plug(s) and install the plug(s) in the drive hub.
- 5 Check the torque of the drive hub mounting fasteners. Refer to Section 2, *Specifications*.
- 6 Repeat this procedure for each drive hub.

Turntable Rotate Drive Hub

- 1 Remove the plug located on the side of the hub and check the oil level.
- Result: The oil level should be even with the bottom of the plug hole.

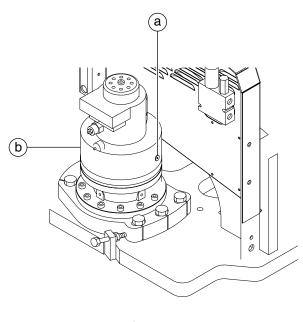

- a plugb drive hub
- 2 If necessary, add oil until the oil level is even with the bottom of the plug hole. Refer to Section 2, Specifications.
- 3 Apply pipe thread sealant to the plug, and install the plug in the drive hub.

B-10 Check and Adjust the Engine RPM







Note: Genie specifications require that this procedure be performed every 250 hours or quarterly, whichever comes first.

Maintaining the engine rpm at the proper setting for both low and high idle is essential to good engine performance and service life. The machine will not operate properly if the rpm is incorrect and continued use may cause component damage.

GM models


Note: The engine rpm is controlled by the ECM and can only be adjusted by re-programming the ECM. If rpm adjustment or service is required, please contact the Genie Service Department OR your local GM dealer.

Deutz models

1 Connect a tachometer to the engine. Start the engine from the ground controls and check the rpm. Refer to Section 2, *Specifications*.

Skip to step 10 if the low idle rpm is correct.

2 Remove the secondary idle adjustment screw cap from the secondary idle adjustment screw on the injection pump. Loosen the locknut.

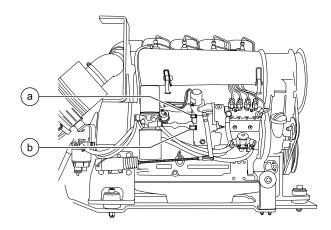

Deutz engine

- a primary idle adjustment screw
- b secondary idle adjustment screw
- 3 Turn the secondary adjustment screw counterclockwise until the adjustment screw is loose. Tighten the locknut.

Note: Be sure the adjustment screw is loosened until there is no spring tension felt.

- 4 Remove the primary idle adjustment screw cap from the primary idle adjustment screw on the injection pump. Loosen the locknut.
- 5 Adjust the primary idle adjustment screw until low idle is 1250 rpm. Tighten the locknut.
- 6 Install the primary idle adjustment screw cap and tighten. Do not over tighten.
- 7 Loosen the secondary idle adjustment screw locknut.

- 8 Adjust the secondary adjustment screw until the low idle is 1300 rpm. Tighten the locknut.
- 9 Install the secondary idle adjustment screw cap and tighten. Do not over tighten.
- 10 Move the function enable/rpm select toggle switch to the high idle (rabbit symbol) position and check the rpm. Refer to Section 2, Specifications.

If the high idle is correct, disregard adjustment step 11.

11 Loosen the yoke lock nut. Turn the high idle adjustment nut and solenoid boot counterclockwise to increase the rpm or clockwise to decrease the rpm. Tighten the yoke lock nut and recheck the rpm.


Note: Be sure the solenoid fully retracts when activating high idle.

Perkins models

12 Connect a tachometer to the engine. Start the engine from the ground controls and check the rpm. Refer to Section 2, *Specifications*.

Skip to step 14 if the low idle rpm is correct.

13 Loosen the low idle lock nut. Turn the low idle adjustment screw clockwise to increase the rpm or counterclockwise to decrease the rpm. Tighten the low idle lock nut and confirm the rpm.

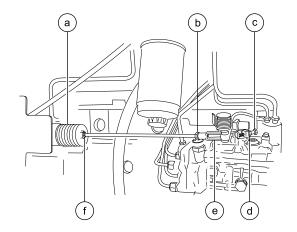

Perkins models

- a solenoid boot
- b yoke lock nut
- c low idle adjustment screw
- d low idle lock nut
- e voke
- f high idle adjustment nut
- 14 Move the function enable/rpm select toggle switch to the high idle (rabbit symbol) position. Refer to Section 2, *Specifications*.

If high idle rpm is correct, disregard adjustment step 15.

15 Loosen the yoke lock nut. Turn the high idle adjustment nut and solenoid boot counterclockwise to increase the rpm or clockwise to decrease the rpm. Tighten the yoke lock nut and recheck the rpm.

Note: Be sure the solenoid fully retracts when activating high idle.

B-11 **Perform Engine Maintenance**





Note: Engine specifications require that this procedure be performed every 250 hours or quarterly, whichever comes first.

Proper engine maintenance, following the engine manufacturer's maintenance schedule, is essential to good engine performance and service life. Failure to perform the maintenance procedures can lead to poor engine performance and component damage.

Required maintenance procedures and additional engine information are available in the Deutz 913 Operator Handbook (Deutz part number 0297 7341) OR the GM 3.0L Operator Handbook (GM part number 36100007) OR the Perkins 704-30 Operator Handbook (Perkins part number TPD 1336E).

Deutz 913 Operator Handbook Genie part number	62446
GM 3.0L Operator Handbook Genie part number	101095
Perkins 704-30 Operator Handbook Genie part number	101840

To access the engine:

1 Remove the engine tray retaining fastener located under the engine tray. Swing the engine tray out away from the machine and secure it from moving.



AWARNING Crushing hazard. Failure to install the fastener into the engine tray anchor hole to secure the engine tray from moving could result in death or serious injury.

B-12 Check the Oscillate Directional Valve Linkage



Note: Genie specifications require that this procedure be performed every 250 hours or quarterly, whichever comes first.

Note: Perform this test only on models equipped with an oscillating axle.

Proper axle oscillation is essential to safe machine operation. If the oscillate directional valve linkage is not operating correctly, the stability of the machine is compromised and it may tip over.

- 1 Remove the drive chassis cover from the non-steer end of the machine.
- 2 Locate the oscillate directional valve inside of the non-steer axle and inspect the linkage for the following:
- · Lock nut is tight against yoke
- Yoke clevis pins are installed
- Cotter pins are installed through clevis pins
- Linkage is properly attached to directional valve

B-13 Test the Ground Control Override

Note: Genie specifications require that this procedure be performed every 250 hours or quarterly, whichever comes first.

A properly functioning ground control override is essential to safe machine operation. The ground control override function is intended to allow ground personnel to operate the machine from the ground controls whether or not the red Emergency Stop button at the platform controls is in the on or off position. This function is particularly useful if the operator at the platform controls cannot return the boom to the stowed position.

- 1 Push in the red Emergency Stop button at the platform controls to the off position.
- 2 Start the engine from the ground controls.
- 3 At the ground controls, operate each boom function through a partial cycle.
- Result: All boom functions should operate.

Note: The boom will not raise past horizontal and the boom will not extend more than 12 inches / 30.5 cm unless both axles are fully extended.

B-14 Test the Platform Self-leveling

Note: Genie specifications require that this procedure be performed every 250 hours or quarterly, whichever comes first.

Automatic platform self-leveling throughout the full cycle of boom raising and lowering is essential for safe machine operation. The platform is maintained at level by the platform leveling slave cylinder which operates in a closed loop hydraulic circuit with the master cylinder located at the base of the boom.

A platform self-leveling failure creates an unsafe working condition for platform and ground personnel.

- 1 Start the engine from the ground controls.
- 2 Hold the function enable toggle switch to either side and adjust the platform to a level position using the platform level toggle switch.
- 3 Raise and lower the boom through a full cycle.
- Result: The platform should remain level at all times to within ±5 degrees.

Note: The boom will not raise past horizontal and the boom will not extend more than 12 inches / 30.5 cm unless both axles are fully extended.

B-15 Test the Engine Idle Select Operation

Note: Genie specifications require that this procedure be performed every 250 hours or quarterly, whichever comes first.

A properly operating engine idle select switch is essential to good engine performance and safe machine operation. There are three settings.

Low idle (turtle symbol) allows the operator to control individual boom functions only.

High idle (rabbit symbol) allows the operator to control multiple boom and/or drive functions simultaneously. This setting maintains a consistent high idle.

Foot switch activated high idle (rabbit and foot switch symbols) should be used for normal machine operation. This setting activates high idle only when the foot switch is pressed down.

- 1 Turn the key switch to ground control.
- 2 Pull out the red Emergency Stop button to the on position at both the ground and platform controls.
- 3 Start the engine from the ground controls.
- 4 Move and hold the function enable toggle switch in the high idle (rabbit symbol) position.
- Result: The engine rpm should change to high idle.

- 5 Release the function enable toggle switch.
- Result: The engine rpm should change to low idle.
- 6 Turn the key switch to platform controls.
- 7 At the platform controls, move the engine idle select toggle switch to high idle (rabbit symbol). Do not press down the foot switch.
- Result: The engine rpm should change to high idle.
- 8 Move the engine idle select toggle switch to low idle (turtle symbol).
- Result: The engine rpm should change to low idle.
- 9 Move the engine idle select toggle switch to foot switch activated high idle (rabbit and foot switch symbol).
- Result: The engine rpm should **not** change to high idle.
- 10 Press down the foot switch.
- Result: The engine rpm should change to high idle.

B-16 Test the Fuel Select Operation GM Models



Note: Genie specifications require that this procedure be performed every 250 hours or quarterly, whichever comes first.

The ability to select and switch between gasoline and LPG fuels as needed is essential to safe machine operation. A fuel selection can be made whether the engine is running or not. Switching malfunctions and/or the failure of the engine to start and run properly in both fuel modes and through all idle speeds can indicate fuel system problems that could develop into a hazardous situation.

Note: Perform this test after checking the gasoline and LPG fuel levels, and warming the engine to normal operating temperature.

- 1 Move the fuel select toggle switch to gasoline and then move the engine idle select switch to foot switch activated high idle (rabbit and foot switch symbol).
- 2 Start the engine from the platform controls and allow it to run at low idle.
- 3 Press down the foot switch to allow the engine to run at high idle.
- Result: The engine should start promptly and operate smoothly in low and high idle.

- 4 Release the foot switch and shut the engine off by pushing the red Emergency Stop button in to the off position.
- 5 Move the fuel select toggle switch to LPG.
- 6 Start the engine and allow it to run at low idle.
- 7 Press down the foot switch to allow the engine to run at high idle.
- Result: The engine should start promptly and operate smoothly in low and high idle.

Note: The engine may hesitate momentarily and then continue to run on the selected fuel if the fuel source is switched while the engine is running.

B-17 Test the Drive Enable System

Note: Genie specifications require that this procedure be performed every 250 hours or quarterly, whichever comes first.

Proper drive enable system operation is essential to safe machine operation. When the boom is past the non-steering wheels, drive movement is stopped and the indicator light turns on. The drive enable switch must be held to either side to reactivate the drive function and should alert the operator that the machine may move in the opposite direction that the drive and steer controls are moved. An improperly functioning drive enable system may allow the machine to be moved into an unsafe position.

Note: Perform this procedure with the boom in the stowed position.

- 1 Start the engine from the platform controls.
- 2 Press down the foot switch.
- 3 Rotate the turntable until the boom moves past one of the the non-steer wheels.
- Result: The drive enable indicator light should turn on and remain on while the boom is anywhere in the range shown.
- 4 Slowly move the drive control handle off center.
- Result: The drive function should not operate.


- 5 Rotate the turntable until the boom moves past the other non-steer wheel.
- Result: The drive enable indicator light should come on and remain on while the boom is anywhere in the range shown.



- 6 Move and hold the drive enable toggle switch to either side and slowly move the drive control handle off center.
- Result: The drive function should operate.

AWARNING Collision hazard. Always use the color-coded direction arrows on the platform controls and the drive chassis to identify the direction of travel.

Note: When the drive enable system is in use, the machine may drive in the opposite direction that the drive and steer control handle is moved.

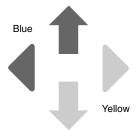

B-18 Test the Drive Brakes



Note: Genie specifications require that this procedure be performed every 250 hours or quarterly, whichever comes first.

Proper brake action is essential to safe machine operation. The drive brake function should operate smoothly, free of hesitation, jerking and unusual noise. Hydraulically-released individual wheel brakes can appear to operate normally when they are actually not fully operational.

AWARNING Collision hazard. Be sure that the machine is not in free-wheel or partial free-wheel configuration. See B-7, Confirm the Proper Brake Configuration.

Note: Select a test area that is firm, level and free of obstructions.

Note: Perform this procedure with the boom in the stowed position.

- 1 Mark a test line on the ground for reference.
- 2 Start the engine from the platform controls.
- 3 Choose a point on the machine (i.e., contact patch of a tire) as a visual reference for use when crossing the test line.
- 4 Bring the machine to top drive speed before reaching the test line. Release the drive controller when your reference point on the machine crosses the test line.
- 5 Measure the distance between the test line and your machine reference point. Refer to Section 2, Specifications.

Note: The brakes must be able to hold the machine on any slope it is able to climb.

B-19 Test the Drive Speed Stowed Position

Note: Genie specifications require that this procedure be performed every 250 hours or quarterly, whichever comes first.

Proper drive function movement is essential to safe machine operation. The drive function should respond quickly and smoothly to operator control. Drive performance should also be free of hesitation, jerking and unusual noise over the entire proportionally controlled speed range.

Note: Select a test area that is firm, level and free of obstructions.

Note: Perform this procedure with the boom in the stowed position.

- 1 Create start and finish lines by marking two lines on the ground 40 feet / 12.2 m apart.
- 2 Start the engine from the platform controls.
- 3 Choose a point on the machine (i.e., contact patch of a tire) as a visual reference for use when crossing the start and finish lines.
- 4 Bring the machine to top drive speed before reaching the start line. Begin timing when your reference point on the machine crosses the start line.
- 5 Continue at full speed and note the time when the machine reference point crosses the finish line. Refer to Section 2, *Specifications*.

B-20 Test the Drive Speed Raised or Extended Position

Note: Genie specifications require that this procedure be performed every 250 hours or quarterly, whichever comes first.

Proper drive function movement is essential to safe machine operation. The drive function should respond quickly and smoothly to operator control. Drive performance should also be free of hesitation, jerking and unusual noise over the entire proportionally controlled speed range.

Note: Select a test area that is firm, level and free of obstructions.

- 1 Create start and finish lines by marking two lines on the ground 40 feet / 12.2 m apart.
- 2 Start the engine from the platform controls.
- 3 Extend the axles.
- 4 Move the engine idle select toggle switch to foot switch activated high idle (rabbit and foot switch symbol).
- 5 Press down the foot switch and raise the boom above horizontal.
- 6 Choose a point on the machine (i.e. contact patch of a tire), as a visual reference for use when crossing the start and finish lines.
- 7 Bring the machine to top drive speed before reaching the start line. Begin timing when your reference point on the machine crosses the start line.

- 8 Continue at full speed and note the time when the machine reference point crosses the finish line.
- 9 Press down the foot switch and lower the boom to the stowed position.
- 10 Extend the boom 3 feet / 90 cm.
- 11 Choose a point on the machine (i.e., contact patch of a tire), as a visual reference for use when crossing the start and finish lines.
- 12 Bring the machine to top drive speed before reaching the start line. Begin timing when your reference point on the machine crosses the start line.
- 13 Continue at top speed and note the time when the machine reference point crosses the finish line. Refer to Section 2, *Specifications*.

B-21 Test the Alarm Package (if equipped)

Note: Genie specifications require that this procedure be performed every 250 hours or quarterly, whichever comes first.

The alarm package includes:

- Travel alarm
- · Descent alarm
- · Flashing beacons

Alarms and beacons are installed to alert operators and ground personnel of machine proximity and motion. The alarm package is installed on the turntable rear cover. Beacons are installed on both turntable covers.

Note: The alarms and beacons will operate with the engine running or not running.

- 1 Turn the key switch to ground controls and pull out the red Emergency Stop button to the on position at both the ground and platform controls.
- Result: Both flashing beacons should be on and flashing.
- 2 Move and hold the function enable toggle switch to either side and activate the boom toggle switch in the down position, hold for a moment and then release it.
- Result: The descent alarm should sound when the toggle switch is held down.

- 3 Turn the key switch to platform controls.
- Result: The flashing beacons should be on and flashing.
- 4 Press down the foot switch. Move the boom controller to the down position, hold for a moment and then release it.
- Result: The descent alarm should sound when the controller is held down.
- 5 Press down the foot switch. Move the drive controller off center, hold for a moment and then release it. Move the drive controller off center in the opposite direction, hold for a moment and then release it.
- Result: The travel alarm should sound when the drive controller is moved off center in either direction.

B-22 Inspect the Fuel and Hydraulic Tank Cap Venting Systems





Note: Genie specifications require that this procedure be performed every 250 hours or quarterly, whichever comes first. Perform this procedure more often if dusty conditions exist.

Free-breathing fuel and hydraulic tank caps are essential for good machine performance and service life. A dirty or clogged tank cap may cause the machine to perform poorly and continued use may cause component damage. Extremely dirty conditions may require that the caps be inspected more often.



Explosion and fire hazard. Engine fuels are combustible. Perform this procedure in an open, well-ventilated area away from heaters, sparks, flames and lighted tobacco. Always have an approved fire extinguisher within easy reach.

Note: Perform this procedure with the engine off.

- 1 Remove the cap from the fuel tank.
- 2 Check for proper venting.
- Result: Air passes through the fuel tank cap. Proceed to step 4.
- Result: If air does not pass through the cap, clean or replace the cap. Proceed to step 3.

note: When checking for positive tank cap venting, air should pass freely through the cap.

- 3 Using a mild solvent, carefully wash the cap venting system. Dry using low pressure compressed air. Repeat this procedure beginning with step 2.
- 4 Install the fuel tank cap onto the fuel tank.
- 5 Remove the breather cap from the hydraulic tank.
- 6 Check for proper venting.
- Result: Air passes through the hydraulic tank cap. Proceed to step 8.
- Result: If air does not pass through the cap, clean or replace the cap. Proceed to step 7.

Note: When checking for positive tank cap venting, air should pass freely through the cap.

- 7 Using a mild solvent, carefully wash the cap venting system. Dry using low pressure compressed air. Repeat this procedure beginning with step 6.
- 8 Install the breather cap onto the hydraulic tank.

B-23 Perform Hydraulic Oil Analysis









Note: Genie specifications require that this procedure be performed every 250 hours or quarterly, whichever comes first.

Replacement or testing of the hydraulic oil is essential for good machine performance and service life. Dirty oil and suction strainers may cause the machine to perform poorly and continued use may cause component damage. Extremely dirty conditions may require oil changes to be performed more frequently.

Note: Before replacing the hydraulic oil, the oil may be tested by an oil distributor for specific levels of contamination to verify that changing the oil is necessary. If the hydraulic oil is not replaced at the two year inspection, test the oil quarterly. Replace the oil when it fails the test.

B-24 Perform Engine Maintenance -**GM Models**





Note: GM engine specifications require that this procedure be performed every 400 hours.

Proper engine maintenance, following the engine manufacturer's maintenance schedule, is essential to good engine performance and service life. Failure to perform the maintenance procedures can lead to poor engine performance and component damage.

Required maintenance procedures and additional engine information are available in the GM 3.0L Operator Handbook (GM part number 36100007).

GM 3.0L Operator Handbook

Genie part number

101095

To access the engine:

1 Remove the engine tray retaining fastener located under the engine tray. Swing the engine tray out away from the machine and secure.



AWARNING Crushing hazard. Failure to install the fastener into the engine tray anchor hole to secure the engine tray from moving could result in death or serious injury.

Checklist C Procedures

C-1 **Perform Engine Maintenance -Deutz and Perkins Models**





Note: Engine specifications require that this procedure be performed every 500 hours.

Proper engine maintenance, following the engine manufacturer's maintenance schedule, is essential to good engine performance and service life. Failure to perform the maintenance procedures can lead to poor engine performance and component damage.

Required maintenance procedures and additional engine information are available in the Deutz 913 Operator Handbook (Deutz part number 0297 7341) OR the Perkins 704-30 Operator Handbook (Perkins part number TPD 1336E).

Deutz 913 Operator Handbook Genie part number	62446
Perkins 704-30 Operator Handbook Genie part number	101840

To access the engine:

1 Remove the engine tray retaining fastener located under the engine tray. Swing the engine tray out away from the machine and secure it from moving.



AWARNING Crushing hazard. Failure to install the fastener into the engine tray anchor hole to secure the engine tray from moving could result in death or serious injury.

C-2 Grease the Platform Overload Mechanism (if equipped)





Note: Genie specifications require that this procedure be performed every 500 hours or 6 months, whichever comes first. Perform this procedure more often if dusty conditions exist.

Application of lubrication to the platform overload mechanism is essential to safe machine operation. Continued use of an improperly greased platform overload mechanism could result in the system not sensing an overloaded platform condition and will result in component damage.

- 1 Locate the grease fittings on each pivot pin of the platform overload assembly.
- 2 Thoroughly pump grease into each grease fitting.

Grease Specification

Chevron Ultra-duty grease, EP NLGI 2 (lithium based) or equivalent

C-3 Test the Platform Overload System (if equipped)



Note: Genie specifications require that this procedure be performed every 500 hours or 6 months, whichever comes first.

Testing the platform overload system regularly is essential to safe machine operation. Continued use of an improperly operating platform overload system could result in the system not sensing an overloaded platform condition. Machine stablity could be compromised resulting in the machine tipping over.

Note: Perform this procedure with the machine on a firm, level surface.

- 1 Turn the key switch to platform control. Start the engine and level the platform.
- 2 Determine the maximum platform capacity. Refer to the machine serial plate.
- 3 Remove all weight, tools and accessories from the platform.

Note: Failure to remove all weight, tools and accessories from the platform will result in an inaccurate test.

- 4 Using a suitable lifting device, place a test weight equal to that of the available capacity one of the locations shown. Refer to Illustration 1.
- Result: The platform overload indicator lights should be off at both the ground and platform controls and the alarm should not sound.
- Result: The platform overload indicator lights are on and the alarm is sounding. Calibrate the platform overload system. Refer to Repair Procedure 2-4, How to Calibrate the Platform Overload System (if equipped).
- 5 Carefully move the test weight to each remaining location. Refer to Illustration 1.
- Result: The platform overload indicator lights should be off at both the ground and platform controls and the alarm should not sound.
- Result: The platform overload indicator lights are on and the alarm is sounding. Calibrate the platform overload system. Refer to Repair Procedure 2-4, How to Calibrate the Platform Overload System (if equipped).

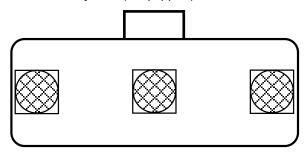


Illustration 1

- 6 Using a suitable lifting device, place an additional 50 lbs / 23 kg of weight onto the platform.
- Result: The alarm should sound. The platform overload indicator lights should be flashing at both the ground and platform controls.
- Result: The alarm does not sound and the platform overload indicator lights are not flashing. Calibrate the platform overload system. Refer to Repair Procedure 2-4, How to Calibrate the Platform Overload System (if equipped).

Note: There may be a 2 second delay before the overload indicator lights flash and the alarm sounds.

- 7 Carefully move the test weights to each remaining location on the platform. Refer to Illustration 1.
- Result: The alarm should sound. The platform overload indicator lights should be flashing at both the ground and platform controls.
- Result: The alarm does not sound and the platform overload indicator lights are not flashing. Calibrate the platform overload system. Refer to Repair Procedure 2-4, How to Calibrate the Platform Overload System (if equipped).

Note: There may be a 2 second delay before the overload indicator lights flash and the alarm sounds.

- 8 Test all machine functions from the platform controls.
- Result: All platform control functions should not operate.
- 9 Turn the key switch to ground control.
- 10 Test all machine functions from the ground controls.
- Result: All ground control functions should not operate.
- 11 Activate the auxiliary power toggle switch.

Note: The engine will turn off when the auxiliary power is activated.

- 12 Using auxiliary power, test all machine functions from the ground controls.
- Result: All ground control functions should operate.
- 13 Using a suitable lifting device, lift the additional test weight from the platform.
- Result: The platform overload indicator lights should turn off at both the ground and platform controls and the alarm should not sound.

Note: There may be an 2 second delay before the overload indicator lights and alarm turn off.

- 14 Start the engine and test all machine functions from the ground controls.
- Result: All ground control functions should operate normally.
- 15 Turn the key switch to platform control.
- 16 Test all machine functions from the platform controls.
- Result: All platform control functions should operate.

Note: If the platform overload system is not operating properly, Refer to Repair Procedure 2-4, How to Calibrate the Platform Overload System (if equipped).

17 Using a suitable lifting device, remove the remaining test weights from the platform.

C-4 Replace the Engine Air Filter Element - Deutz and Perkins models





Note: Engine specifications require that this procedure be performed every 500 hours or semi-annually, whichever comes first.

Maintaining the engine air filter in good condition is essential to good engine performance and service life. Failure to perform this procedure can lead to poor engine performance and component damage.

Note: Perform this procedure with the engine off.

- Release the latches on the air cleaner cap.
 Remove the end cap from the air cleaner canister.
- 2 Remove the filter element.
- 3 Use a damp cloth to wipe the filter sealing surface and the inside of the outlet tube. Make sure that all contaminant is removed before the filter is inserted.
- 4 Check new filter element gasket for damage before installing.
- 5 Install the new filter element.
- 6 Install the end cap on the canister and secure.

Note: Be sure the discharge slot is pointing down.

C-5 Replace the Fuel Filter/Water Separator - Diesel Models







Note: Genie specifications require that this procedure be performed every 500 hours or annually, whichever comes first.

Regular replacement of the fuel filter/water separator is essential for good engine performance. Failure to perform this procedure can lead to poor engine performance and/or hard starting, and continued use may result in component damge. Extremely dirty conditions may require this procedure be performed more often.



Explosion and fire hazard. Engine fuels are combustible. Perform this procedure in an open, well-ventilated area away from heaters, sparks, flames and lighted tobacco. Always have an approved fire extinguisher within easy reach.


Note: Perform this procedure with the engine off.

1 Open the engine side turntable cover and locate the fuel filter/water separator.

Note: The fuel filter/water separator is located near the hydraulic pump.

2 Disconnect and plug the fuel supply hose from the fuel tank to the fuel filter/water separator head.

3 Loosen the vent plug located on the fuel filter/ water separator head.

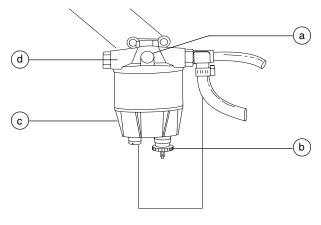

- a vent plug
- b drain plug
- c filter bowl
- d separator head
- 4 Place a suitable container under the filter bowl. Loosen the drain plug located at the bottom of the bowl. Completely drain the fuel.
- 5 Rotate the filter bowl counterclockwise and remove it from the element.
- 6 Rotate the filter element counterclockwise and remove it from the filter head.
- 7 Install the filter bowl onto the new filter element.

8 Apply a thin layer of oil onto the element gasket. Install the filter/bowl assembly onto the filter head. Tighten the drain plug and vent plug.

Component damage hazard. The drain plug and vent plug can be damaged if they are overtightened.

- 9 Install the fuel supply hose from the fuel tank to the fuel filter/water separator. Tighten the clamp.
- 10 Clean up any diesel fuel that may have spilled during the installation procedure.
- 11 Use a permanent ink marker to write the date and number of hours from the hour meter on the filter element.

Bleed the fuel system:

Note: Before bleeding the system, fill the fuel tank.

- 12 Loosen the vent plug located on the fuel filter/water separator head.
- 13 Operate the priming lever of the fuel lift pump until fuel, free from air, comes from the vent plug. Tighten the vent plug.
- 14 Loosen the air vent screw, located on top of the fuel injection pump.
- 15 Tighten the air vent screw when air stops coming through the air vent.
- 16 Clean up any diesel fuel that may have spilled during the bleeding procedure and dispose of properly.
- 17 Start the engine from ground controls and check for leaks.

C-6 Perform Engine Maintenance -GM Models





Note: Engine specifications require that this procedure be performed every 800 hours.

Proper engine maintenance, following the engine manufacturer's maintenance schedule, is essential to good engine performance and service life. Failure to perform the maintenance procedures can lead to poor engine performance and component damage.

Required maintenance procedures and additional engine information are available in the GM 3.0L Operator Handbook (GM part number 36100007).

GM 3.0L Operator Handbook

Genie part number

101095

To access the engine:

1 Remove the engine tray retaining fastener located under the engine tray. Swing the engine tray out away from the machine and secure.



AWARNING Crushing hazard. Failure to install the fastener into the engine tray anchor hole to secure the engine tray from moving could result in death or serious injury.

Checklist D Procedures

D-1 Check the Boom Wear Pads





Note: Genie specifications require that this procedure be performed every 1000 hours or annually, whichever comes first.

Maintaining the boom wear pads in good condition is essential to safe machine operation. Wear pads are placed on boom tube surfaces to provide a low friction, replaceable wear pad between moving parts. Improperly shimmed wear pads or continued use of extremely worn wear pads may result in component damage and unsafe operating conditions.


Note: If the wear pads are still within specification, refer to Repair Procedure 4-2, *How to Shim the Boom.*

- 1 Start the engine from the ground controls.
- 2 Raise the end of the boom to a comfortable working height (chest high), then extend the boom 1 foot / 30 cm.
- 3 Measure each wear pad. Replace the wear pad if it is less than specification. If the wear pad is still within specification, shim as necessary to obtain zero clearance and zero drag.

4 Extend and retract the boom through the entire range of motion to check for tight spots that may cause binding or scraping of the boom.

Note: Always maintain squareness between the outer and inner boom tubes.

Boom wear pad specifications		
Boom one wear pad specifications	Minimum	
Top and bottom wear pads (extension end of boom)	¹ / ₂ inch 12.7 mm	
Side wear pads (extension end of boom)	⁵ /8 inch 15.9 mm	
Boom two wear pad specifications	Minimum	
Top and bottom wear pads (extension end of boom)	¹ / ₂ inch 12.7 mm	
Side wear pads (extension end of boom)	⁵ /8 inch 15.9 mm	
Top, bottom and side wear pads (pivot end of boom)	¹ / ₂ inch 12.7 mm	
Boom three wear pad specifications	Minimum	
Top and bottom wear pads (pivot end of boom)	¹ / ₂ inch 12.7 mm	

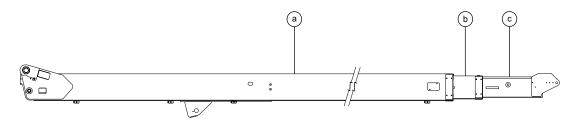

- a boom number 1
 - b boom number 2
- c boom number 3

Genîe

D-2 Check the Extendable Axle Wear Pads





Note: Genie specifications require that this procedure be performed every 1000 hours or annually, whichever comes first.

Maintaining the axle wear pads in good condition is essential to safe machine operation. Wear pads are placed on axle tube surfaces to provice a low friction, replaceable wear pad between moving parts. Improperly shimmed wear pads or continued use of worn out wear pads may result in component damage and unsafe operating conditions.

Note: If the wear pads are not worn below specification but are still within specification, refer to Repair Procedure 16-1, *How to Shim an Extendable Axle.*

- 1 Start the engine from the platform controls and extend the axles.
- 2 Measure each wear pad.
- If the wear pad is not less than specification, shim as necessary to obtain zero clearance and zero drag. Refer to Repair Procedure 16-1, How to Shim an Extendable Axle.
- ▼ Replace the wear pad if it is less than specification. It is recommended to replace both inner and outer wear pads. Refer to Repair Procedure 16-1, How to Remove an Inner Axle.

3 Extend and retract the axles through the entire range of motion to check for tight spots that may cause binding or scraping of the axle tubes.

Note: Always maintain squareness between the outer and inner axle tubes.

Axle wear pad specifications	Minimum
Top, bottom and side wear pads (both end of axle)	¹ / ₂ inch 12.7 mm
Extendable inner axle wear pad specifications	Minimum

D-3 Check the Free-wheel Configuration



Note: Genie specifications require that this procedure be performed every 1000 hours or annually, whichever comes first.

Proper use of the free-wheel configuration is essential to safe machine operation. The free-wheel configuration is used primarily for towing. A machine configured to free-wheel without operator knowledge could result in death or serious injury and property damage.



 
Collision hazard. Select a work site that is firm and level.



Component damage hazard. If the machine must be towed, do not exceed 2 mph / 3.2 km/h.

Non-steer wheels: All models

- 1 Chock the steer wheels to prevent the machine from rolling.
- 2 Center a lifting jack of ample capacity (20,000 lbs / 10,000 kg) under the drive chassis between the non-steer wheels.
- 3 Lift the wheels off the ground and place blocks under the drive chassis for support.
- 4 Disengage the drive hubs by turning over the drive hub disconnect caps on each non-steer wheel hub.




- 5 Manually rotate each non-steer wheel.
- Result: Each non-steer wheel should rotate with minimum effort.
- 6 Re-engage the drive hubs by turning over the hub disconnect caps. Rotate each wheel to check for engagement. Lift the machine and remove the blocks.

AWARNING Collision hazard. Failure to re-engage the drive hubs could result in death or serious injury and property damage.

Steer wheels: 4WD models

 - 7 Chock the non-steer wheels to prevent the machine from rolling.
- 8 Center a lifting jack of ample capacity (20,000 lbs / 10,000 kg) under the drive chassis between the steer wheels.
- 9 Lift the wheels off the ground and then place blocks under the drive chassis for support.
- 10 Disengage the drive hubs by turning over the drive hub disconnect caps on each steer wheel hub.




- 11 Manually rotate each steer wheel.
- O Result: Each steer wheel should rotate with minimum effort.
- 12 Re-engage the drive hubs by turning over the drive hub disconnect caps. Rotate each wheel to check for engagement. Lift the machine and remove the blocks.

AWARNING Collision hazard. Failure to re-engage the drive hubs could result in death or serious injury and property damage.

All models:

13 Turn the valve in a clockwise direction to be sure it is fully closed.

Note: The free-wheel valve is located on the bottom of the drive pump, and should always remain closed.

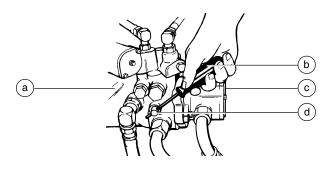

- drive pump
- screwdriver
- lift pump
- free-wheel valv

D-4 Check the Turntable Rotation **Bearing Bolts**



Note: Genie specifications require that this procedure be performed every 1000 hours or annually, whichever comes first.


Maintaining proper torque on the turntable bearing bolts is essential to safe machine operation. Improper bolt torque could result in an unsafe operating condition and component damage.

- 1 Start the engine from the platform controls and extend the axles.
- 2 Turn the key switch to ground controls.
- 3 Raise the boom and place a safety chock on the lift cylinder rod. Carefully lower the boom onto the lift cylinder safety chock.

AWARNING Crushing hazard. Keep hands away from cylinder and all moving parts when lowering the boom.


Note: The lift cylinder safety chock is available through the Genie Parts department.

- 4 Remove the center turntable cover retaining fasteners. Remove the cover.
- 5 Confirm that each turntable mounting bolt is torqued in sequence to specification. Refer to Section 2, Specifications.

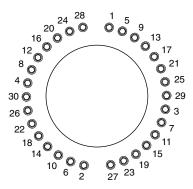

Bolt torque sequence

- 6 Install the center turntable cover and tighten the retaining fasteners.
- 7 Raise the boom and remove the safety chock.
- 8 Lower the boom to the stowed position.
- 9 Confirm that each bearing mounting bolt under the drive chassis is torqued in sequence to specification. Refer to Section 2, *Specifications*.

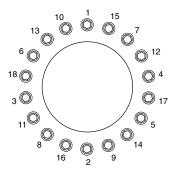

Bolt torque sequence

D-5 Inspect for Turntable Bearing Wear






Note: Genie specifications require that this procedure be performed every 1000 hours or annually, whichever comes first.

Periodic inspection of turntable bearing wear is essential to safe machine operation, good machine performance and service life. Continued use of a worn turntable bearing could create an unsafe operating condition, resulting in death or serious injury and component damage.

Note:Perform this procedure with the machine on a firm, level surface and the boom in the stowed position.

- 3 Start the machine from the ground controls and raise the boom to full height. Do not extend the boom.
- 4 Place a dial indicator between the drive chassis and the turntable at a point that is directly under, or inline with, the boom and no more than 1 inch / 2.5 cm from the bearing.

Note: To obtain an accurate measurement, place the dial indicator no more than 1 inch / 2.5 cm from the turntable rotation bearing.

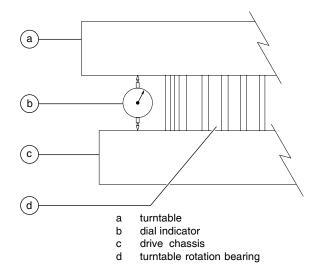

- 5 At the dial indicator, adjust it to "zero" the indicator.
- 6 Fully extend the boom and lower to a horizontal position.
- 7 Note the reading on the dial indicator.
- Result: The measurement is less than 0.063 inch / 1.6 mm. The bearing is good.
- Result: The measurement is more than 0.063 inch / 1.6 mm. The bearing is worn and needs to be replaced.
- 8 Fully retract the boom and raise the boom to full height. Visually inspect the the dial indicator to be sure the needle returns to the "zero" position.

- 9 Remove the dial indicator and rotate the turntable 90°.
- 10 Repeat steps 4 through 9 until the rotation bearing has been checked in at least four equally spaced areas 90° apart.
- 11 Lower the boom to the stowed position and turn the machine off.
- 12 Remove the dial indicator from the machine.

D-6 Perform Engine Maintenance -Deutz and Perkins Models





Note: Genie specifications require that this procedure be performed every 1000 hours.

Proper engine maintenance, following the engine manufacturer's maintenance schedule, is essential to good engine performance and service life. Failure to perform the maintenance procedures can lead to poor engine performance and component damage.

Required maintenance procedures and additional engine information are available in the Deutz 913 Operator Handbook (Deutz part number 0297 7341) OR the Perkins 704-30 Operator Handbook (Perkins part number TPD 1336E).

Deutz 913 Operator Handbook Genie part number	62446
Perkins 704-30 Operator Handbook Genie part number	101840

To access the engine:

1 Remove the engine tray retaining fastener located under the engine tray. Swing the engine tray out away from the machine and secure it from moving.



AWARNING Crushing hazard. Failure to install the fastener into the engine tray anchor hole to secure the engine tray from moving could result in death or serious injury.

D-7 Replace the Hydraulic Filter Elements







Note: Genie specifications requires that this procedure be performed every 1000 hours or annually, whichever come first. Perform this procedure more often if dusty conditions exist.

Replacement of the hydraulic filters is essential for good machine performance and service life. A dirty or clogged filter may cause the machine to perform poorly and continued use may cause component damage. Extremely dirty conditions may require that the filter be replaced more often.



Bodily injury hazard. Beware of hot oil. Contact with hot oil may cause severe burns.

Note: Perform this procedure with the engine off.

Hydraulic return filter

- Open the ground controls side turntable cover and locate the hydraulic return filter mounted on the hydraulic tank.
- 2 Place a suitable container under the hydraulic tank return filter.
- 3 Remove the filter with an oil filter wrench.
- 4 Apply a thin layer of fresh oil to the gasket of the new oil filter.

- 5 Install the new filter and tighten it securely by hand. Clean up any oil that may have spilled during the installation procedure.
- 6 Use a permanent ink marker to write the date and number of hours from the hour meter on the oil filter.

Medium and high pressure filters

Note: The medium pressure filter is for the charge pump and the high pressure filter is for all machine functions except the drive circuit and oscillating axle circuit.

7 Open the engine side turntable cover and locate the two filters mounted below the hydraulic pumps.

Note: The medium pressure filter is located on the right. The high pressure filter is located on the left with the condition indicator.

- 8 Place a suitable container under the filters.
- 9 Remove the filter housing by using a wrench on the nut provided on the bottom of the housings.
- 10 Remove the filter element from the housings.
- 11 Inspect the housing seals and replace them if necessary.

- 12 Install the new medium and high pressure filter elements into the housings and tighten them securely.
- 13 Clean up any oil that may have spilled during the installation procedure.
- 14 Use a permanent ink marker to write the date and number of hours from the hour meter on the oil filter housings.
- 15 Start the engine from the ground controls.
- 16 Inspect the filter housings and related components to be sure that there are no leaks.

D-8 Replace the Drive Hub Oil






Note: Genie specifications require that this procedure be performed every 1000 hours or annually, whichever comes first.

Replacing the drive hub oil is essential for good machine performance and service life. Failure to replace the drive hub oil at yearly intervals may cause the machine to perform poorly and continued use may cause component damage.

Drive Hubs:

- Select the drive hub to be serviced. Drive the machine until one of the two plugs is at the lowest point.
- 2 Remove both plugs and drain the oil into a suitable container.
- 3 Drive the machine until one plug is at the top and the other is at 90 degrees.

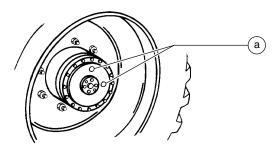

a drive hub plugs

- 4 Fill the hub with oil from the top hole until the oil level is even with the bottom of the side plug hole. Install the plugs.
- 5 Repeat this procedure for each drive hub.

Turntable Rotate Drive Hub:

Note: When removing a hose assembly or fitting, the O-ring on the fitting and/or hose end must be replaced and then torqued to specification during installation. Refer to Section 2, Hydraulic Hose and Fitting Torque Specifications.


1 Secure the turntable from rotating with the turntable rotation lock pin.

Note: The turntable rotation lock pin is located next to the boom rest pad.

- 2 Tag, disconnect and plug the hydraulic hoses from the turntable rotate drive motor. Cap the fittings on the drive motor.
- 3 Attach a suitable lifting device to the lifting eyes located near the drive motor.
- 4 Remove the drive hub mounting bolts. Carefully remove the turntable rotate drive hub assembly from the machine.

AWARNING Crushing hazard. The turntable rotate drive hub assembly could become unbalanced and fall if not properly supported by the lifting device.

5 Remove the plug from the side of the drive hub. Drain the oil from the hub into a suitable container.

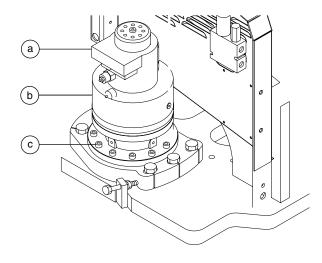

- а motor
- drive hub b
- drive hub mounting bolts
- 6 Install the drive hub assembly onto the machine. Torque the drive hub mounting bolts to specification. Refer to Section 2, Specifications.
- 7 Fill the drive hub with oil from the side hole until the oil level is even with the bottom of the hole. Apply pipe thread sealant to the plug. Install the plug.
- 8 Adjust turntable rotation gear backlash. Refer to Repair Procedure 11-1, How to Adjust the Turntable Rotation Gear Backlash.

D-9 Perform Engine Maintenance -Deutz Models





Note: Engine specifications require that this procedure be performed every 1500 hours of operation.

Proper engine maintenance, following the engine manufacturer's maintenance schedule, is essential to good engine performance and service life. Failure to perform the maintenance procedures can lead to poor engine performance and component damage.

Required maintenance procedures and additional engine information are available in the Deutz 913 Operator Handbook (Deutz part number 0297 7341).

Deutz 913 Operator Handbook

Genie part number

62446

To access the engine:

1 Remove the engine tray retaining fastener located under the engine tray. Swing the engine tray out away from the machine and secure.



AWARNING Crushing hazard. Failure to install the fastener into the engine tray anchor hole to secure the engine tray from moving could result in death or serious injury.

Checklist E Procedures

E-1 Test or Replace the Hydraulic Oil









Note: Genie specifications require that this procedure be performed every 2000 hours or every two years, whichever comes first.

Replacement or testing of the hydraulic oil is essential for good machine performance and service life. Dirty oil and suction strainers may cause the machine to perform poorly and continued use may cause component damage. Extremely dirty conditions may require oil changes to be performed more frequently.

Note: Before replacing the hydraulic oil, the oil may be tested by an oil distributor for specific levels of contamination to verify that changing the oil is necessary. If the hydraulic oil is not replaced at the two year inspection, test the oil quarterly. Replace the oil when it fails the test.

Note: Perform this procedure with the boom in the stowed position.


Note: When removing a hose assembly or fitting, the O-ring (if equipped) on the fitting and/or the hose end must be replaced. All connections must be torqued to specification during installation. Refer to Section 2, *Hydraulic Hose and Fitting Torque Specifications*.

1 Remove the fuel tank. Refer to Repair Procedure 10-1, *How to Remove the Fuel Tank*.

2 Close the two hydraulic shutoff valves located at the hydraulic tank (if equipped).



Component damage hazard. The engine must not be started with the hydraulic tank shutoff valves in the CLOSED position or component damage will occur. If the tank valves are closed, remove the key from the key switch and tag the machine to inform personnel of the condition.

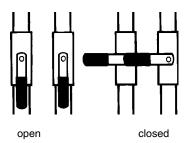

- 3 Remove the drain plug from the hydraulic tank and completely drain the tank into a suitable container. Refer to Section 2, *Specifications*.
- 4 Tag, disconnect and plug the two suction hoses that are attached to the hydraulic tank shutoff valves.
- 5 Disconnect and plug the T-fitting located at the return filter with the two hoses connected to it. Cap the fitting on the return filter housing.
- 6 Disconnect and plug the supply hose for the auxiliary power unit. Cap the fitting on the hydraulic tank.

- 7 Remove the retaining fasteners from the hydraulic tank hold down straps. Remove the hold down straps from the hydraulic tank.
- 8 Support the hydraulic tank with two lifting straps. Place one lifting strap at each end of the tank and attach the lifting straps to an appropriate lifting device.
- 9 Remove the hydraulic tank from the machine.

AWARNING Crushing hazard. The hydraulic tank may become unbalanced and fall if it is not properly supported and secured to the lifting device.

- 10 Remove the suction strainers from the tank and clean them using a mild solvent.
- 11 Rinse out the inside of the tank using a mild solvent.
- 12 Install the suction strainers using pipe thread sealant on the threads.
- 13 Install the drain plug using pipe thread sealant on the threads.
- 14 Install the hydraulic tank onto the machine.
- 15 Install the two suction hoses and the supply hose for the auxiliary power unit.
- 16 Fill the tank with hydraulic oil until the level is within the top 2 inches / 5 cm of the sight gauge. Do not overfill.
- 17 Clean up any oil that may have spilled.

18 Open the hydraulic tank shutoff valves (if equipped).

Component damage hazard. Be sure to open the two hydraulic tank shutoff valves and prime the pump after installing the hydraulic tank. Refer to Repair Procedure 8-2, How to Prime the Pump.

Note: Always use pipe thread sealant when installing the drain plug and strainers.

19 Operate all machine functions through a full cycle and check for leaks.

note: Genie specifications require additional equipment and special installation instructions for the approved optional fluids. Consult the Genie Service Department before use.

E-2 Perform Engine Maintenance -Perkins Models





Note: Engine specifications require that this procedure be performed every 2000 hours.

Proper engine maintenance, following the engine manufacturer's maintenance schedule, is essential to good engine performance and service life. Failure to perform the maintenance procedures can lead to poor engine performance and component damage.

Required maintenance procedures and additional engine information are available in the Perkins 704-30 Operator Handbook (Perkins part number TPD 1336E).

Perkins 704-30 Operator Handbook

Genie part number

101840

To access the engine:

1 Remove the engine tray retaining fastener located under the engine tray. Swing the engine tray out away from the machine and secure it from moving.



AWARNING Crushing hazard. Failure to install the fastener into the engine tray anchor hole to secure the engine tray from moving could result in death or serious injury.

E-3 Grease the Steer Axle Wheel **Bearings - 2WD Models**





Note: Genie specifications require that this procedure be performed every 2000 hours or every two years, whichever comes first.

Maintaining the steer axle wheel bearings is essential for safe machine operation and service life. Operating the machine with loose or worn wheel bearings may cause an unsafe operating condition and continued use may result in component damage. Extremely wet or dirty conditions or regular steam cleaning and pressure washing of the machine may require that this procedure be performed more often.

- 1 Loosen the wheel lug nuts. Do not remove them.
- 2 Block the non-steer wheels. Center a lifting jack under the steer axle.
- 3 Raise the machine approximately 6 inches / 15 cm. Place blocks under the drive chassis for support.
- 4 Remove the lug nuts. Remove the tire and wheel assembly.

- 5 Check for wheel bearing wear by attempting to move the wheel hub side to side, then up and down.
- Result: There should be no side to side or up and down movement.

Skip to step 10 if there is no movement.

6 Remove the dust cap from the hub and remove the cotter pin from the castle nut.

Note: Always replace the cotter pin with a new one when removing the castle nut or when checking the torque of the castle nut.

- 7 Tighten the castle nut to 35 ft-lbs / 47 Nm to seat the bearings.
- 8 Fully loosen the castle nut, then torque the castle nut to 8 ft-lbs / 11 Nm.
- 9 Check for wheel bearing wear by attempting to move the wheel hub side to side, then up and down.
- Result: If there is side to side or up and down movement, proceed to step 10 to replace the wheel bearings with new ones.

Note: When replacing a wheel bearing, both the inner and outer bearings, including the pressed-in races, must be replaced.

• Result: If there is no side to side or up and down movement, grease the wheel bearings.

10 Remove the castle nut.

Note: Always replace the cotter pin with a new one when removing the castle nut or when checking the torque of the castle nut.

- 11 Pull the hub off of the spindle. The washer and outer bearing should fall loose from the hub.
- 12 Place the hub on a flat surface and gently pry the bearing seal out of the hub. Remove the inner bearing.
- 13 Pack both bearings with clean, fresh grease.
- 14 Place the large inner bearing into the rear of the hub.
- 15 Install a new bearing grease seal into the hub by pressing it evenly into the hub until it is flush.

Note: Always replace the bearing grease seal when removing the hub.

16 Slide the hub onto the yoke spindle.



Component damage hazard. Do not apply excessive force or damage to the lip of the seal may occur.

- 17 Place the outer bearing into the hub.
- 18 Install the washer and castle nut.
- 19 Torque the castle nut to 35 ft-lbs / 47 Nm to seat the bearings.
- 20 Loosen the castle nut, then torque the castle nut to 8 ft-lbs / 11 Nm.

21 Install a new cotter pin. Bend the cotter pin to lock it in place.

Note: Always replace the cotter pin with a new one when removing the castle nut or when checking the torque of the castle nut.

- 22 Install the dust cap.
- 23 Install the tire and wheel assembly. Torque the wheel lug nuts. Refer to Section 2, *Specifications.*
- 24 Center a lifting jack under the steer axle.
- 25 Raise the machine approximately 6 inches / 15 cm. Remove the blocks from under the drive chassis.
- 26 Lower the machine.

E-4 Perform Engine Maintenance Deutz and Perkins Models





Note: Engine specifications require that this procedure be performed every 3000 hours.

Proper engine maintenance, following the engine manufacturer's maintenance schedule, is essential to good engine performance and service life. Failure to perform the maintenance procedures can lead to poor engine performance and component damage.

Required maintenance procedures and additional engine information are available in the *Deutz 913 Operator Handbook* (Deutz part number 0297 7341) OR the *Perkins 704-30 Operator Handbook* (Perkins part number TPD 1336E).

Deutz 913 Operator Handbook Genie part number	62446
Perkins 704-30 Operator Handbook Genie part number	101840

To access the engine:

1 Remove the engine tray retaining fastener located under the engine tray. Swing the engine tray out away from the machine and secure it from moving.

AWARNING Crushing hazard. Failure to install the fastener into the engine tray anchor hole to secure the engine tray from moving could result in death or serious injury.



This page intentionally left blank.

Repair Procedures



Observe and Obey:

- Repair procedures shall be completed by a person trained and qualified on the repair of this machine.
- ☑ Immediately tag and remove from service a damaged or malfunctioning machine.
- Repair any machine damage or malfunction before operating the machine.

Before Repairs Start:

- ☑ Read, understand and obey the safety rules and operating instructions in the Genie S-80 and Genie S-85 Operator's Manual on your machine.
- ☑ Be sure that all necessary tools and parts are available and ready for use.
- Read each procedure completely and adhere to the instructions. Attempting shortcuts may produce hazardous conditions.
- Unless otherwise specified, perform each repair procedure with the machine in the following configuration:
 - · Machine parked on a flat, level surface
 - · Boom in the stowed position
 - Turntable rotated with the boom between the non-steering wheels
 - Turntable secured with the turntable rotation lock pin
 - Key switch in the off position with the key removed
 - · Wheels chocked
 - All external AC power supply disconnected from the machine

About This Section

Most of the procedures in this section should only be performed by a trained service professional in a suitably equipped workshop. Select the appropriate repair procedure after troubleshooting the problem.

Perform disassembly procedures to the point where repairs can be completed. Then to re-assemble, perform the disassembly steps in reverse order.

Symbols Legend



Safety alert symbol—used to alert personnel to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

ADANGER

Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

AWARNING

Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

ACAUTION

Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.

NOTICE


Indicates a potentially hazardous situation which, if not avoided, may result in property damage.

- Indicates that a specific result is expected after performing a series of steps.
- Indicates that an incorrect result has occurred after performing a series of steps.

Platform Controls

The platform control box contains one printed circuit board. The ALC-500 circuit board inside the platform control box controls all proportional machine functions from the platform. The joystick controllers at the platform controls utilize Hall Effect technology and require no adjustment. The operating parameters of the joysticks are stored in memory at the ECM circuit board at the platform controls. If a joystick error occurs or if a joystick is replaced, it will need to be calibrated before that particular machine function will operate. See 1-2, How to Calibrate a Joystick.

Each joystick controller should operate smoothly and provide proportional speed control over its entire range of motion.

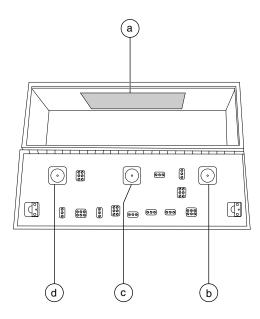

- a ALC-500 circuit board
- b drive/steer joystick controller
- boom extend/retract joystick controller
- d boom up/down and turntable rotate left/right joystick controller

1-1 ALC-500 Circuit Board

Note: When the ALC-500 circuit board is replaced, the joystick controllers will need to be calibrated. See 1-2, *How to Calibrate a Joystick.*

How to Remove the ALC-500 Circuit Board

- 1 Push in the Emergency Stop button to the off position at both the ground and platform controls.
- 2 Remove the platform control box lid retaining fasteners. Open the control box lid.
- 3 Locate the ALC-500 circuit board mounted to the inside of the platform control box.

AWARNING Electrocution/burn hazard. Contact with electrically charged circuits could result in death or serious injury. Remove all rings, watches

and other jewelry.

Attach a grounded wrist strap to the ground

screw inside the platform control box.

Component damage hazard. Electrostatic discharge (ESD) can damage printed circuit board components. Maintain firm contact with a metal part of the machine that is grounded at all times when handling printed circuit boards OR use a grounded wrist strap.

Genîe

- 5 Carefully disconnect the wire connectors from the circuit board.
- 6 Remove the ALC-500 circuit board mounting fasteners.
- 7 Carefully remove the ALC-500 circuit board from the platform control box.

1-2 Joysticks

How to Calibrate a Joystick

The joysticks on this machine utilize digital Hall Effect technology for proportional control. If a joystick is disconnected or replaced, it must be calibrated before that particular machine function will operate.

Note: The joystick must be calibrated before the threshold, max-out or ramping can be set.

Note: Perform this procedure with the engine off.

- 1 Pull out the red Emergency Stop button to the on position at both the ground and platform controls.
- 2 Turn the key switch to platform control. Do not start the engine.
- 3 Press down the foot switch and select a joystick to calibrate.
- 4 Move the joystick full stroke in either direction and hold for 5 seconds.
- 5 Return the joystick to the neutral position, pause for a moment, then move the joystick full stroke in the opposite direction. Hold for 5 seconds and return the joystick to the neutral position.
- Result: The alarm should sound indicating successful joystick calibration.
- 6 Repeat this procedure for each joystick controlled machine function including the thumb rocker steer switch.

Note: No machine fuction should operate while performing the joystick calibration procedure.

How to Adjust the Joystick Max-out Setting

The max-out setting of a joystick controls the maximum speed of a joystick-controlled machine function. Whenever a hydraulic cylinder, drive motor or hydraulic pump is replaced, the max-out setting should be adjusted to maintain optimum performance. The max-out settings on the joystick can be changed to compensate for hydraulic pump wear to maintain peak performance from the machine.

Note: Perform this procedure with the boom in the stowed position.

Note: If a max-out adjustment has been made to any joystick function other than the limited drive speed (raised or extended), the limited drive speed must be checked. Refer to steps 14 thru 19.

- 1 Pull out the red Emergency Stop button to the on position at both the ground and platform controls.
- 2 Turn the key switch to platform control. Do not start the engine.
- 3 Push in the platform controls red Emergency Stop button to the off position.
- 4 Do not press down the foot switch.
- Move and hold the drive enable toggle switch in the right position and pull out the red Emergency Stop button to the on position.
- 6 When the alarm sounds, release the drive enable toggle switch.

- 7 Momentarily activate the drive enable toggle switch in the right direction 4 times.
- Result: There should be a pause and the alarm should sound 4 times indicating that the machine is in max-out calibration mode.
- 8 Start the engine from the platform controls and press down the foot switch.
- 9 Start a timer and activate the machine function that needs to be adjusted. Record the time it takes for that function to complete a full cycle (ie; boom up).
- 10 Compare the machine function time with the table below and determine whether the function time needs to increase or decrease.
- 11 While the joystick is activated, adjust the maxout setting to achieve the proper function cycle time. Momentarily move the drive enable toggle switch in the right direction to increase the time or momentarily move the drive enable toggle switch in the left direction to decrease the time.

Note: Each time the drive enable toggle switch is momentarily moved, the time will change in 2% increments.

- 12 Repeat steps 9 through 11 for each joystick controlled machine function.
- 13 Return the joystick to the neutral position and wait for approximately 10 seconds.
- Result: The alarm should sound indicating that the settings have been saved in memory.

Note: Do not operate any machine function during the 10 second waiting time.

14 Cycle the red Emergency Stop button off, then back on.

Function speeds (factory setti	ngs)
Boom up	89 to 93 seconds
Boom down	90 to 94 seconds
Boom extend	73 to 79 seconds
Boom retract	79 to 84 seconds
Turntable rotate, 360° boom fully stowed	80 to 84 seconds

How to Adjust the Joystick Ramp Rate Setting

The ramp rate setting of a joystick controls the time at which it takes for the joystick to reach maximum output, when moved out of the neutral position. The ramp rate settings of a joystick can be changed to compensate for hydraulic pump wear to maintain peak performance from the machine.

Note: Perform this procedure with the boom in the stowed position.

- 1 Pull out the red Emergency Stop button to the on position at both the ground and platform controls.
- 2 Turn the key switch to platform control. Do not start the engine.
- 3 Push in the platform controls red Emergency Stop button to the off position.
- 4 Do not press down the foot switch.
- 5 Move and hold the drive enable toggle switch in the right position and pull out the red Emergency Stop button to the on position.
- 6 When the alarm sounds, release the drive enable toggle switch.
- 7 Momentarily activate the drive enable toggle switch in the right direction 6 times.
- Result: There should be a pause and the alarm should sound 6 times indicating that the machine is in ramp rate calibration mode.
- 8 Start the engine from the platform controls and press down the foot switch.

- 9 Start a timer and simultaneously move the joystick in either direction full stroke. Note how long it takes the function to reach maximum speed. This is the ramp rate.
- 10 Compare the function ramp rate time with the table below and determine whether the ramp rate time needs to increase or decrease.
- 11 While the joystick is activated, set the ramp rate. Momentarily move the drive enable toggle switch in the right direction to increase the time or momentarily move the drive enable toggle switch in the left direction to decrease the time.

Note: Each time the drive enable toggle switch is momentarily moved, the time will change in 10% increments.

- 12 Repeat steps 9 through 11 for each joystick controlled machine function.
- 13 Return the joystick to the neutral position and wait for approximately 10 seconds.
- Result: The alarm should sound indicating that the settings have been saved in memory.

Note: Do not operate any machine function during the 10 second waiting time.

14 Cycle the red Emergency Stop button off, then back on.

Ramp rate (factory settings)			
Boom up/down and turntable rotate			
3 seconds			
1 second			
4 seconds			
1 second			
4 seconds			
0.5 second			
0.75 second			
1 second			
1 second			
1 second			
4 seconds			

How to Adjust the Joystick Threshold Setting

The threshold setting of a joystick is the minimum output at which a function proportional valve can open and allow the function to operate.

Note: Perform this procedure with the boom in the stowed position.

- 1 Pull out the red Emergency Stop button to the on position at both the ground and platform controls.
- 2 Turn the key switch to platform control. Do not start the engine.
- 3 Push in the platform controls red Emergency Stop button to the off position.
- 4 Do not press down the foot switch.
- 5 Move and hold the drive enable toggle switch in the right position and pull out the red Emergency Stop button to the on position.
- 6 When the alarm sounds, release the drive enable toggle switch.
- 7 Momentarily activate the drive enable toggle switch in the right direction 8 times.
- Result: There should be a pause and the alarm should sound 8 times indicating that the machine is in threshold calibration mode.
- 8 Start the engine from the platform controls and press down the foot switch.
- 9 Select a boom function joystick to set the threshold.

- 10 Slowly move the joystick off center in either direction just until the function begins to move.
- 11 Slowly move the joystick back to the neutral position. Just before the function stops moving, move the drive enable toggle switch to either side to set the threshold.
- Result: The alarm should sound indicating a successful calibration.
- 12 Repeat steps 9 through 11 for each boom joystick controlled machine function (boom up/down, boom extend/retract and turntable rotate).
- 13 Return the joystick to the neutral position and wait for approximately 10 seconds.
- Result: The alarm should sound indicating that the settings have been saved in memory.

Note: Do not operate any machine function during the 10 second waiting time.

14 Cycle the red Emergency Stop button off, then back on.

Platform Components

2-1 Platform

How to Remove the Platform

- 1 Remove the cable clamp from the top of the platform mounting weldment.
- 2 Remove the mounting fasteners from the power to platform outlet box bracket. Lay the outlet box and bracket assembly off to the side.
- 3 Remove the foot switch mounting fasteners.
- 4 Remove the cover plate from the bottom of the foot switch to access the foot switch wire terminals.
- 5 Tag and disconnect the foot switch wiring from the foot switch. Remove the cable from the back of the platform.



Electrocution/burn hazard. Contact with electrically charged circuits could result in death or serious injury. Remove all rings, watches and other jewelry.

6 Remove the platform control box mounting fasteners. Lower the control box and set it aside.



Component damage hazard. Cables can be damaged if they are kinked or pinched.

Note: If your machine is equipped with an airline to platform option, the airline must be disconnected from the platform before removal.

- 7 Support and secure the platform to an appropriate lifting device.
- 8 Remove the platform mounting fasteners and remove the platform from the machine.



Crushing hazard. The platform could become unstable and fall when it is removed from the machine if not properly supported.

Genîe

2-2 **Platform Leveling Slave Cylinder**

The slave cylinder and the rotator pivot are the two primary supports for the platform. The slave cylinder keeps the platform level through the entire range of boom motion. It operates in a closed-circuit hydraulic loop with the master cylinder. The slave cylinder is equipped with counterbalance valves to prevent movement in the event of a hydraulic line failure.

How to Remove the Platform Leveling Slave Cylinder

Note: Before cylinder removal is considered, bleed the slave cylinder to be sure there is no air in the closed loop.

Note: When removing a hose assembly or fitting, the O-ring (if equipped) on the fitting and/or the hose end must be replaced. All connections must be torqued to specification during installation. Refer to Section 2, Hydraulic Hose and Fitting Torque Specifications.

- 1 Extend the primary boom until the slave cylinder barrel-end pivot pin is accessible.
- 2 Raise the primary boom slightly and place blocks under the platform for support.

3 Lower the primary boom until the platform is resting on the blocks just enough to support the platform.

Note: Do not rest the entire weight of the boom on the blocks.

4 Remove the pin retaining fastener from the slave cylinder rod-end pivot pin. Use a soft metal drift to drive the rod-end pivot pin out.

AWARNING Crushing hazard. The jib boom could fall when the slave cylinder rod-end pivot pin is removed if not properly supported.

- 5 Remove the external snap rings from the barrelend pivot pin.
- 6 Use a soft metal drift to drive the barrel-end pivot pin out.
- 7 Carefully pull the cylinder out of the primary boom to access the hydraulic hoses.
- 8 Tag, disconnect and plug the hydraulic hoses from the slave cylinder. Cap the fittings on the cylinder.

AWARNING

Bodily injury hazard. Spraying hydraulic oil can penetrate and burn skin. Loosen hydraulic connections very slowly to allow the oil pressure to dissipate gradually. Do not allow oil to squirt or spray.

How to Bleed the Slave Cylinder

Note: Do not start the engine. Use auxiliary power for this procedure.

- 1 Raise the primary boom to a horizontal position.
- 2 Move the platform level toggle switch up and down through two platform leveling cycles to remove any air that might be in the system.

2-3 Platform Rotator

The platform rotator is a hydraulically activated helical gear assembly used to rotate the platform 160 degrees.

How to Remove the Platform Rotator

NOTICE

Component damage hazard. Mark the platform mounting weldment and the rotator flange before removing the platform mounting weldment. The platform mounting weldment must be replaced in the exact same position on the rotator flange as it was before removal. If a new rotator is installed or the rotator is disassembled, proper alignment can be achieved by rotating the rotator all the way to the left and then installing the platform mounting weldment all the way in the left position.

Note: When removing a hose assembly or fitting, the O-ring (if equipped) on the fitting and/or the hose end must be replaced. All connections must be torqued to specification during installation. Refer to Section 2, *Hydraulic Hose and Fitting Torque Specifications*.

1 Remove the platform. See 2-1, How to Remove the Platform.

2 Tag, disconnect and plug the hydraulic hoses from the platform rotator manifold. Cap the fittings on the rotator.

AWARNING

Bodily injury hazard. Spraying hydraulic oil can penetrate and burn skin. Loosen hydraulic connections very slowly to allow the oil pressure to dissipate gradually. Do not allow oil to squirt or spray.

- 3 **S-85:** Support the jib boom leveling arms and the platform mounting weldment with an appropriate lifting device. Do not apply any lifting pressure.
- Remove the mounting bolts from the platform mounting weldment. Remove the center bolt and slide the platform mounting weldment off of the platform rotator.

AWARNING Crushing hazard. The platform mounting weldment could become unbalanced and fall if not properly supported when removed from the machine.

5 Support the platform rotator with an appropriate lifting device. Do not apply any lifting pressure.

S-80:

- 6 Support the rod end of the platform leveling slave cylinder. Protect the cylinder rod from damage.
- 7 Remove the pivot pin retaining fasteners from both the slave cylinder rod-end pivot pin and the rotator pivot pin.

8 Use a soft metal drift to remove both pivot pins. Remove the platform rotator from the machine.

ACAUTION Crushing hazard. The platform rotator may become unbalanced and fall if not properly supported.

Note: When installing the platform rotator fasteners. torque the fasteners to specifications. Refer to Section 2, Specifications.

S-85:

- 6 Remove the pin retaining fasteners from the jib boom and jib boom leveling arms to platform rotator pivot pins. Do not remove the pins.
- 7 Support the jib boom leveling arms.
- 8 Use a soft metal drift to drive both pins out, then remove the platform rotator from the machine.

ACAUTION

Bodily injury hazard. The jib boom leveling arms may fall if not properly supported.

9 Lower the jib boom leveling arms.

ACAUTION

Crushing hazard. The platform rotator may become unbalanced and fall if not properly supported.

Note: When installing the platform rotator fasteners, torque the fasteners to specifications. Refer to Section 2, Specifications.


How to Bleed the Platform Rotator

Note: This procedure will require two people. Do not start the engine. Use auxiliary power for this procedure.

1 Move the function enable toggle switch to either side and activate the platform rotate toggle switch to the right then the left through two platform rotation cycles, then hold the switch to the right position until the platform is fully rotated to the right.

Before serial number 3571:

- 2 Connect a clear hose to the top bleed valve. Place the other end of the hose in a container to collect any drainage. Secure the container to the boom.
- 3 Open the top bleed valve on the rotator, but do not remove it.

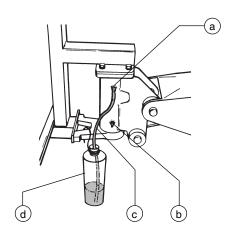

- top bleed valve
- bottom bleed valve
- container
- clear hose

4 Move the function enable toggle switch to either side and hold the platform rotate toggle switch to the left position until the platform is fully rotated to the left. Continue holding the toggle switch until air stops coming out of the bleed valve. Close the bleed valve.

AWARNING Crushing hazard. Keep clear of the platform during rotation.

- 5 Connect the clear hose to the bottom bleed valve and open the valve. Do not remove the bleed valve.
- 6 Move the function enable toggle switch to either side and hold the platform rotate toggle switch to the right position until the platform is fully rotated to the right. Continue holding the toggle switch until air stops coming out of the bleed valve. Close the bleed valve.

AWARNING Crushing hazard. Keep clear of the platform during rotation.

- 7 Remove the hose from the bleed valve and clean up any hydraulic oil that may have spilled.
- 8 Rotate the platform fully in both directions and inspect the bleed valves for leaks.

After serial number 3570:

- 2 Place a suitable container underneath the platform rotator.
- 3 Open the top bleed screw on the rotator, but do not remove it.

AWARNING

Bodily injury hazard. Spraying hydraulic oil can penetrate and burn skin. Loosen hydraulic connections very slowly to allow the oil pressure to dissipate gradually. Do not allow oil to squirt or spray.

4 Move the function enable toggle switch to either side and hold the platform rotate toggle switch to the left position until the platform is fully rotated to the left. Continue holding the toggle switch until air stops coming out of the bleed screw. Close the bleed screw.

AWARNING Crushing hazard. Keep clear of the platform during rotation.

5 Open the bottom bleed screw on the rotator, but do not remove it.

AWARNING

Bodily injury hazard. Spraying hydraulic oil can penetrate and burn skin. Loosen hydraulic connections very slowly to allow the oil pressure to dissipate gradually. Do not allow oil to squirt or spray.

6 Move the function enable toggle switch to either side and hold the platform rotate toggle switch to the right position until the platform is fully rotated to the right. Continue holding the toggle switch until air stops coming out of the bleed screw. Close the bleed screw.

AWARNING Crushing hazard. Keep clear of the platform during rotation.

- 7 Clean up any hydraulic oil that may have spilled.
- 8 Rotate the platform fully in both directions and inspect the bleed screws for leaks.

2-4 **Platform Overload System**

How to Calibrate the Platform Overload System (if equipped)





Calibration of the platform overload system is essential to safe machine operation. Continued use of an improperly calibrated platform overload system could result in the system failing to sense an overloaded platform. The stability of the machine is compromised and it could tip over.

Note: Perform this procedure with the machine on a firm, level surface.

- 1 Turn the key switch to platform control. Start the engine and level the platform.
- 2 Determine the maximum platform capacity. Refer to the machine serial plate.
- 3 Remove all weight, tools and accessories from the platform.

Note: Failure to remove all weight, tools and accessories from the platform will result in an incorrect calibration.

4 Using a suitable lifting device, place a test weight equal to the maximum platform capacity at the center of the platform floor.

- 5 Move the platform up and down by hand, so it bounces approximately 2.5 to 5 cm / 1 to 2 inches. Allow the platform to settle.
- Result: The overload indicator lights are off and the alarm does not sound. Proceed to step 6.
- Result: The overload indicator lights are flashing at the platform and ground controls, and the alarm is sounding. Slowly tighten the load spring adjustment nut in a clockwise direction in 10° increments until the overload indicator light turns off, and the alarm does not sound. Proceed to step 8.

Note: The platform will need to be moved up and down and allowed to settle between each adjustment.

Note: There may be a 2 second delay before the platform overload indicator light and alarm responds.

- 6 Move the platform up and down by hand, so it bounces approximately 2.5 to 5 cm / 1 to 2 inches. Allow the platform to settle.
- Result: The overload indicator lights are off at the platform and ground controls, and the alarm does not sound. Slowly loosen the load spring adjustment nut in a counterclockwise direction in 10° increments until the overload indicator light flashes at both the platform and ground controls, and the alarm sounds. Proceed to step 7.
- Result: The overload indicator lights are flashing at the platform and ground controls, and the alarm is sounding. Repeat this procedure beginning with step 5.

Note: The platform will need to be moved up and down and allowed to settle between each adjustment.

Note: There may be a 2 second delay before the platform overload indicator lights and alarm responds.

- 7 Move the platform up and down by hand, so it bounces approximately 2.5 to 5 cm / 1 to 2 inches. Allow the platform to settle.
- Result: The overload indicator lights are off and the alarm does not sound. Proceed to step 8.
- Result: The overload indicator lights are flashing at the platform and ground controls, and the alarm is sounding. Repeat this procedure beginning with step 5.

Note: There may be a 2 second delay before the platform overload indicator light and alarm responds.

- 8 Add an additional 10 lb / 4.5 kg test weight to the platform.
- Result: The overload indicator light is flashing at both the ground and platform controls, and the alarm is sounding. Proceed to step 9.
- Result: The overload indicator light is off at both the ground and platform controls, and the alarm does not sound. Remove the additional 10 lb / 4.5 kg test weight. Repeat this procedure beginning with step 6.

Note: There may be a 2 second delay before the platform overload indicator light and alarm responds.

- 9 Test all machine functions from the platform controls.
- Result: All platform control functions should not operate.

- 10 Turn the key switch to ground control.
- 11 Test all machine functions from the ground controls.
- Result: All ground control functions should not operate.
- 12 Using a suitable lifting device, lift the test weight off the platform floor.
- Result: The platform overload indicator light should be off at both the ground and platform controls and the alarm should not sound.

Note: There may be a 2 second delay before the overload indicator lights and alarm turn off.

- 13 Test all machine functions from the ground controls.
- Result: All ground control functions should operate normally.
- 14 Turn the key switch to platform control.
- 15 Test all machine functions from the platform controls.
- Result: All platform control functions should operate normally.

Jib Boom Components, S-85

3-1 Jib Boom

How to Remove the Jib Boom

Note: Perform this procedure with the boom in the stowed position.

Note: When removing a hose assembly or fitting, the O-ring (if equipped) on the fitting and/or the hose end must be replaced. All connections must be torqued to specification during installation. Refer to Section 2, Hydraulic Hose and Fitting Torque Specifications.

1 Remove the platform. See 2-1, How to Remove the Platform.

Note: Models equipped with platform overoad system: If the platform overload components are disassembled and/or removed from the platform support, the platform overload system will need to be calibrated. See 2-4, How to Calibrate the Platform Overload System.

- 2 Models equipped with platform overload system: Tag and disconnect the electrical connector from the platform load sense module.
- 3 Remove the hose and cable cover from the side of the jib boom.
- 4 Remove the hose and cable clamp from the jib boom pivot pin. Lay all hoses and cables to the side.

4 - 16

Component damage hazard. Hoses and cables can become damaged if they are kinked or pinched.

5 Tag, disconnect and plug the jib boom lift cylinder hydraulic hoses. Cap the fittings on the cylinder.

AWARNING

Bodily injury hazard. Spraying hydraulic oil can penetrate and burn skin. Loosen hydraulic connections very slowly to allow the oil pressure to dissipate gradually. Do not allow oil to squirt or spray.

- 6 Attach a lifting strap from an overhead crane to the jib boom assembly.
- 7 Place blocks under the platform leveling cylinder for support. Protect the cylinder rod from damage.
- 8 Remove the pin retaining fastener from the slave cylinder rod-end pivot pin. Use a soft metal drift to remove the pin.

AWARNING Crushing hazard. The jib boom could fall when the slave cylinder rod-end pivot pin is removed if not properly attached to the overhead crane.

- Remove the pin retaining fastener from the jib boom bellcrank to primary boom pivot pin.
- 10 Use a soft metal drift to remove the pin and carefully remove the jib boom assembly from the primary boom.

AWARNING Crushing hazard. The jib boom could become unbalanced and fall when removed from the machine if not properly attached to the overhead crane.

JIB BOOM COMPONENTS, S-85

3-2 Jib Boom Lift Cylinder

How to Remove the Jib Boom Lift Cylinder

Note: Perform this procedure with the boom in the stowed position.

Note: When removing a hose assembly or fitting, the O-ring (if equipped) on the fitting and/or the hose end must be replaced. All connections must be torqued to specification during installation. Refer to Section 2, Hydraulic Hose and Fitting Torque Specifications.

1 Raise the jib boom slightly and place blocks under the platform mounting weldment. Then lower the jib boom until the platform is resting on the blocks just enough to support the platform.

Note: Do not rest the entire weight of the boom on the blocks.

2 Tag, disconnect and plug the jib boom lift cylinder hydraulic hoses. Cap the fittings on the cylinder.

AWARNING Bodily injury hazard. Spraying hydraulic oil can penetrate and burn skin. Loosen hydraulic connections very slowly to allow the oil pressure to dissipate gradually. Do not allow oil to squirt or spray.

- 3 Remove the pin retaining fasteners from the jib boom lift cylinder rod-end pivot pin. Do not remove the pin.
- 4 Use a soft metal drift to tap the jib boom lift cylinder rod-end pivot pin half way out. Then lower one of the leveling arms to the ground. Tap the pin the other direction and lower the opposite leveling arm. Do not remove the pin.
- 5 Attach a lifting strap from an overhead crane to the lug at the rod end of the jib boom lift cylinder.
- 6 Remove the pin retaining fastener from the jib boom lift cylinder barrel-end pivot pin. Use a soft metal drift to remove the pin.
- 7 Use a soft metal drift to remove the jib boom lift cylinder rod-end pin. Remove the cylinder from the machine.

AWARNING

Crushing hazard. The jib boom lift cylinder could become unbalanced and fall if not properly supported when removed from the machine.

Boom Components

4-1 Cable Track

The boom cable track guides cables and hoses running up the boom. It can be repaired link by link without removing the cables and hoses that run through it. Removing the entire boom cable track is necessary when performing major repairs that involve removing the boom.

How to Remove the Cable Track

Note: When removing a hose assembly or fitting, the O-ring (if equipped) on the fitting and/or the hose end must be replaced. All connections must be torqued to specification during installation. Refer to Section 2, *Hydraulic Hose and Fitting Torque Specifications*.

- 1 Open the platform control box.
- 2 Tag and disconnect the foot switch wiring from the terminal strip inside the platform control box.
- 3 Loosen the squeeze connector and remove the foot switch cable from the control box.
- 4 Disconnect the wire connectors from the bottom of the platform control box.

Note: When installing the wire connectors to the bottom of the platform control box, match the color of the connectors to those on the control box to be sure they are installed in the correct location.

5 Remove the mounting fasteners from the power to platform outlet box bracket. Lay the outlet box and bracket assembly off to the side. 6 S-80: Tag, disconnect and plug the hydraulic hoses from the counterbalance valve manifold located on the platform rotator. Cap the fittings on the manifold.

AWARNING

Bodily injury hazard. Spraying hydraulic oil can penetrate and burn skin. Loosen hydraulic connections very slowly to allow the oil pressure to dissipate gradually. Do not allow oil to squirt or spray.

7 Tag, disconnect and plug the hydraulic hoses from the platform leveling slave cylinder at the union and connect the hoses from the cylinder together using a connector.

AWARNING

Bodily injury hazard. Spraying hydraulic oil can penetrate and burn skin. Loosen hydraulic connections very slowly to allow the oil pressure to dissipate gradually. Do not allow oil to squirt or spray.

S-85:

- 8 Remove the hose and cable cover from the side of the jib boom.
- 9 Tag, disconnect and plug the hydraulic hoses from the jib boom/platform rotate select manifold. Cap the fittings on the manifold.

- 10 Tag, disconnect and plug the wiring from the jib boom/platform rotate select manifold.
- 11 Tag, disconnect and plug the hydraulic hoses from the jib boom lift cylinder. Cap the fittings on the cylinder.

AWARNING

Bodily injury hazard. Spraying hydraulic oil can penetrate and burn skin. Loosen hydraulic connections very slowly to allow the oil pressure to dissipate gradually. Do not allow oil to squirt or spray.

All models:

- 12 From the ground controls, raise the boom to a horizontal position.
- 13 Remove the fasteners from the drive speed limit switch bracket (LS1RS) mounted on the side of the boom at the platform end of the boom. Do not remove the limit switch from the bracket.
- 14 Remove the cotter pin from the upper cable track at the platform end of the boom.

Note: Always replace the cotter pin with a new one.

- 15 Remove the cable track guide fasteners from the cable track guides at the platform end of the boom. Remove the cable track guides from the boom.
- 16 Remove the cable clamp from the pivot end of the boom.

17 Place blocks between the upper and lower cable tracks and secure the upper and lower tracks together.

AWARNING

Crushing hazard. If the upper and lower cable tracks are not properly secured together, the cable track could become unbalanced and fall when removed from the machine.

- 18 Attach a lifting strap from an overhead crane to the cable track.
- 19 Remove the mounting fasteners that attach the lower cable track to the boom.
- 20 Remove the cable track from the machine and place it on a structure capable of supporting it.

AWARNING Crushing hazard. The cable track could become unbalanced and fall if not properly attached to the overhead crane.

Component damage hazard. Cables and hoses can be damaged if they are kinked or pinched.

Component damage hazard. The cable track can be damaged if it is twisted.

How to Repair the Cable Track

Note: Component damage hazard. The boom cable track can be damaged if it is twisted.

Note: A cable track repair kit is available through the Genie Service Parts Department, part no. 77896. The kit includes a 4-link section of cable track.

- 1 Visually inspect the cable track and determine which 4-link section needs to be replaced.
- 2 Carefully remove the snap rings from each end of the damaged section of cable track.
- 3 Remove the retaining fasteners from the upper black rollers from the 4-link section of cable track to be replaced. Remove the rollers.
- 4 Lift up the hoses and cables and carefully remove the damaged 4-link section of cable track.

NOTICE

Component damage hazard. Hoses and cables can be damaged if they are kinked or pinched.

5 Remove the upper rollers from the replacement section of cable track.

6 Lift up the hoses and cables and carefully insert the new 4-link section of cable track.

NOTICE

Component damage hazard. Hoses and cables can be damaged if they are kinked or pinched.

- 7 Connect the ends of the replacement cable track section to the existing cable track using the snap rings.
- 8 Install the rollers onto the new section of cable track.
- 9 Operate the boom extend/retract function through a full cycle to ensure smooth operation of the new section of cable track.

4-2 Boom

How to Shim the Boom

1 Measure each wear pad.

Note: Replace the pad if thickness is less than minimum specification. If thickness is more than minimum specification, perform the following procedure. Refer to Section 3, D-1, Boom Wear Pad Specifications

- 2 Extend the boom until the wear pads are accessible.
- 3 Loosen the wear pad mounting fasteners.
- 4 Install the new shims under the wear pad to obtain zero clearance and zero drag.
- 5 Tighten the mounting fasteners.
- 6 Extend and retract the boom through an entire cycle. Check for tight spots that could cause binding or scraping.

Note: Always maintain squareness between the outer and inner boom tubes.

How to Remove the Primary Boom

 
AWARNING Bodily injury hazard. This procedure requires specific repair skills, lifting equipment and a suitable workshop. Attempting this procedure without these skills and tools could result in death or serious injury and significant component damage. Dealer service is strongly recommended.

Note: Perform this procedure with the boom in the stowed position.

Note: When removing a hose assembly or fitting, the O-ring (if equipped) on the fitting and/or the hose end must be replaced. All connections must be torqued to specification during installation. Refer to Section 2, Hydraulic Hose and Fitting Torque Specifications.

- 1 Remove the platform. See 2-1, How to Remove the Platform.
- 2 Remove the platform rotator and leveling slave cylinder. See 2-3, How to Remove the Platform Rotator.
- 3 Remove the cable track. See 4-1, How to Remove the Cable Track.
- 4 S-85: Remove the jib boom. See 3-1, How to Remove the Jib Boom.

- 5 Raise the boom to a horizontal position high enough that the boom lift cylinder rod end can clear the boom lift cylinder mounting boss.
- 6 Remove the turntable end cover.
- 7 Remove the pin retaining fasteners from the master cylinder rod-end pivot pin.
- 8 Place a rod through the pin and twist to remove the pin. Lower the rod end of the master cylinder.



- 9 Remove the fasteners from the boom angle limit switches (LS2RO and LS2RS) mounted to the inside of both turntable riser side plates at the pivot end of the boom. Do not disconnect the wiring.
- 10 Remove the fasteners from the boom extend limit switch (LS1RO) mounted next to the boom extension cylinder at the pivot end of the boom. Do not disconnect the wiring.

11 Tag, disconnect and plug the extension cylinder hydraulic hoses. Cap the fittings on the cylinder.

AWARNING

Bodily injury hazard. Spraying hydraulic oil can penetrate and burn skin. Loosen hydraulic connections very slowly to allow the oil pressure to dissipate gradually. Do not allow oil to squirt or spray.

- 12 Attach an overhead 5 ton / 5000 kg crane to the center point of the boom.
- 13 Attach a similar lifting device to the boom lift cylinder for support.
- 14 Place support blocks under the boom lift cylinder, across the turntable.
- 15 Remove the pin retaining fastener from the boom lift cylinder rod-end pin. Use a soft metal drift to remove the pin.

AWARNING Crushing hazard. The boom lift cylinder could fall if not properly supported.

- 16 Lower the rod end of the lift cylinder onto support blocks. Protect the cylinder rod from damage.
- 17 Remove the pin retaining fastener from the boom pivot pin.
- 18 Use a soft metal drift to remove the boom pivot pin. Carefully remove the boom from the machine.

AWARNING Crushing hazard. The boom could become unbalanced and fall if not properly supported by the overhead crane.

How to Disassemble the Boom

Note: Complete disassembly of the boom is only necessary if the outer or inner boom tubes must be replaced. The extension cylinder can be removed without completely disassembling the boom. See 4-4, How to Remove the Boom Extension Cylinders.

- 1 Remove the boom. See 4-2, How to Remove the Boom.
- 2 Remove the external snap rings from the extension cylinder pivot pin at the pivot end of the number 1 boom tube. Use a soft metal drift to remove the pin.
- 3 Remove and label the wear pads from the top, side, and bottom of the number 1 boom tube at the platform end of the boom.

Note: Pay careful attention to the location and quantity of shims used with each wear pad.

- 4 Remove the two wear pad stop bolts from each side of the number 1 boom tube (located on the outside).
- 5 Attach a lifting strap from an overhead crane to the number 2 and number 3 boom tubes at the platform end of the boom for support.

6 Support and slide the number 2 and 3 boom tubes out of the number 1 boom tube. Place the number 2 and 3 boom tubes on blocks for support.

AWARNING

Crushing hazard. The number 2 and 3 boom tubes could become unbalanced and fall when they are removed from the number 1 boom tube if they are not properly supported.

Note: During removal, the overhead crane strap will need to be carefully adjusted for proper balancing.

- 7 Tag and remove the wear pads from the top, side, and bottom of the number 2 boom tube at the platform end of the boom.
- 8 Remove the trunnion pin retaining fasteners at the base end of the number 2 boom tube. Use a slide hammer to remove the trunnion pins.
- 9 Attach a lifting strap from an overhead crane to the number 3 boom tube at the platform end of the boom for support.
- 10 Support and slide the number 3 boom tube out of the number 2 boom tube. Place the number 3 boom tube on blocks for support.

AWARNING Crushing hazard. The number 3 boom tube could become unbalanced and fall when removed from the number 2 boom tube if not properly supported.

Note: During removal, the overhead crane strap will need to be carefully adjusted for proper balancing.

- 11 Remove the external snap rings from the extension cylinder pivot pin at the platform end of the number 3 boom tube. Use a soft metal drift to remove the pin.
- 12 Support and slide the extension cylinder out of the pivot end of the number 3 boom tube. Place the extension cylinder on blocks for support.

AWARNING Crushing hazard. The extension cylinder could become unbalanced and fall when it is removed from the number 3 boom tube if not properly supported.

Note: During removal, the overhead crane strap will need to be carefully adjusted for proper balancing.

4-3 **Boom Lift Cylinder**

How to Remove the Boom Lift Cylinder

AWARNING

Bodily injury hazard. This procedure requires specific repair skills, lifting equipment and a suitable workshop. Attempting this procedure without these skills and tools could result in death or serious injury and significant component damage. Dealer service is strongly recommended.

Note: When removing a hose assembly or fitting, the O-ring (if equipped) on the fitting and/or the hose end must be replaced. All connections must be torqued to specification during installation. Refer to Section 2, Hydraulic Hose and Fitting Torque Specifications.

- 1 Raise the boom to a horizontal position high enough that the boom lift cylinder rod end can clear the boom lift cylinder mounting boss.
- 2 Remove the center turntable cover fasteners. Remove the cover.
- 3 Place support blocks under the boom lift cylinder across the turntable side plates.
- 4 Attach an overhead 5 ton / 5000 kg crane to the boom for support. Do not lift the boom.

5 Support the rod end of the boom lift cylinder with an overhead crane or similar lifting device.

AWARNING

Crushing hazard. The boom lift cylinder could become unbalanced and fall when it is disconnected from the machine if not properly supported.

6 Tag, disconnect and plug the boom lift cylinder hydraulic hoses. Cap the fittings on the cylinder.

AWARNING

Bodily injury hazard. Spraying hydraulic oil can penetrate and burn skin. Loosen hydraulic connections very slowly to allow the oil pressure to dissipate gradually. Do not allow oil to squirt or spray.

7 Remove the pin retaining fastener from the boom lift cylinder rod-end pivot pin. Use a soft metal drift to remove the pin, and lower the lift cylinder onto the blocks. Protect the cylinder rod from damage.

AWARNING Crushing hazard. The boom lift cvlinder could become unbalanced and fall when it is disconnected from the machine if not properly supported.

- 8 Remove the mounting fasteners from the barrel-end cylinder pivot pin retaining plates.
- 9 With the lift cylinder being supported by the overhead crane, pull the cylinder toward the platform and remove it from the machine.

AWARNING Crushing hazard. The lift cylinder could become unbalanced and fall if not properly supported.

OTICE

Component damage hazard. The cables and hydraulic hoses can be damaged if the lift cylinder is pulled across them.

4-4 **Boom Extension Cylinders**

The extension cylinder consists of two cylinders that are fastened together. The first cylinder extends and retracts the number 2 boom tube. The second cylinder extends and retracts the number 3 boom tube. The extension cylinders are equipped with counterbalance valves to prevent movement in the event of a hydraulic line failure.

How to Remove the **Boom Extension Cylinders**

AWARNING This procedure requires specific repair skills, lifting equipment and a suitable workshop. Attempting this procedure without these skills and tools could result in death or serious injury and significant component damage. Dealer service is strongly recommended.

Note: When removing a hose assembly or fitting, the O-ring (if equipped) on the fitting and/or the hose end must be replaced. All connections must be torqued to specification during installation. Refer to Section 2, Hydraulic Hose and Fitting Torque Specifications.

 
- 1 Raise the boom to a horizontal position, fully extend the boom and fully lower the platform.
- 2 Remove the 2 bolts that are located on each side of the number 3 boom tube near the platform end of the number 2 boom tube.

- 3 Place a 4 in x 4 in x 6 ft / 10 cm x 10 cm x 1.8 m block on top of the number 3 boom tube and place one end of the block against the weldment at the platform end of the boom.
- 4 Retract the boom until the number 2 boom tube is fully retracted into the number 1 boom tube.

Note: The number 3 boom tube will remain extended approximately 6 feet / 1.83 m.

- 5 Remove the external snap rings from the extension cylinder pivot pin at the platform end. Use a soft metal drift to remove the pin.
- 6 Remove the turntable end cover.
- 7 Support the rod end of the master cylinder with a lifting device.
- 8 Remove the pin retaining fastener from the master cylinder rod-end pivot pin. Place a rod through the pin and twist to remove the pin.

Note: Use the platform level toggle switch with auxiliary power to relieve pressure on the master cylinder barrel-end pivot pin.



9 Lay the master cylinder down. Protect the cylinder rod from damage.

- 10 Remove the external snap rings from the extension cylinder pivot pin at the pivot end of the boom. Use a soft metal drift to remove the pin through the access holes in the turntable riser.
- 11 Using auxiliary power, move the boom extend/retract toggle switch in the extend direction and extend the extension cylinder out the pivot end of the boom approximately 1 foot / 30 cm.
- 12 Tag, disconnect and plug the extension cylinder hydraulic hoses. Cap the fittings on the cylinder.

AWARNING

Bodily injury hazard. Spraying hydraulic oil can penetrate and burn skin. Loosen hydraulic connections very slowly to allow the oil pressure to dissipate gradually. Do not allow oil to squirt or spray.

- 13 Attach a lifting strap from an overhead crane to the end of the extension cylinder and lift slightly to relieve the pressure on the trunnion pins.
- 14 Remove the trunnion pin access covers from both sides of the number 1 boom tube at the pivot end of the boom.

- 15 Remove the trunnion pin retaining fastener and use a slide hammer to remove the pins.
- 16 Slide the cylinder out to access the wear pads on the bottom rod support bracket. Remove the wearpads.
- 17 Support and slide the extension cylinder out of the pivot end of the boom.

AWARNING Crushing hazard. The extension cylinder could become unbalanced and fall when it is removed from the machine if not properly supported.

Note: Note the length of the cylinder after removal. The cylinder must be at the same length for installation.

Note: During re-assembly of boom, retract boom fully after installing all the pins. Install the two top 1/4-20 bolts through the access holes located mid section of the primary boom. Extend the boom and replace the two lower 1/4-20 bolts in the number 3 boom tube.

4-5 **Platform Leveling Master Cylinder**

The master cylinder acts as a pump for the slave cylinder. It is part of the closed loop hydraulic circuit that keeps the platform level through the entire range of boom motion. The master cylinder is located inside the pivot end of the boom.

How to Remove the Platform **Leveling Master Cylinder**

 
Note: When removing a hose assembly or fitting, the O-ring (if equipped) on the fitting and/or the hose end must be replaced. All connections must be torqued to specification during installation. Refer to Section 2, Hydraulic Hose and Fitting Torque Specifications.

- 1 Raise the boom until the master cylinder rod-end pivot pin is accessible.
- 2 Remove the turntable end cover to access the master cylinder.
- 3 Tag, disconnect and plug the master cylinder hydraulic hoses. Cap the fittings on the cylinder.


AWARNING

Bodily injury hazard. Spraying hydraulic oil can penetrate and burn skin. Loosen hydraulic connections very slowly to allow the oil pressure to dissipate gradually. Do not allow oil to squirt or spray.

- 4 Remove the pin retaining fastener from the master cylinder barrel-end pivot pin.
- Place a rod through the barel-end pivot pin and twist to remove the pin.



 - 6 Attach a lifting strap from an overhead crane to the lug on the rod end of the master cylinder.
- 7 Remove the pin retaining fastener from the rod-end pivot pin.
- 8 Place a rod through the rod-end pivot pin and twist to remove the pin.



9 Remove the master cylinder from the machine.

AWARNING Crushing hazard. The master cylinder could become unbalanced and fall if it is not properly supported by the lifting device when removed from the machine.

Turntable Covers

5-1 Turntable Covers

How to Remove a Turntable Cover

1 Raise the turntable cover. Support and secure the open cover with an overhead crane or forklift. Do not lift the cover.

Crushing hazard. Due to its heavy weight, do not attempt to support the cover by hand.

Component damage hazard. Protect the cover from damage by using carpet or padding on the crane or forklift forks.

- 2 Remove the upper retaining clip from the gas strut.
- 3 Gently pry the strut pivot socket off of the ball stud and lower the strut. Protect the strut cylinder rod from damage.

AWARNING Crushing hazard. The cover could fall if not properly supported when the strut is removed.

Note: Mark the location of the hinge support bracket on the bulkhead to ensure proper cover alignment during installation.

- 4 Remove the cover hinge bolts that fasten the hinge support bracket to the bulkhead.
- Carefully lift and remove the cover from the machine.

AWARNING Bodily injury hazard. Safety decals are essential to safe machine operation. Failure to replace all safety and instructional decals could create a situation resulting in death or serious injury. If a turntable cover must be replaced, be sure that all appropriate safety and instructional decals are applied to the new cover.

AWARNING

Crushing hazard. The turntable cover could become unbalanced and fall if not properly supported and secured to an appropriate lifting device.

Note: Alignment adjustments may be necessary when a new cover is installed.


Engines

6-1 RPM Adjustment

Refer to Maintenance Procedure B-10, *Check and Adjust the Engine RPM.*

6-2 Flex Plate

The flex plate couples the engine to the pump. The flex plate is bolted to the engine flywheel and has a cut-out in the center for the pump coupler.

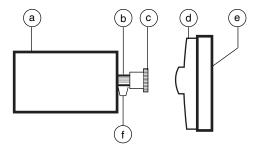

- a pump
- b pump shaft
- c pump coupler
- d flex plate with raised spline
- e engine flywheel
- f 3/16 inch / 4.8 mm gap Diesel Models 5/32 inch / 3.8 mm gap - GM Models

How to Remove the Flex Plate

Deutz models:

- 1 Remove the tailpipe bracket mounting fasteners from the engine bell housing.
- 2 Support the drive pump assembly with an appropriate lifting device.
- 3 Remove all of the engine bell housing fasteners.
- 4 Carefully pull the pump and bell housing assembly away from the engine and secure it from moving.



Component damage hazard. Hoses can be damaged if they are kinked or pinched.

5 Remove the flex plate mounting fasteners. Remove the flex plate from the flywheel.

GM models:

- 1 Remove the muffler clamp at the exhaust pipe.
- 2 Remove the muffler bracket to bell housing fasteners. Remove the muffler and bracket assembly.
- 3 Disconnect the electrical connector for the crankshaft position sensor located at the bottom of the bell housing.
- 4 Support the engine with a suitable lifting device. Do not lift it.
- 5 Remove the engine plate to vibration isolator fasteners.
- 6 Remove the engine mounting plate to bell housing fasteners.

NOTICE

Component damage hazard. The engine could fall and the crankshaft position sensor can become damaged if the engine is not properly supported when the fasteners are removed.

- 7 Slide the engine mounting plate towards the pump as far as it will go.
- 8 Support the drive pump assembly with an appropriate lifting device.
- 9 Remove all of the engine bell housing fasteners.
- 10 Carefully pull the pump and bell housing assembly away from the engine and secure it from moving.



Component damage hazard. Hoses can be damaged if they are kinked or pinched.

11 Remove the flex plate mounting fasteners. Remove the flex plate from the flywheel.

Perkins models:

- 1 Remove the fuel filter/water separator mounting fasteners.
- 2 Remove the fuel filter/water separator and lay it to the side. Do not disconnect the hoses.
- 3 Support the drive pump assembly with an appropriate lifting device.
- 4 Remove all of the engine bell housing fasteners.
- 5 Carefully pull the pump and bell housing assembly away from the engine and secure it from moving.



Component damage hazard. Hoses can be damaged if they are kinked or pinched.

6 Remove the flex plate mounting fasteners. Remove the flex plate from the flywheel.


How to Install the Flex Plate

1 Install the flex plate onto the engine flywheel with the raised spline towards the pump.


GM models: Torque the flex plate mounting bolts in sequence to 22 ft-lbs / 30 Nm. Then torque the flex plate mounting bolts in sequence to 31 ft-lbs / 42 Nm.

Deutz models: Torque the flex plate mounting bolts in sequence to 26 ft-lbs / 35 Nm. Then torque the flex plate mounting bolts in sequence to 37 ft-lbs / 51 Nm.

Perkins models: Torque the flex plate mounting bolts in sequence to 13 ft-lbs / 18 Nm. Then torque the flex plate mounting bolts in sequence to 19 ft-lbs / 26 Nm.

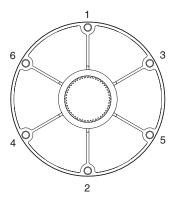


Deutz models

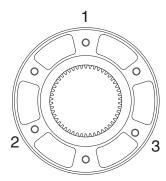


Perkins models

3 Install the pump coupler onto the pump shaft with the set screw toward the pump. Leave the appropriate gap between coupler and pump end plate for your engine.

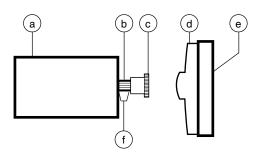

- a pump
- b pump shaft
- c pump coupler
- d flex plate with raised spline
- e engine flywheel
- f 3/16 inch / 4.8 mm gap Diesel Models 5/32 inch / 3.8 mm gap - GM Models
- 4 Apply Loctite® removable thread sealant to the pump coupler set screw. Torque the set screw to 61 ft-lbs / 83 Nm.

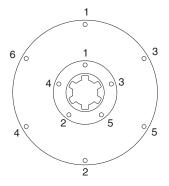

GM models

5 Install the pump and bell housing assembly.

Gm and Deutz models: Torque the bell housing mounting bolts in sequence to 37 ft-lbs / 50 Nm.


Perkins models: Torque the bell housing mounting bolts in sequence to 19 ft-lbs / 25.7.

NOTICE


Component damage hazard. When installing the pump, do not force the pump coupler into the flexplate or damage to the pump shaft seal may occur.

NOTICE


Component damage hazard. Do not force the drive pump during installation or the flex plate teeth may become damaged.

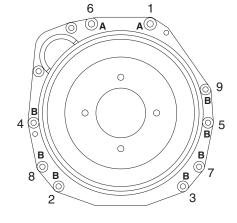

Perkins models

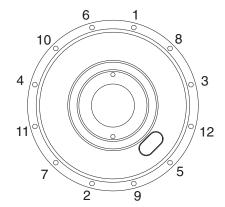

GM models

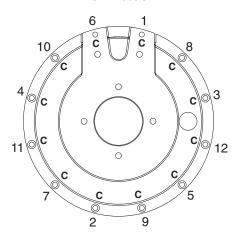

Deutz models

6-3 Engine Fault Codes -GM Models

How to Retrieve Engine Fault Codes

GM models:

When an engine malfunction is detected by the Electronic Control Module (ECM), a fault code is recorded and the check engine light will turn on at the ground controls. Special equipment is required to retrieve fault codes stored within the ECM. Contact Genie Service Department for assistance in retrieving fault codes.

Note: If the check engine light is on and the engine is stopped, tag the machine and remove from service. Contact service personnel immediately.

Note: If the check engine light is on and the engine is still running, contact service personnel within 24 hours.

Ground Controls

7-1 **Control Relays**

Relays used for single function switching are single pole double throw (SPDT) relays.

How to Test a Single Pole Double **Throw Relay**


AWARNING Electrocution/burn hazard. Contact with electrically charged circuits could result in death or serious injury. Remove all rings, watches and other jewelry.

- 1 Tag and disconnect all the wiring from the relay to be tested.
- 2 Connect the leads from an ohmmeter or continuity tester to each terminal combination and check for continuity. Terminals 85 and 86 represent the coil and should not be tested in any other combination.

Test	Desired result
terminal 85 to 86 with resistor	75 to 85Ω
terminal 87 to 87a and 30	no continuity (infinite Ω)
terminal 87a to 30	continuity (zero Ω)


3 Connect 12V DC to terminal 85 and a ground wire to terminal 86, then test the following terminal combinations.

Test	Desired result
terminal 87 to 87a and 30	no continuity (infinite Ω)
terminal 87 to 30	continuity (zero Ω)

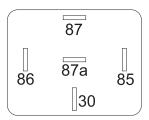

terminal no. 87a - N.C. terminal no. 85 - coil negative (-) terminal no. 30 - common terminal no. 86 - coil positive (+) terminal no. 87 - N.O.

Control Relay Schematic

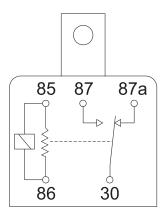

GROUND CONTROLS

7-2 **Power Relay**

AWARNING

Electrocution hazard. Contact with electrically charged circuits could result in death or serious injury. Remove all rings, watches and other jewelry.

Note: The power relay is mounted on the Auxiliary Power Unit.

How to Test the Power Relay


AWARNING Electrocution/burn hazard. Disconnect the ground cable from the battery before performing this procedure.

1 Connect the leads from an ohmmeter to each terminal combination and check for continuity.

Test	Desired result
2 small posts	12 to 16Ω
2 large posts	no continuity (infinite Ω)
Any small post to any large post	no continuity (infinite Ω)

2 Connect 12V DC to one of the small posts and a ground wire to the other small post, then test the following terminal combination.

Test	Desired result
2 large posts	continuity (zero Ω)

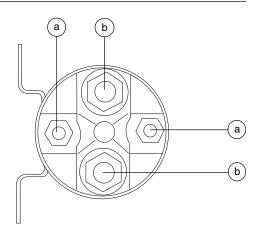

- solenoid activate coil terminal (small post)
- high amp power contact terminal (large post)

GROUND CONTROLS

7-3 **Terminal Strip**

How to Remove a Terminal Strip **Section**

AWARNING Electrocution/burn hazard. Contact with electrically charged circuits could cause death or serious injury. Remove all rings, watches and other jewelry.

- 1 Disconnect the battery(s) from the machine.
- 2 Label the wiring from the terminal strip section to be removed.
- 3 Use a small flat blade screwdriver to push in and release the wire from the terminal strip.
- 4 Locate the removal tab on the bottom or top of the terminal strip section.
- 5 Use a small flat blade screwdriver to gently pry up on the tab of the terminal strip section and remove it.

Hydraulic Pumps

8-1 Function Pump

How to Remove the Function Pump

 
Note: When removing a hose assembly or fitting, the O-ring (if equipped) on the fitting and/or the hose end must be replaced. All connections must be torqued to specification during installation. Refer to Section 2, *Hydraulic Hose and Fitting Torque Specifications*.

1 Models without hydraulic tank shutoff valves: Remove the drain plug from the hydraulic tank and completely drain the tank into a suitable container. Refer to Section 2, Specifications.

Models with hydraulic tank shutoff valves: Close the two hydraulic tank valves located at the hydraulic tank.

NOTICE

Component damage hazard. The engine must not be started with the hydraulic tank shutoff valves in the closed position or component damage will occur. If the tank valves are closed, remove the key from the key switch and tag the machine to inform personnel of the condition.



2 Tag, disconnect and plug the hydraulic hoses from the function pump. Cap the fittings on the pump.

AWARNING

Bodily injury hazard. Spraying hydraulic oil can penetrate and burn skin. Loosen hydraulic connections very slowly to allow the oil pressure to dissipate gradually. Do not allow oil to squirt or spray.

3 Remove the pump mounting fasteners. Carefully remove the pump.

NOTICE

Component damage hazard. Be sure to open the two hydraulic tank valves (if equipped) and prime the pump after installing the pump. See 8-2, *How to Prime the Pump*.

HYDRAULIC PUMPS

8-2 Drive Pump

The drive pump is a bi-directional variable displacement piston pump. The pump output is controlled by the electronic displacement controller (EDC), located on the pump. The only adjustment that can be made to the pump is the neutral or null adjustment. Any internal service to the pump should only be performed at an authorized Sundstrand-Sauer service center. Call Genie Industries Service Department to locate your local authorized service center.

How to Remove the Drive Pump

NOTICE

Component damage hazard. The work area and surfaces where this procedure will be performed must be clean and free of debris that could get into the hydraulic system and cause severe component damage. Dealer service is recommended.

Note: When removing a hose assembly or fitting, the O-ring (if equipped) on the fitting and/or the hose end must be replaced. All connections must be torqued to specification during installation. Refer to Section 2, *Hydraulic Hose and Fitting Torque Specifications*.

 Disconnect the wire harness at the electronic displacement controller (EDC), located on the drive pump.


2 Models without hydraulic tank shutoff valves: Remove the drain plug from the hydraulic tank

and completely drain the tank into a suitable container. Refer to Section 2, *Specifications*.

Models with hydraulic tank shutoff valves: Close the two hydraulic tank valves located at the hydraulic tank.

NOTICE

Component damage hazard. The engine must not be started with the hydraulic tank shutoff valves in the closed position or component damage will occur. If the tank valves are closed, remove the key from the key switch and tag the machine to inform personnel of the condition.

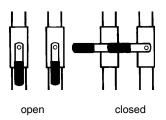

HYDRAULIC PUMPS

3 Tag, disconnect and plug the hydraulic hoses from the drive and function pumps. Cap the fittings on the pumps.

AWARNING

Bodily injury hazard. Spraying hydraulic oil can penetrate and burn skin. Loosen hydraulic connections very slowly to allow the oil pressure to dissipate gradually. Do not allow oil to squirt or spray.

- 4 Support the pumps with a suitable lifting device and remove the two drive pump mounting fasteners.
- 5 Carefully pull the drive pump out until the pump coupler separates from the flex plate.
- 6 Remove the drive pump assembly from the machine.

NOTICE

Component damage hazard. Be sure to open the two hydraulic tank valves and prime the pump after installing the pump.

Note: Before installing the pump, verify proper pump coupler spacing. See 6-2, *Flex Plate*.

How to Prime the Pump

NOTICE

Component damage hazard. Be sure that the hydraulic tank shutoff valves (if equipped) are in the open position before priming the pump. The engine must not be started with the hydraulic tank shutoff valves in the closed position or component damage will occur.

- 1 Connect a 0 to 600 psi / 0 to 40 bar pressure gauge to the diagnostic nipple on the drive pump.
- 2 GM models: Close the valve on the LPG tank, then disconnect the hose from the tank. Move the fuel select toggle switch to the LPG position.

Deutz and Perkins models: Disconnect the engine wiring harness from the fuel solenoid at the injector pump.

- 3 Crank the engine with the starter motor for 15 seconds, wait 15 seconds, then crank the engine an additional 15 seconds or until the pressure reaches 300 psi / 20.68 bar.
- 4 GM models: Connect the LPG hose to the LPG tank and open the valve on the tank.
 Deutz and Perkins models: Connect the engine wiring harness to the fuel solenoid.
- 5 Start the engine from the ground controls and check for hydraulic leaks.


Manifolds

9-1 Function Manifold Components - View 1

The function manifold assembly is located on the tank side tray, behind the ground control box.


and the same and t					
Index No.	Description	chematic Item	Function	Torque	
1	Solenoid valve, 3 position 4 way	A	. Platform rotate left/right	25-30 ft-lbs / 34-41 Nm	
2	Check valve, 30 psi / 2 bar	В	. Platform rotate circuit (prevents hydraulic hoses from draining back to tank)	20-25 ft-lbs / 27-34 Nm	
3	Check valve, 30 psi / 2 bar	C	. Platform rotate circuit (prevents hydraulic hoses from draining back to tank)	20-25 ft-lbs / 27-34 Nm	
4	Solenoid valve, 2 position 3 way	D	. Boom extend	33-37 ft-lbs / 45-50 Nm	
5	Solenoid valve, 3 position 4 way	E	. Turntable rotate left/right	25-30 ft-lbs / 34-41 Nm	
6	Relief valve, 2500 psi / 172 bar	F	. Boom extend/retract circuit	20-25 ft-lbs / 27-34 Nm	
7	Solenoid valve, 2 position 3 way	G	. Boom retract	50-55 ft-lbs / 68-75 Nm	
8	Check valve		turntable rotate left/right	8-10 ft-lbs / 10-15 Nm	
9	Differential sensing valve	1	. Boom extend/retract circuit (prevents overflowing the proportional valve)	30-35 ft-lbs / 41-47 Nm	
10	Differential sensing valve	J	. Turntable rotate left/right circuit (prevents overflowing the proportional valve)	30-35 ft-lbs / 41-47 Nm	
11	Proportional solenoid valve	K	. Boom extend/retract circuit	30-35 ft-lbs / 41-47 Nm	
12	Check valve	L	. Differential sensing circuit, platform level down	8-10 ft-lbs / 10-15 Nm	
13	Check valve	M	. Differential sensing circuit, platform level up	8-10 ft-lbs / 10-15 Nm	
14	Solenoid valve, 3 position 4 way	N	. Platform level up/down	25-30 ft-lbs / 34-41 Nm	
15	Differential sensing valve	O	. Boom up/down circuit (prevents overflowing the proportional valve)	30-35 ft-lbs / 41-47 Nm	
16	Counterbalance valve	P	. Platform level down circuit	35-40 ft-lbs / 47-54 Nm	
17	Counterbalance valve	Q	. Platform level up circuit	35-40 ft-lbs / 47-54 Nm	
18	Solenoid valve, 2 position 3 way	R	. Boom down	33-37 ft-lbs / 45-50 Nm	
19	Solenoid valve, 3 position 4 way	S	. Steer left/right and axle extend/retract	35-40 ft-lbs / 47-54 Nm	
20	Relief valve, 2900 psi / 200 bar	Т	. System relief	30-35 ft-lbs / 41-47 Nm	

This list continues. Please turn the page.

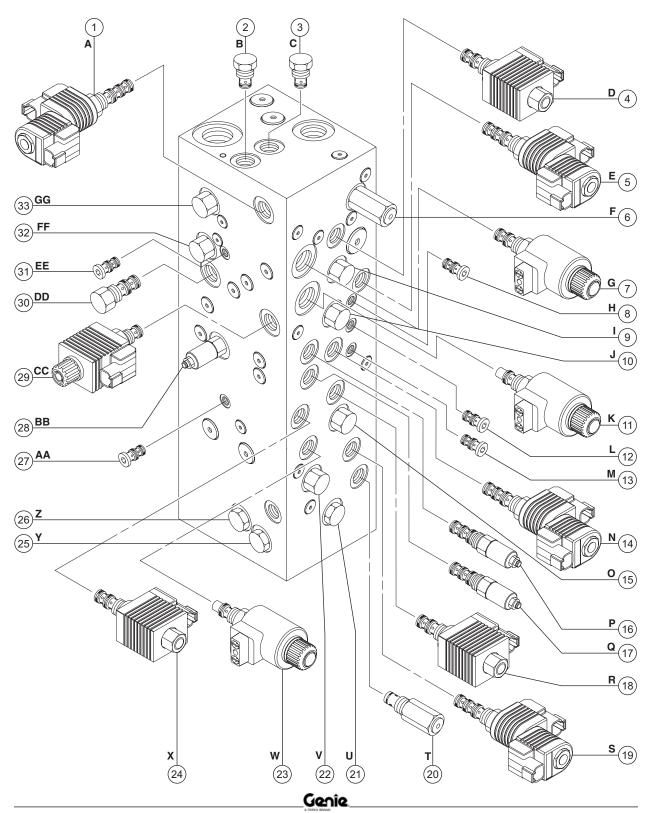

Function Manifold Components - View 1, continued


Index No.	Se Description	chematic Item	Function	Torque
21	Check valve	U	Blocks flow from auxiliary pump to function pump	30-35 ft-lbs / 41-47 Nm
22	Priority flow regulator valve, 3.5 gpm / 13.2 L/min	V	Steer circuit	30-35 ft-lbs / 41-47 Nm
23	Proportional solenoid valve	W	Boom up/down circuit	30-35 ft-lbs / 41-47 Nm
24	Solenoid valve, 2 position 3 way	X	Boom up	33-37 ft-lbs / 45-50 Nm
25	Check valve	Y	Blocks flow from function pump to auxiliary pump	30-35 ft-lbs / 41-47 Nm
26	Check valve	Z	Hydraulic oil cooler bypass	30-35 ft-lbs / 41-47 Nm
27	Check valve	AA	Boom up/down circuit	8-10 ft-lbs / 10-15 Nm
28	Needle valve	AB	Platform level circuit	30-35 ft-lbs / 41-47 Nm
29	Proportional solenoid valve	AC	Turntable rotate circuit	20-30 ft-lbs / 27-47 Nm
30	Differential sensing valve	AD	Meters flow to functions	30-35 ft-lbs / 41-47 Nm
31	Check valve	AE	Differential sensing circuit, boom extend/retract	8-10 ft-lbs / 10-15 Nm
32	Flow regulator valve, 0.1 gpm / 0.37 L/min	AF	Bleeds off differential sensing valves to tank	20-25 ft-lbs / 27-34 Nm
33	Flow regulator valve, 0.6 gpm / 2.27 L/min	AG	Platform rotate circuit	

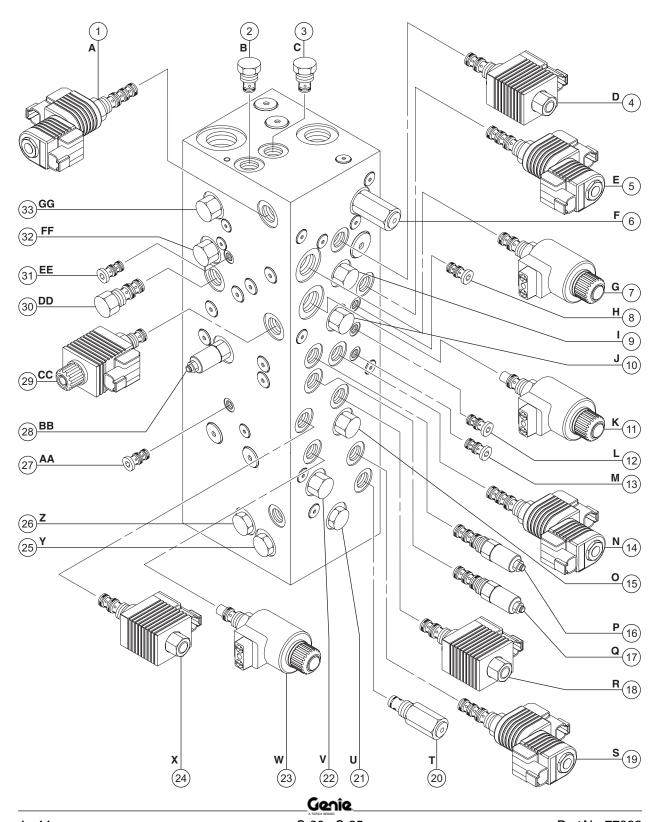

9-2 Function Manifold Components - View 2

The function manifold assembly is located on the tank side tray, behind the ground control box.

Index No.	Se Description	chematic Item	Function	Torque
1	Check valve, 30 psi / 2 bar	AH	. Platform rotate circuit (prevents hydraulic hoses from draining back to tank)	20-25 ft-lbs / 27-34 Nm
2	Flow regulator valve, 0.3 gpm / 1.14 L/min	AJ	. Dump circuit source from charge pump	20-25 ft-lbs / 27-34 Nm
3	Solenoid valve, 2 position 2 way	AK	. Allows boom functions to operate with the boom in the stowed position	26-30 ft-lbs / 34-41 Nm
4	Check valve, 30 psi / 2 bar	Al	. Blocks flow from charge pump to auxiliary pump	20-25 ft-lbs / 27-34 Nm
5	Check valve, 30 psi / 2 bar	AL	. Blocks flow from auxiliary pump to charge pump	20-25 ft-lbs / 27-34 Nm
6	Pressure Switch, 180 psi / 12.4 ba	r AY	. Axle extend pressure switch Operates axle extend light	26-30 ft-lbs / 34-41 Nm
7	Solenoid valve, 2 position 3 way	AM	. Provides pilot signal to redirect steer flow to axle extension system	26-30 ft-lbs / 34-41 Nm
8	Directional valve, 2 position 2 way pilot operated		. Dump valve that allows boom functions to operate when axles are fully extended90	0-100 ft-lbs / 122-136 Nm
9	Relief valve, 2100 psi / 145 bar	AO	. Boom down	20-25 ft-lbs / 27-34 Nm

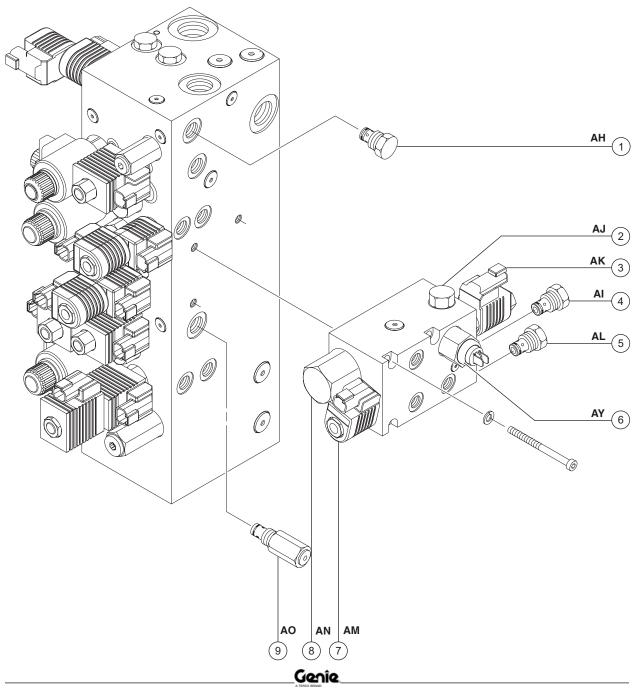

9-3 Valve Adjustments -Function Manifold

How to Adjust the System Relief Valve

Note: Perform this procedure with the boom in the stowed position.

- 1 Connect a 0 to 5000 psi / 0 to 350 bar pressure gauge to the diagnostic nipple (PTEST port) on the function manifold.
- 2 Start the engine from the ground controls.
- 3 Hold the function enable/rpm select toggle switch to the high idle position and activate and hold the boom retract toggle switch with the boom fully retracted. Observe the pressure reading on the pressure gauge. Refer to Section 2, *Hydraulic Specifications*.
- 4 Turn the engine off. Use a wrench to hold the relief valve and remove the cap (item T) on the function manifold.
- 5 Adjust the internal hex socket. Turn it clockwise to increase pressure or counterclockwise to decrease pressure. Install the relief valve cap.

AWARNING Tip-over hazard. Do not adjust the relief valves higher than specified.

Repeat steps 2 through 5 to confirm relief valve pressure.

How to Adjust the Boom Down Relief Valve

Note: Perform this procedure with the boom in the stowed position.

- 1 Connect a 0 to 5000 psi / 0 to 350 bar pressure gauge to the diagnostic nipple (PTEST port) on the function manifold.
- 2 Start the engine from the ground controls.
- 3 Hold the function enable/rpm select toggle switch to the high idle position and activate and hold the boom down toggle switch with the boom fully lowered. Observe the pressure reading on the pressure gauge. Refer to Section 2, *Hydraulic Specifications*.
- 4 Turn the engine off. Use a wrench to hold the relief valve and remove the cap (item OO) on the function manifold.
- 5 Adjust the internal hex socket. Turn it clockwise to increase pressure or counterclockwise to decrease pressure. Install the relief valve cap.

AWARNING Tip-over hazard. Do not adjust the relief valves higher than specified.

6 Repeat steps 2 through 5 and confirm relief valve pressure.

How to Adjust the Boom Extend **Relief Valve**

Note: Perform this procedure with the boom in the stowed position.

- 1 Connect a 0 to 3000 psi / 0 to 200 bar pressure gauge to the diagnostic nipple (PTEST port) on the function manifold.
- 2 Start the engine from the ground controls.
- 3 Hold the function enable/rpm select toggle switch to the high idle position and activate and hold the boom extend toggle switch with the boom fully extended. Observe the pressure reading on the pressure gauge. Refer to Section 2, Hydraulic Specifications.
- 4 Turn the engine off. Use a wrench to hold the relief valve and remove the cap (item F) on the function manifold.
- 5 Adjust the internal hex socket. Turn it clockwise to increase the pressure or counterclockwise to decrease the pressure. Then install the relief valve cap.




AWARNING Tip-over hazard. Do not adjust the relief valves higher than specified.

6 Repeat steps 2 through 5 to confirm relief valve pressure.

9-4 **Turntable Rotation Manifold Components**

The turntable rotation manifold is mounted to the turntable rotation motor at the ground control side of the machine.


Index	:	Schematic				
No.	Description	Item	Function	Torque		
1	Shuttle valve, 2 position 3 way	PP	. Turntable rotation brake releas	e 8-10 ft-lbs / 10-15 Nm		
2	Counterbalance valve	QQ	. Turntable rotate left	25-30 ft-lbs / 34-41 Nm		
3	Counterbalance valve	RR	. Turntable rotate right	25-30 ft-lbs / 34-41 Nm		

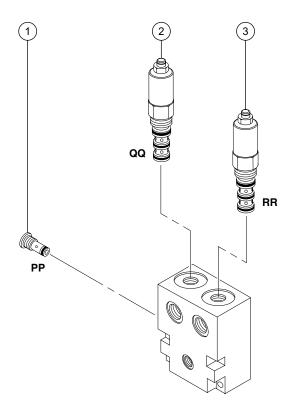

9-5 Brake/Two-Speed Manifold Components

The brake/two-speed manifold is mounted on the engine tray.


Index No.	Description	Schematic Item	Function	Torque
1	Check valve	SS	. Brake circuit	8-10 ft-lbs / 10-15 Nm
2	Solenoid valve, 2 position 3 wa	y TT	. Brake release	25-30 ft-lbs / 34-41 Nm
3	Solenoid valve, 2 position 3 wa	y UU	2-Speed wheel motors (energized in high range to destroke the drive motor swash plates)	25-30 ft-lbs / 34-41 Nm

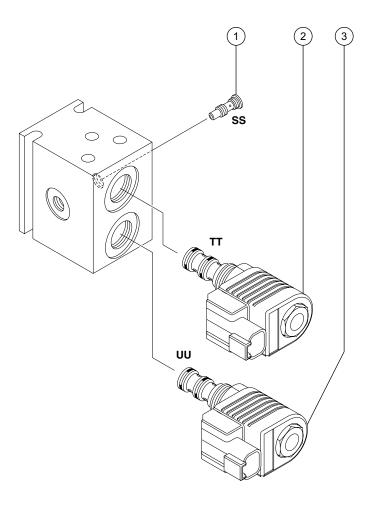

9-6 Jib Boom Select Manifold Components, S-85

The jib boom/platform rotate manifold is mounted on the platform end of the boom.


Index		Schematic				
No.	Description	Item	Function	Torque		
1	Solenoid valve, 2 position 3 way	ν VV	Platform rotate select	8-10 ft-lbs / 11-14 Nm		
2	Solenoid valve, 2 position 3 way	، ww	Jib boom select	20-25 ft-lbs / 27-34 Nm		
3	Orifice - plug 0.035 inch / 0.89 r	nm XX	lib boom circuit			

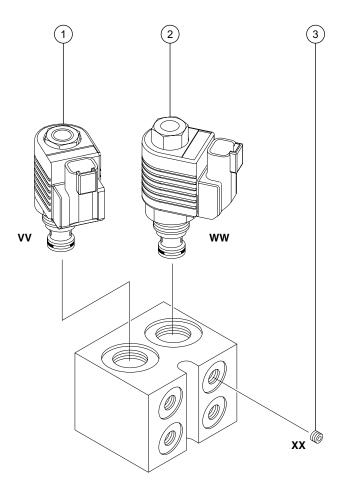

9-7 **Axle Select Manifold Components**

The axle select manifold is mounted next to the drive manifold at the non-steer end of the machine.


Index No.	Description	Schematic Item	Function	Torque
1	Directional valve, pilot operated 2 position 3 way		. Directs flow from steer cylinders to axle extend circuit	30-35 ft-lbs / 41-47 Nm
2	Pressure reducing valve, 1000 psi / 69 bar	FB	. Limits pressure to tie rod cylinder during axle extension	30-35 ft-lbs / 41-47 Nm
3	Directional valve, pilot operated 2 position 3 way		. Directs flow from steer cylinders to axle retract circuit	30-35 ft-lbs / 41-47 Nm
4	Directional valve, pilot operated 2 position 2 way		. Locks out steer cylinders during axle extend/retract	30-35 ft-lbs / 41-47 Nm
5	Directional valve, pilot operated 2 position 2 way		. Locks out steer cylinders during axle extend/retract	30-35 ft-lbs / 41-47 Nm

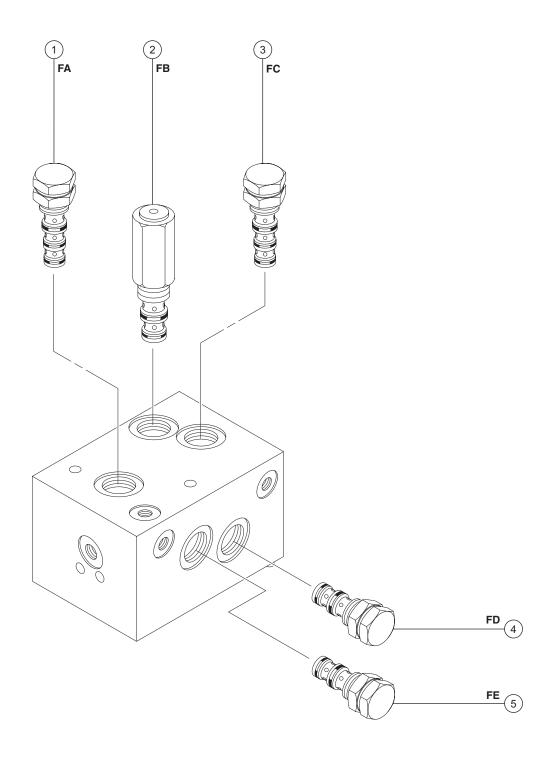

9-8 2WD Traction Manifold Components

The drive manifold is mounted inside the drive chassis at the non-steer end of the machine.


Index No.	Description	chematic Item	Function	Torque
1	Relief valve, 280 psi / 19.3 bar	BF	. Charge pressure circuit	30-35 ft-lbs / 41-47 Nm
2	Flow divider/combiner valve	BG	. Controls flow to drive motors in forward and reverse 90	0-100 ft-lbs / 122-136 Nm
3	Orifice - plug, 0.070 inch / 1.77 m	mBH	. Equalizes flow across flow divider/combiner valve (item BG)	
4	Shuttle valve	Bl	. Charge pressure circuit that gets hot oil out of low pressure side of drive pump	50-55 ft-lbs / 68-75 Nm
5	Diagnostic nipple		. Testing	

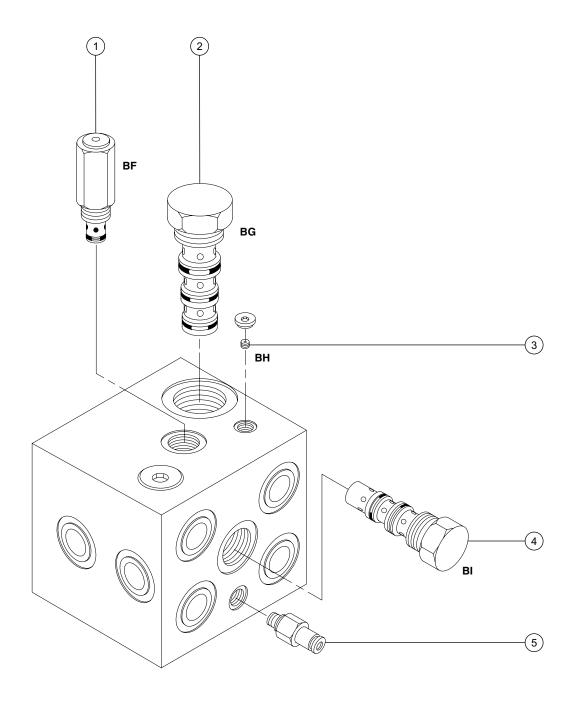

9-9 4WD Traction Manifold Components

The drive manifold is mounted inside the drive chassis at the non-steer end of the machine.

Index No.	Description	chematic Item	Function	Torque
1	Relief valve, 280 psi / 19.3 bar	BJ	. Charge pressure circuit	20-25 ft-lbs / 27-34 Nm
2	Check valve, 5 psi / 0.34 bar	BK	. Drive motor anti-cavitation	20-25 ft-lbs / 27-34 Nm
3	Flow divider/combiner valve	BL	. Controls flow to flow divider/combiner valves BQ and B\	90-100 ft-lbs / W122-136 Nm
4	Check valve, 5 psi / 0.34 bar	BM	. Drive motor anti-cavitation	20-25 ft-lbs / 27-34 Nm
5	Check valve, 5 psi / 0.34 bar	BN	. Drive motor anti-cavitation	30-35 ft-lbs / 41-47 Nm
6	Shuttle valve	BO	. Charge pressure circuit that gets hot oil out of low pressure side of drive pump	
7	Check valve, 5 psi / 0.34 bar	BP	. Drive motor anti-cavitation	30-35 ft-lbs / 41-47 Nm
8	Flow divider/combiner valve	BQ	. Controls flow to steer end drive motors in forward and reverse	90-100 ft-lbs / 122-136 Nm
9	Check valve, 5 psi / 0.34 bar	BR	. Drive motor anti-cavitation	20-25 ft-lbs / 27-34 Nm
10	Flow regulator valve, 2 gpm / 7.6 L/min	BS	. Equalizes pressure on both sides of flow divider/combiner valve BQ .	30-35 ft-lbs / 41-47 Nm
11	Flow regulator valve, 2 gpm / 7.6 L/min	BT	. Equalizes pressure on both sides of flow divider/combiner valve BL .	30-35 ft-lbs / 41-47 Nm
12	Flow regulator valve, 2 gpm / 7.6 L/min	BU	. Equalizes pressure on both sides of flow divider/combiner valve BW	30-35 ft-lbs / 41-47 Nm
13	Check valve, 5 psi / 0.34 bar	BV	. Drive motor anti-cavitation	20-25 ft-lbs / 27-34 Nm
14	Flow divider/combiner valve	BW	. Controls flow to non-steer end drive motors in forward and reverse	90-100 ft-lbs / 122-136 Nm

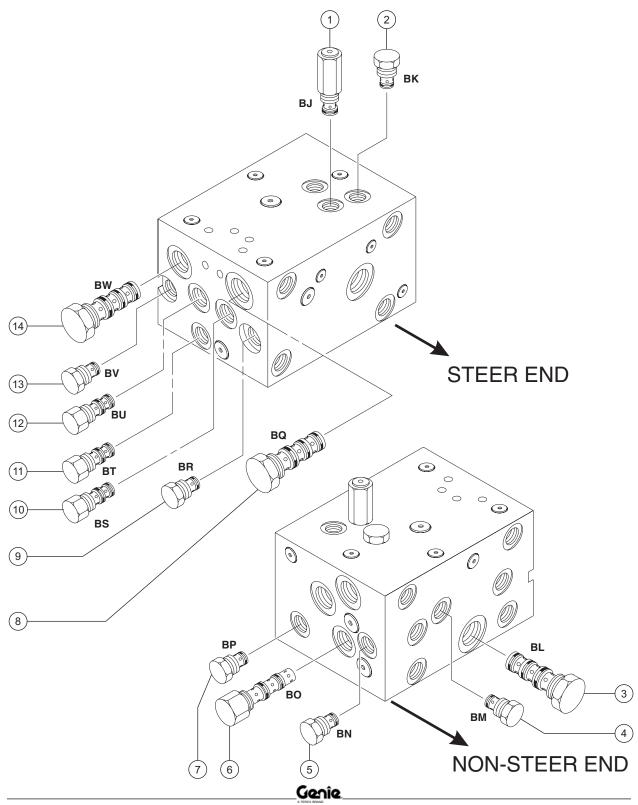

9-10 Valve Adjustments -Traction Manifold

How to Adjust the Hot Oil Shuttle Relief Valve

Note: The pressure differential between the charge pump relief valve (located in the drive pump) and the hot oil shuttle relief valve (located in the traction manifold) is necessary to return hot oil from the closed loop drive circuit to the hydraulic tank for cooling. This pressure differential must be maintained at 40 psi / 14.5 bar.

Note: The following procedure will require two people.

- Open the engine side turntable cover and connect a 0 to 600 psi / 0 to 40 bar pressure gauge to the diagnostic nipple on the drive pump.
- 2 Start the engine from the platform controls and allow the engine to run at low idle. Note the pressure reading on the pressure gauge.
- 3 Turn the engine off and connect a 0 to 600 psi / 0 to 40 bar pressure gauge to the diagnostic nipple located on the traction manifold.

- 4 Start the engine from the platform controls and drive the machine slowly in the forward direction. Note the pressure reading on the pressure gauge.
- 5 Turn the engine off, and remove the hot oil shuttle relief valve cap (item BJ). Adjust the internal hex socket clockwise to increase the pressure or counterclockwise to decrease the pressure. Install the valve cap.
- 6 Repeat steps 4 and 5 until a pressure differential (between the charge pump reading and the hot oil shuttle relief valve) of 40 psi / 14.5 bar is obtained.

9-11 Valve Coils

How to Test a Coil

A properly functioning coil provides an electromotive force which operates the solenoid valve. Critical to normal operation is continuity within the coil that provides this force field.

AWARNING Electrocution/burn hazard. Contact with electrically charged circuits could result in death or serious injury. Remove all rings, watches and other jewelry.

- 1 Tag and disconnect the wiring from the coil to be tested.
- 2 Test the coil resistance.
- Result: The resistance should be within specification, plus or minus 30%.
- Result: If the resistance is not within specification, plus or minus 30%, replace the coil.

Valve coil resistance specifications					
Proportional solenoid valve (schematic items K, W and CC)	4 to 6Ω				
2 position 3 way solenoid valve (schematic items D, R, X, TT and UU)	5.5 to 7Ω				
3 position 4 way solenoid valve (schematic items A, E, N and S)	5 to 7Ω				
2 position 3 way solenoid valve (schematic items KK, MM, VV and WW)	5.5 to 7Ω				
2 position 3 way solenoid valve (schematic items G)	3.5 to 5Ω				

How to Test a Coil Diode

Genie incorporates spike suppressing diodes in all of its directional valve coils except proportional valves and those coils with a metal case. Properly functioning coil diodes protect the electrical circuit by suppressing voltage spikes. Voltage spikes naturally occur within a function circuit following the interruption of electrical current to a coil. Faulty diodes can fail to protect the electrical system, resulting in a tripped circuit breaker or component damage.


AWARNING

Electrocution/burn hazard. Contact with electrically charged circuits could result in death or serious injury. Remove all rings, watches and other jewelry.

1 Test the coil for resistance. Refer to, How to Test a Coil.

2 Connect a 10Ω resistor to the negative terminal of a known good 9V DC battery. Connect the other end of the resistor to a terminal on the coil.

Note: The battery should read 9V DC or more when measured across the terminals.

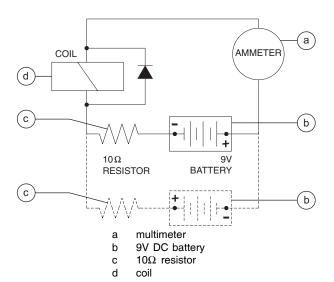

Note: Dotted lines in illustration indicate a reversed connection as specified in step 6

3 Set a multimeter to read DC current.

Note: The multimeter, when set to read DC current, should be capable of reading up to 800 mA.

4 Connect the negative lead to the other terminal on the coil.

Note: If testing a single-terminal coil, connect the negative lead to the internal metallic ring at either end of the coil.

- 5 Momentarily connect the positive lead from the multimeter to the positive terminal on the 9V DC battery. Note and record the current reading.
- 6 At the battery or coil terminals, reverse the connections. Note and record the current reading.
- Result: Both current readings are greater than 0 mA and are different by a minimum of 20%. The coil is good.
- Result: If one or both of the current readings are 0 mA, or if the two current readings do not differ by a minimum of 20%, the coil and/or its internal diode are faulty and the coil should be replaced.

Fuel and Hydraulic Tanks

10-1 Fuel Tank

How to Remove the Fuel Tank

ADANGER

Explosion and fire hazard. Engine fuels are combustible. Remove the fuel tank in an open, well-ventilated area away from heaters, sparks, flames and lighted tobacco. Always have an approved fire extinguisher within easy reach.

A DANGER

Explosion and fire hazard. When transferring fuel, connect a grounding wire between the machine and pump or container.

- 1 Turn the manual fuel shutoff valve to the closed position (if equipped).
- 2 Remove the fuel filler cap from the tank.
- 3 Using an approved hand-operated pump, drain the fuel tank into a suitable container. Refer to capacity specifications.

A DANGER

Explosion and fire hazard. When transferring fuel, connect a grounding wire between the machine and pump or container.

Note: Be sure to only use a hand operated pump suitable for use with gasoline and diesel fuel.

- 4 Tag, disconnect, drain and plug the supply and return fuel hoses. Cap the fittings on the fuel tank.
- 5 Remove the fuel tank retaining fasteners.
- 6 Remove the fuel tank from the machine.

NOTICE

Component damage hazard. The fuel tank is plastic and may become damaged if allowed to fall.

NOTICE

Component damage hazard. When installing the plastic fuel tank, do not overtighten the retaining fasteners.

Note; Clean the fuel tank and inspect for damage before installing it onto the machine.

FUEL AND HYDRAULIC TANKS

10-2 Hydraulic Tank

The primary functions of the hydraulic tank are to cool, clean and de-aerate the hydraulic fluid during operation. The tank utilizes internal suction strainers for the pump supply hoses and has an external return filter equipped with a filter condition indicator.

How to Remove the Hydraulic Tank

NOTICE

Component damage hazard. The work area and surfaces where this procedure will be performed must be clean and free of debris that could get into the hydraulic system.


Note: When removing a hose assembly or fitting, the O-ring (if equipped) on the fitting and/or the hose end must be replaced. All connections must be torqued to specification during installation. Refer to Section 2, *Hydraulic Hose and Fitting Torque Specifications*.

- 1 Lower and retract the boom to the stowed position.
- 2 Remove the fuel tank. See 10-1, *How to Remove the Fuel Tank.*

3 Close the two hydraulic tank valves located at the hydraulic tank (if equipped).

NOTICE

Component damage hazard. The engine must not be started with the hydraulic tank shutoff valves in the CLOSED position or component damage will occur. If the tank valves are closed, remove the key from the key switch and tag the machine to inform personnel of the condition.

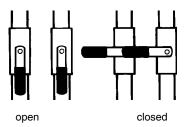

- 4 Remove the drain plug from the hydraulic tank and completely drain the tank into a suitable container. Refer to Section 2, *Specifications*.
- 5 Tag, disconnect and plug the two suction hoses that are attached to the hydraulic tank.
- 6 Tag and disconnect and plug the hose from the return filter. Cap the fitting on the return filter housing.
- 7 Tag and disconnect and plug the supply hose for the auxiliary power unit. Cap the fitting on the hydraulic tank.
- 8 Remove the retaining fasteners from the hydraulic tank hold down straps. Remove the hold down straps from the hydraulic tank.

FUEL AND HYDRAULIC TANKS

- 9 Support the hydraulic tank with 2 lifting straps. Place one lifting strap at each end of the tank and attach the lifting straps to an overhead crane.
- 10 Remove the hydraulic tank from the machine.

AWARNING Crushing hazard. The hydraulic tank could become unbalanced and fall if not properly supported and secured to the overhead crane.

- 11 Remove the suction strainers from the tank and clean them using a mild solvent.
- 12 Rinse out the inside of the tank using a mild solvent.
- 13 Install the suction strainers using pipe thread sealant on the threads.
- 14 Install the drain plug using pipe thread sealant on the threads.
- 15 Install the hydraulic tank onto the machine.
- 16 Install the two suction hoses and the supply hose for the auxiliary power unit.
- 17 Fill the tank with hydraulic oil until the level is within the top 2 inches / 5 cm of the sight gauge. Do not overfill.
- 18 Clean up any oil that may have spilled.
- 19 Open the hydraulic tank shutoff valves (if equipped).

Component damage hazard. Be sure to open the two hydraulic tank shutoff valves (if equipped) and prime the pump after installing the hydraulic tank.

Note: Always use pipe thread sealant when installing the drain plug and strainers.


Turntable Rotation Components

11-1 **Turntable Rotation Drive Hub Assembly**

How to Remove the Turntable **Rotation Drive Hub Assembly**

Note: When removing a hose assembly or fitting, the O-ring (if equipped) on the fitting and/or the hose end must be replaced. All connections must be torqued to specification during installation. Refer to Section 2. Hydraulic Hose and Fitting Torque Specifications.

1 Secure the turntable from rotating with the turntable rotation lock pin.

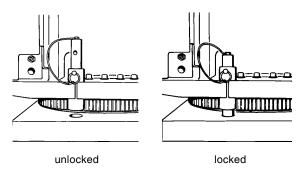


2 Tag, disconnect and plug the hydraulic hoses from the drive motor. Cap the fittings on the motor.

AWARNING

Bodily injury hazard. Spraying hydraulic oil can penetrate and burn skin. Loosen hydraulic connections very slowly to allow the oil pressure to dissipate gradually. Do not allow oil to squirt or spray.

3 Loosen the backlash pivot plate and adjustment bolts.

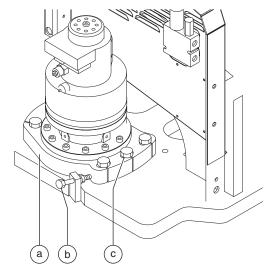

- backlash pivot plate а
- adjustment bolt with lock nut
- backlash pivot plate mounting bolts
- 4 Attach a suitable lifting device to the lifting eyes on the drive hub assembly.
- 5 Remove the backlash pivot plate mounting bolts. Carefully remove the drive hub assembly from the machine.

AWARNING Crushing hazard. The turntable rotation drive hub assembly could become unbalanced and fall when it is removed from the machine if not properly supported.

When installing the drive hub assembly:

- 6 Install the drive hub. Apply removable thread locking compound to bolt threads. Torque the back lash pivot plate mounting bolts to specification. Refer to Section 2, Machine Torque Specifications.
- 7 Install the brake and then the motor onto the drive hub. Apply removable thread locking compound to bolt threads. Torque the motor/ brake mounting bolts to specification. Refer to Section 2, Machine Torque Specifications.
- 8 Adjust turntable rotation gear backlash. See 11-1, How to Adjust the Turntable Rotation Gear Backlash.

Genîe

TURNTABLE ROTATION COMPONENTS

How to Remove the Turntable **Rotation Hydraulic Motor**

Note: When removing a hose assembly or fitting, the O-ring (if equipped) on the fitting and/or the hose end must be replaced. All connections must be torqued to specification during installation. Refer to Section 2, Hydraulic Hose and Fitting Torque Specifications.

1 Secure the turntable from rotating with the turntable rotation lock pin.

Note: The turntable rotation lock pin is located next to the boom rest pad.

2 Tag, disconnect and plug the hydraulic hoses from the drive motor. Cap the fittings on the motor.


AWARNING

Bodily injury hazard. Spraying hydraulic oil can penetrate and burn skin. Loosen hydraulic connections very slowly to allow the oil pressure to dissipate gradually. Do not allow oil to squirt or spray.

3 Remove the hydraulic tube that connects from the counterbalance manifold to the brake. Cap the fittings on the brake and manifold.

AWARNING Bodily injury hazard. Spraying hydraulic oil can penetrate and burn skin. Loosen hydraulic connections very slowly to allow the oil pressure to dissipate gradually. Do not allow oil to squirt or spray.

4 Remove the motor/brake mounting fasteners. Carefully remove the motor from the brake.

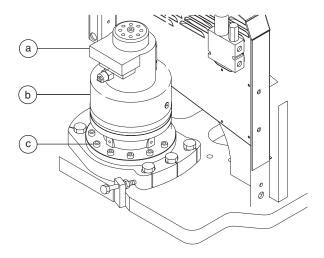

- motor
- b drive hub with brake
- drive hub mounting bolts
- 5 Clean up any oil that may have spilled.

TURNTABLE ROTATION COMPONENTS

How to Adjust the Turntable Rotation Gear Backlash


The turntable rotation drive hub is mounted on an adjustable plate that controls the gap between the rotation motor pinion gear and the turntable bearing ring gear.

Note: Perform this procedure with the boom between the non-steer end tires and with the machine on a firm and level surface.

1 Secure the turntable from rotating with the turntable rotation lock pin.

Note: The turntable rotation lock pin is located next to the boom rest pad.

2 Loosen the backlash pivot plate mounting fasteners.

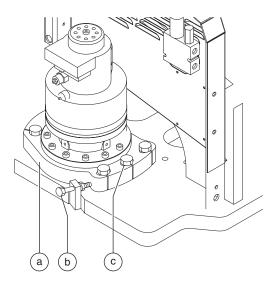

- a backlash pivot plate
- b adjustment bolt with lock nut
- c backlash pivot plate mounting bolts

- 3 Push the backlash pivot plate towards the turntable as far as possible (this will push the rotation gear into the turntable bearing ring gear).
- 4 Loosen the lock nut on the adjustment bolt.
- 5 Turn the adjustment bolt clockwise until it contacts the backlash pivot plate.
- 6 Turn the adjustment bolt ¹/₂ turn counterclockwise. Tighten the lock nut on the adjustment bolt.
- 7 Rotate the backlash pivot plate away from the turntable until it contacts the adjustment bolt. Then torque the mounting fasteners on the backlash pivot plate.
- 8 Rotate the turntable through an entire rotation. Check for tight spots that could cause binding. Readjust if necessary.

2WD Steer Axle Components

12-1 Yoke and Hub

How to Remove the Yoke and Hub

- 1 Remove the pin retaining fasteners from both the steering cylinder and the tie rod cylinder pivot pins. Use a soft metal drift to remove the pins.
- 2 Loosen the wheel lug nuts. Do not remove them.
- 3 Block the non-steer wheels and center a lifting jack of ample capacity under the steer axle.
- 4 Raise the machine approximately 6 inches / 15 cm and place blocks under the chassis for support.
- 5 Remove the lug nuts. Remove the tire and wheel assembly.
- 6 Remove the pin retaining fasteners from the yoke pivot pins.
- 7 Support and secure the yoke and hub assembly to a lifting jack.
- 8 Use a slide hammer to remove the upper yoke pivot pin, then use a soft metal drift to drive the lower yoke pivot pin down and out.
- 9 Remove the yoke and hub assembly from the machine.

ACAUTION

Crushing hazard. The yoke and hub assembly may become unbalanced and fall if not properly supported and secured to the lifting jack when it is removed from the machine.

How to Remove the Hub and Bearings

- 1 Loosen the wheel lug nuts. Do not remove them.
- 2 Block the non-steer wheels and center a lifting jack of ample capacity under the steer axle.
- 3 Raise the machine approximately 6 inches / 15 cm and place blocks under the chassis for support.
- 4 Remove the lug nuts. Remove the tire and wheel assembly.
- 5 Remove the dust cap, cotter pin and castle nut.

Note: Always replace the cotter pin with a new one when installing the castle nut.

- 6 Pull the hub off the spindle. The washer and outer bearing should fall loose from the hub.
- 7 Place the hub on a flat surface and gently pry the bearing seal out of the hub. Remove the rear bearing.

How to Install the Hub and Bearings

Note: When replacing a wheel bearing, both the inner and outer bearings including the pressed-in races must be replaced.

- 1 Be sure that both bearings are packed with clean, fresh grease.
- 2 Place the large inner bearing into the rear of the hub
- 3 Press the bearing seal evenly into the hub until it is flush.
- 4 Slide the hub onto the yoke spindle.



Component damage hazard. Do not apply excessive force or damage to the lip of the seal may occur.

- 5 Place the outer bearing into the hub.
- 6 Install the washer and castle nut.
- 7 Tighten the castle nut to 35 ft-lbs / 47 Nm to seat the bearings.
- 8 Fully loosen the castle nut, then re-tighten to 8 ft-lbs / 11 Nm. Install a new cotter pin.
- 9 Install the dust cap, then the tire and wheel assembly. Torque the wheel lug nuts. Refer to Section 2, *Specifications*.

12-2 Steer Cylinder

How to Remove a Steer Cylinder

There are two identical steer cylinders that work in parallel. They are part of the same hydraulic circuit, but move in opposite directions. The tie rod cylinder maintains equal movement of the tires.

Note: When removing a hose assembly or fitting, the O-ring (if equipped) on the fitting and/or the hose end must be replaced. All connections must be torqued to specification during installation. Refer to Section 2, *Hydraulic Hose and Fitting Torque Specifications*.

1 Tag, disconnect and plug the hydraulic hoses from the steer cylinder. Cap the fittings on the cylinder.

AWARNING

Bodily injury hazard. Spraying hydraulic oil can penetrate and burn skin. Loosen hydraulic connections very slowly to allow the oil pressure to dissipate gradually. Do not allow oil to squirt or spray.

- 2 Remove the pin retaining fasteners from the steer cylinder pivot pins. Remove the pivot pin from each end of the steer cylinder.
- 3 Remove the steer cylinder from the machine.

12-3 Tie Rod Cylinder

How to Remove the Tie Rod Cylinder

Note: When removing a hose assembly or fitting, the O-ring (if equipped) on the fitting and/or the hose end must be replaced. All connections must be torqued to specification during installation. Refer to Section 2, *Hydraulic Hose and Fitting Torque Specifications*.

1 Tag, disconnect and plug the hydraulic hoses from the tie rod cylinder. Cap the fittings on the cylinder.

AWARNING

Bodily injury hazard. Spraying hydraulic oil can penetrate and burn skin. Loosen hydraulic connections very slowly to allow the oil pressure to dissipate gradually. Do not allow oil to squirt or spray.

- 2 Support and secure the tie rod cylinder to a lifting jack.
- 3 Remove the pin retaining fasteners from each tie rod cylinder pivot pin.
- 4 Remove the pivot pin from each end of the tie rod cylinder.
- 5 Remove the tie rod cylinder from the machine.

 
ACAUTION

Crushing hazard. The tie rod cylinder may become unbalanced and fall if not properly supported and secured to the lifting jack when it is removed from the machine.

How to Perform the Toe-in Adjustment

Note: Perform this procedure on a firm, level surface. Block the non-steer tires and be sure that the machine is in the stowed position.

- 1 Straighten the steer wheels.
- 2 Measure the steer tires, front to front and back to back, using a measuring fixture.



- 3 Center a lifting jack of ample capacity under the steer axle and raise the machine until the steer tires are off the ground.
- 4 Loosen the jam nut on the adjustable end of the tie rod cylinder.
- 5 Remove the pin retaining fasteners from the adjustable end of the tie rod cylinder. Remove the pivot pin.
- 6 Slide the tie rod cylinder off of the yoke and adjust it by turning the end.

Note: One half turn on the adjustable end equals approximately $^{1}/_{8}$ inch / 3.2 mm change in the front and rear measurements.

- 7 Slide the tie rod cylinder onto the yoke. Install the pivot pin and the pin retaining fastener.
- 8 Tighten the jam nut against the tie rod cylinder.
- 9 Lower the machine and recheck the front and back measurements (step 2). If further adjustment is needed, repeat steps 3 through 8.

Toe-in specification

 $0 \pm 1/8$ inch / 6.35 mm

4WD Steer Axle Components

13-1 Yoke and Drive Hub

How to Remove the Yoke and Drive Hub Assembly

Note: When removing a hose assembly or fitting, the O-ring (if equipped) on the fitting and/or the hose end must be replaced. All connections must be torqued to specification during installation. Refer to Section 2, Hydraulic Hose and Fitting Torque Specifications.

- 1 Remove the pin retaining fasteners from both the steer cylinder and the tie rod cylinder pivot pins. Remove the pins.
- 2 Tag, disconnect and plug the hydraulic hoses from the drive motor. Cap the fittings on the drive motor.

AWARNING

Bodily injury hazard. Spraying hydraulic oil can penetrate and burn skin. Loosen hydraulic connections very slowly to allow the oil pressure to dissipate gradually. Do not allow oil to squirt or spray.

- 3 Loosen the wheel lug nuts. Do not remove them.
- 4 Block the non-steer wheels, and center a lifting jack of ample capacity under the steer axle.
- Raise the machine approximately 6 inches / 15 cm and place blocks under the chassis for support.

- 6 Remove the lug nuts. Remove the tire and wheel assembly.
- Remove the hydraulic hose clamp retaining fastener from the top of the yoke pivot pin.
- 8 Remove the drive motor mounting fasteners.
- Slide the drive motor shaft out of the drive hub and remove the drive motor from the machine.
- 10 Remove the pin retaining fasteners from the upper and lower voke pivot pins.
- 11 Support and secure the yoke and drive hub assembly to a lifting jack.
- 12 Use a slide hammer to remove the upper yoke pivot pin. Use a soft metal drift to drive the lower yoke pivot pin down and out.

AWARNING Crushing hazard. The yoke and drive hub assembly could become unbalanced and fall when the voke pivot pins are removed if not properly supported and secured to the lifting jack.

- 13 Place the yoke and drive hub assembly on a flat surface with the drive hub facing down.
- 14 Remove the drive hub mounting fasteners that attach the drive hub to the voke. Remove the yoke from the drive hub. Refer to Section 2, Specifications.

Note: Replace the thrust washer when installing the yoke and drive hub assembly onto the axle.

13-2 **Drive Motor**

How to Remove a Drive Motor

Component damage hazard. Repairs to the motor should only be performed by an authorized Sauer dealer.

Component damage hazard. The work area and surfaces where this procedure will be performed must be clean and free of debris that could get into the hydraulic system and cause severe component damage. Dealer service is recommended.

Note: When removing a hose assembly or fitting, the O-ring (if equipped) on the fitting and/or the hose end must be replaced. All connections must be torqued to specification during installation. Refer to Section 2, Hydraulic Hose and Fitting Torque Specifications.

- 1 Extend the axles.
- 2 Remove the drive motor access covers from both sides of the inner axle.

3 Tag, disconnect and plug the hydraulic hoses from the drive motor. Cap the fittings on the drive motor.

AWARNING Bodily injury hazard. Spraying hydraulic oil can penetrate and burn skin. Loosen hydraulic connections very slowly to allow the oil pressure to dissipate gradually. Do not allow oil to squirt or spray.

- 4 Remove the drive motor mounting fasteners.
- 5 Slide the drive motor shaft out of the drive hub, and remove the drive motor from the machine. Refer to Section 2, Specifications.

13-3 Drive Hub

How to Remove a Drive Hub

Note: When removing a hose assembly or fitting, the O-ring (if equipped) on the fitting and/or the hose end must be replaced. All connections must be torqued to specification during installation. Refer to Section 2, *Hydraulic Hose and Fitting Torque Specifications*.

- 1 Remove the drive motor. See 13-2, *How to Remove a Drive Motor.*
- 2 Loosen the wheel lug nuts. Do not remove them.
- 3 Center a lifting jack of ample capacity under the non-steer axle.
- 4 Raise the machine approximately 6 inches / 15 cm and place blocks under the chassis for support.
- 5 Remove the wheel lug nuts, then the tire and wheel assembly.
- 6 Place a second lifting jack under the drive hub for support and secure the drive hub to the lifting jack.
- 7 Remove the drive hub mounting fasteners that attach the drive hub to the axle. Remove the drive hub.

AWARNING

Crushing hazard. The drive hub could become unbalanced and fall if not properly supported and secured to the lifting jack when removed from the machine.

Note: Do not re-use the drive hub mounting fasteners. Genie specifications require the use of new fasteners.

13-4 Steer Cylinders

How to Remove a Steer Cylinder

There are two identical steer cylinders that work in parallel. They are part of the same hydraulic circuit, but move in opposite directions. The tie rod cylinder maintains equal movement of the tires.

Note: When removing a hose assembly or fitting, the O-ring (if equipped) on the fitting and/or the hose end must be replaced. All connections must be torqued to specification during installation. Refer to Section 2, *Hydraulic Hose and Fitting Torque Specifications*.

1 Tag, disconnect and plug the hydraulic hoses from the steer cylinder. Cap the fittings on the cylinder.

AWARNING

Bodily injury hazard. Spraying hydraulic oil can penetrate and burn skin. Loosen hydraulic connections very slowly to allow the oil pressure to dissipate gradually. Do not allow oil to squirt or spray.

- 2 Remove the hose bracket mounting fastener on the steer cylinder barrel-end pivot pin.
- 3 Remove the pin retaining fasteners from the steer cylinder pivot pins. Remove the pivot pin from each end of the steer cylinder.
- 4 Remove the steer cylinder from the machine.

13-5 Tie Rod Cylinder

How to Remove the Tie Rod Cylinder

This procedure is the same as the 2WD procedure. See 12-3, *How to Remove the Tie Rod Cylinder.*

How to Perform the Toe-in Adjustment

This procedure is the same as the 2WD procedure. See to 12-3, *How to Perfrom the Toe-in Adjustment.*

Non-steer Axle Components

14-1 Drive Motor

How to Remove a Drive Motor

This procedure is the same as the steer axle procedure. See 13-2, *How to Remove a Drive Motor.*

14-2 Drive Hub

How to Remove a Drive Hub

This procedure is the same as the steer axle procedure. See 13-3, *How to Remove a Drive Hub.*

Oscillating Axle Components

15-1 Oscillate Axle Cylinders

The oscillating axle cylinders extend and retract between the drive chassis and the axle to maintain a level chassis while driving over uneven terrain. The cylinders are equipped with counterbalance valves to prevent movement in the event of a hydraulic hose failure.

How to Remove an Oscillate Axle Cylinder

Note: Perform this procedure on firm, level surface with the boom in the stowed position.

Note: When removing a hose assembly or fitting, the O-ring (if equipped) on the fitting and/or the hose end must be replaced. All connections must be torqued to specification during installation. Refer to Section 2, *Hydraulic Hose and Fitting Torque Specifications*.

- 1 Rotate the turntable until the boom is between the steer tires.
- 2 Remove the fasteners from the drive chassis cover at the steer end. Remove the cover.

3 Tag, disconnect and plug the oscillating axle cylinder hydraulic hoses. Cap the fittings on the cylinder.

AWARNING

Bodily injury hazard. Spraying hydraulic oil can penetrate and burn skin. Loosen hydraulic connections very slowly to allow the oil pressure to dissipate gradually. Do not allow oil to squirt or spray.

- 4 Remove the pin retaining fasteners from the rod-end pivot pin. Use a soft metal drift to remove the pin.
- 5 Attach a lifting strap from an overhead crane to the barrel end of the oscillating cylinder.
- 6 Remove the pin retaining fasteners from the barrel-end pivot pin. Use a soft metal drift to remove the pin.
- 7 Remove the cylinder from the machine.

AWARNING


Crushing hazard. The oscillate cylinder could become unbalanced and fall if not properly attached to the overhead crane when removed from the machine.

OSCILLATING AXLE COMPONENTS

15-2 Oscillate Directional Valve

How to Adjust the Oscillate Relief Valve Pressure

- 1 Remove the drive chassis cover from the nonsteer end of the machine.
- 2 Connect a 0 to 2000 psi / 0 to 150 bar pressure gauge to the diagnostic nipple located near the oscillate directional valve.
- 3 Disconnect the directional valve linkage, by removing the clevis yoke from the drive chassis.
- 4 Start the engine from the ground control.
- 5 With the engine running, manually activate the valve and observe the pressure reading on the pressure gauge. Refer to Section 2, Specifications.
- 6 Turn the engine off.
- 7 Locate the relief valve on the directional valve.

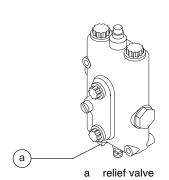

- 8 Loosen the jam nut on the relief valve.
- 9 Turn the valve clockwise to increase the pressure or counterclockwise to decrease the pressure.

AWARNING Tip-over hazard. Do not adjust the relief valve higher than specified.

- 10 Tighten the jam nut.
- 11 Start the engine and manually activate the valve to confirm the valve pressure.
- Result: Pressure should be between 800 / 55 bar and 900 psi / 65 bar.
- Result: Pressure is less than 800 psi / 55 bar or more than 900 psi / 65 bar. Repeat this procedure beginning with step 5.
- 12 Turn the engine off, remove the pressure gauge and assemble the directional valve linkage.
- 13 Install the cover on the non-steer end of the drive chassis.

OSCILLATING AXLE COMPONENTS

How to Set Up the Directional Valve Linkage

Note: Perform this procedure on a firm, level surface.

- 1 Lower the boom to the stowed position.
- 2 Use a "bubble type" level to be sure the surface the machine is on is completely level.



Tip-over hazard. Failure to perform this procedure on a firm, level surface will compromise the stability of the machine and could result in the machine tipping over.

- 3 Check the tire pressure in all four tires and add air if needed to meet specification.
- 4 Remove the drive chassis cover from the non-steer end of the machine.
- 5 Disconnect the linkage clevis yoke from the axle.
- 6 Place a "bubble type" level on the turntable rotate bearing plate at the non-steer end. Check to be sure the drive chassis is completely level.
- 7 To level the drive chassis, start the engine and push up or pull down on the linkage adjustment rod until the machine is completely level.

- 8 Verify that the ground and drive chassis are completely level.
- 9 Adjust the length of the rod by turning the clevis yoke until the clevis yoke can be pinned to the axle.
- 10 Install the shoulder bolt and nut.
- 11 Measure the distance between the drive chassis and the non-steer axle on both sides (from the inside of the drive chassis).
- Result: The measurements should be equal.

Note: If the distance is not equal and the adjustment to the linkage was completed with the ground and drive chassis level, consult Genie Service Department.

Extendable Axle Components

16-1 Extendable Axles

The extendable axles are used to widen the foot print of the drive chassis for stability.

How to Shim an Extendable Axle

Note: Replace the pad if thickness is less than minimum specification. If thickness is more than minimum specification, perform the following procedure. Refer to Maintenance Procedure *D-2, Axle wear pad specifications*

1 Extend the axles.

Side wear pads:

- 2 Loosen the side wear pad mounting fasteners on the outer axle.
- 3 Install the new shims under the wear pads to obtain zero clearance and zero drag.
- 4 Use a round punch to align the shim to the wear pad. Tighten the mounting fasteners.
- 5 Extend and retract the axle through an entire cycle. Check for tight spots that could cause binding or scraping.

Note: Always maintain squareness between the inner and outer axle tubes.

Top and bottom wear pads:

- 1 Center a lifting jack of sufficient capacity under the outer axle that needs to be shimmed. Do not raise the machine.
- 2 Block the wheels at the opposite end of the machine.
- 3 Raise the machine just until the weight of the machine is relieved off of the inner axle. Do not raise the wheels off of the ground.
- 4 Remove the drive chassis cover.
- 5 Loosen the wear pad mounting fasteners from the top and bottom wear pads on both the inner and outer axles.
- 6 Install the new shims under the wear pads of the inner and outer axle to obtain zero clearance and zero drag.
- 7 Use a round punch through the wear pad mounting holes to align the shims with the wear pad. Install the wear pad retaining fasteners.
- 8 Extend and retract the axle through an entire cycle. Check for tight spots that could cause binding or scraping of the axle tubes.

Note: Always maintain squareness between the inner and outer axle tubes.

EXTENDABLE AXLE COMPONENTS

How to Remove an Inner Axle

Note: When removing a hose assembly or fitting, the O-ring on the fitting and/or hose end must be replaced and then torqued to specification during installation. Refer to Section 2, *Hydraulic Hose and Fitting Torque Specifications*.

Note: Perform this procedure with the boom in the stowed position and boom between the non-steer end tires.

Steerend:

- 1 Extend the axles.
- 2 Remove the drive chassis cover.
- 3 **2WD models:** Remove the yoke and hub assembly. Refer to 12-1, *How to Remove the Yoke and Hub.*

4WD models: Remove the yoke and drive hub. Refer to 13-1, *How to Remove the Yoke and Drive Hub Assembly.*

- 4 **4WD models:** Remove the hose bracket from the steer cylinder barrel-end pivot pin.
- 5 Remove the remaining steer cylinder pivot pin. Remove the steer cylinder and lay off to the side.



Component damage hazard. Hoses can be damaged if they are kinked or pinched.

6 Remove the steer cylinder mounting lug from the inner axle.

- 7 Place blocks under the axle extension cylinder for support.
- 8 Remove the external snap ring from the axle extension cylinder pivot pin. Use a soft metal drift to remove the pin.
- 9 Attach a lifting strap from an overhead crane to the inner axle for support.
- 10 Remove all wear pads from the outer axle.

Note: Pay careful attention to the location and number of shims used when removing the wear pads.

11 Carefully remove the inner axle from the outer axle.



Crushing hazard. The inner axle could become unbalanced and fall if not properly supported when it is removed from the outer axle.

Non-steer end:

- 12 Loosen the wheel lug nuts. Do not remove them.
- 13 Block the steer tires and center a lifting jack under the outer axle.
- 14 Raise the machine approximately 6 inches / 15 cm and place blocks under the chassis for support.
- 15 Remove the lug nuts. Remove the tire and wheel assembly.
- 16 Remove the drive motor covers from both sides of the inner axle.

EXTENDABLE AXLE COMPONENTS

17 Tag, disconnect and plug the hydraulic hoses at the drive motor. Cap the fittings on the drive motor.

AWARNING

Bodily injury hazard. Spraying hydraulic oil can penetrate and burn skin. Loosen hydraulic connections very slowly to allow the oil pressure to dissipate gradually. Do not allow oil to squirt or spray.

- 18 Place blocks under the axle extension cylinder for support.
- 19 Remove the external snap rings from the axle extension cylinder pivot pin of the inner axle to be removed. Use a soft metal drift to remove the pin.
- 20 Attach a strap from a lifting device through the inner axle close to the drive hub for support.
- 21 Remove all wear pads from the outer axle.

Note: Pay careful attention to the location and number of shims used when removing the wear pads.

22 Carefully remove the inner axle from the outer axle.

AWARNING

Crushing hazard. The inner axle could become unbalanced and fall if not properly supported when it is removed from the outer axle.



Component damage hazard. Hoses can be damaged if they are kinked or pinched.

16-2 **Axle Extension Cylinder**

How to Remove the Axle Extension Cylinder

Note: When removing a hose assembly or fitting, the O-ring on the fitting and/or hose end must be replaced and then torqued to specification during installation. Refer to Section 2, *Hydraulic Hose and Fitting Torque Specifications*.

Note:Perform this procedure with the boom in the stowed position and boom between the non-steer end tires.

- 1 Extend the axles.
- 2 Remove the drive chassis cover.

Steerend:

- 3 Remove the engine side yoke and hub.
 - **2WD models:** Remove the yoke and hub assembly. Refer to 12-1, *How to Remove the Yoke and Hub.*
 - **4WD models:** Remove the yoke and drive hub. Refer to 13-1, *How to Remove the Yoke and Drive Hub Assembly.*
- 4 Remove the access cover at the end of the inner axle.

EXTENDABLE AXLE COMPONENTS

5 Tag, disconnect and plug the axle extend cylinder hydraulic hoses. Cap the fittings on the cylinder.

AWARNING

Bodily injury hazard. Spraying hydraulic oil can penetrate and burn skin. Loosen hydraulic connections very slowly to allow the oil pressure to dissipate gradually. Do not allow oil to squirt or spray.

- 6 Place blocks under the axle extension cylinder for support.
- 7 Remove the external snap rings from the axle extension cylinder pivot pins. Use a soft metal drift to remove the pins.
- 8 Carefully remove the axle extension cylinder from the machine by pulling it out the end of the inner axle.

AWARNING

Crushing hazard. The axle extension cylinder could become unbalanced and fall if not properly supported when it is removed from the axle.

Non-steer end:

- 9 Remove the drie motor access covers from both sides of the axle.
- 10 Remove the drive motor. Refer to 13-2, *How to Remove a Drive Motor.*
- 11 Remove the drive hub. Refer to 13-3, *How to Remove a Drive Hub.*
- 12 Tag, disconnect and plug the axle extend cylinder hydraulic hoses from RAE and RAR ports on the axle select manifold. Cap the fittings on the manifold.

AWARNING

Bodily injury hazard. Spraying hydraulic oil can penetrate and burn skin. Loosen hydraulic connections very slowly to allow the oil pressure to dissipate gradually. Do not allow oil to squirt or spray.

- 13 Place blocks under the axle extension cylinder for support.
- 14 Remove the external snap rings from the axle extension cylinder pivot pins. Use a soft metal drift to remove the pins.
- 15 Carefully remove the axle extension cylinder from the machine by pulling it out the end of the inner axle.

AWARNING

Crushing hazard. The axle extension cylinder could become unbalanced and fall if not properly supported when it is removed from the axle.



This page intentionally left blank.

February 2012 Section 5 • Fault Codes

Fault Codes



Observe and Obey:

- ☑ Troubleshooting and repair procedures shall be completed by a person trained and qualified on the repair of this machine.
- ☑ Immediately tag and remove from service a damaged or malfunctioning machine.
- ☑ Repair any machine damage or malfunction before operating the machine.
- ☑ Unless otherwise specified, perform each repair procedure with the machine in the following configuration:
 - Machine parked on a firm, level surface
 - · Boom in stowed position
 - Turntable rotated with the boom between the circle-end wheels (yellow arrow)
 - Turntable secured with the turntable rotation lock pin
 - · Key switch in the off position with the key removed
 - Welder disconnected from the machine (if equipped with the weld cable to platform option)
 - · Wheels chocked
 - All external AC power supply disconnected from the machine

Before Troubleshooting:

- Read, understand and obey the safety rules and operating instructions printed in the Genie S-80 and Genie S-85 Operator's Manual on your machine.
- ☑ Be sure that all necessary tools and test equipment are available and ready for use.
- Read each appropriate flow chart thoroughly. Attempting shortcuts may produce hazardous conditions.
- ☑ Be aware of the following hazards and follow generally accepted safe workshop practices.

Crushing hazard. When testing or replacing any hydraulic component, always support the structure and secure it from movement.

AWARNING Electrocution hazard. Contact with electrically charged circuits could result in death or serious injury. Remove all rings, watches and other jewelry.

AWARNING

Bodily injury hazard. Spraying hydraulic oil can penetrate and burn skin. Loosen hydraulic connections very slowly to allow the oil pressure to dissipate gradually. Do not allow oil to squirt or spray.

Note: Perform all troubleshooting on a firm level surface.

Note: Two persons may be required to safely perform some troubleshooting procedures.

Section 5 • Fault Codes February 2012

FAULT CODES

Fault Code Chart -**Control System**

How to Retrieve Control System Fault Codes

Note: At least one fault code is present when the alarm at the platform controls produces two short beeps every 30 seconds for 10 minutes.

Note: Perform this procedure with the engine off, the key switch turned to platform controls and the red Emergency Stop button pulled out to the on position at both the ground and platform controls.

1 Open the platform control box lid.

AWARNING Electrocution/burn hazard. Contact with electrically charged circuits could result in death or serious injury. Remove all rings, watches and other jewelry.

2 Locate the red and yellow fault LEDs on the ALC-500 circuit board inside the platform control box. Do not touch the circuit board.

Component damage hazard. Electrostatic discharge (ESD) can damage printed circuit board components. If the circuit board does need to be handled, maintain firm contact with a metal part of the machine that is grounded at all times when handling the printed circuit board OR use a grounded wrist strap.

3 Determine the error source: The red LED indicates the error source and will flash two separate codes. The first code will indicate the first digit of the two digit code, flashing once per second. It will then pause for 1.5 seconds and flash the second digit once per 0.5 second.

Note: When the red LED is flashing the code, the yellow LED will be on solid.

4 Determine the error type: The yellow LED indidates the error type and will flash two separate codes. The first code will indicate the first digit of the two digit code, flashing once per second. It will then pause for 1.5 seconds and flash the second digit once per 0.5 second.

Note: When the yellow LED is flashing the code. the red LED will be on solid.

5 Use the fault code table on the following pages to aid in troubleshooting the machine by pinpointing the area or component affected.

February 2012 Section 5 • Fault Codes

Fault Code Chart

Error Source		Error Type		Condition	Solution
ID	Name	ID	Name	Condition	Solution
21	Boom 1 Joystick (primary boom up/ down)	11 12 15 16	Value at 5V Value too high Value too low Value at 0V	Limited speed and direction frozen at zero and neutral. Alarm sounds indicating fault.	Power up controller with problem corrected.
		17	Not calibrated	Joystick speed and direction frozen at zero and neutral.	Calibrate joystick.
		18	Just calibrated	Initiate 1-second beep of alarm.	Self-clearing. (transient)
22	Boom 1 directional valves	21	Fault	Limited speed and direction frozen at zero and neutral. Alarm sounds indicating fault.	Power up controller with problem corrected.
23	Boom 1 flow control valve	12 15	Value too high Value too low	Limited speed and direction frozen at zero and neutral. Alarm sounds indicating fault.	Power up controller with problem corrected.
		17	Not calibrated	Normal function except threshold for	Calibrate valve thresholds.
		18	Just calibrated	one or both directions is zero.	Self-clearing. (transient)
31	Boom 2 Joystick (secondary boom up/down or primary boom extend/retract)	11 12 15 16	Value at 5V Value too high Value too low Value at 0V	Limited speed and direction frozen at zero and neutral. Alarm sounds indicating fault.	Power up controller with problem corrected.
		17	Not calibrated	Joystick speed and direction frozen at zero and neutral.	Calibrate joystick.
		18	Just calibrated	Initiate 1 second beep of alarm.	Self-clearing. (transient)
32	Boom 2 directional valves	21	Fault	Limited speed and direction frozen at zero and neutral. Alarm sounds indicating fault.	Power up controller with problem corrected.



Section 5 • Fault Codes February 2012

FAULT CODE CHART

Е	Error Source		rror Type	Condition	Solution
ID	Name	ID	Name		Solution
33	Boom 2 flow control valve	12 15	Value too high Value too low	Limited speed and direction frozen at zero and neutral. Alarm sounds indicating fault.	Power up controller with problem corrected.
		17	Not calibrated	Normal function except threshold for one or both directions is zero.	Calibrate valve thresholds.
		18	Just calibrated		Self-clearing. (transient)
41	Turntable rotate joystick	11 12 15 16	Value at 5V Value too high Value too low Value at 0V	Limited speed and direction frozen at zero and neutral. Alarm sounds indicating fault.	Power up controller with problem corrected.
		17	Not calibrated	Joystick speed and direction frozen at zero and neutral.	Calibrate joystick.
		18	Just calibrated	Initiate 1-second beep of alarm.	Self-clearing. (transient)
42	Turntable rotate directional valves	21	Fault	Limited speed and direction frozen at zero and neutral. Alarm sounds indicating fault.	Power up controller with problem corrected.
43	Turntable rotate flow control valve	12 15	Value too high Value too low	Limited speed and direction frozen at zero and neutral. Alarm sounds indicating fault.	Power up controller with problem corrected.
		17	Not calibrated	Normal function except threshold for	Calibrate valve thresholds.
		18	Just calibrated	one or both directions is zero.	Self-clearing. (transient)
44	Drive enable override switches	21	Fault	Enable override direction is frozen at neutral.	Power up controller with problem corrected.

February 2012 Section 5 • Fault Codes

FAULT CODE CHART

E	rror Source	E	rror Type	Condition	Solution
ID	Name	ID	Name	Condition	Solution
51	Drive joystick	11 12 15 16	Value at 5V Value too high Value too low Value at 0V	Limited speed and direction frozen at zero and neutral. Alarm sounds indicating fault.	Power up controller with problem corrected.
		17	Not calibrated	Joystick speed and direction frozen at zero and neutral.	Calibrate joystick.
		18	Just calibrated	Initiate 1-second beep of alarm.	Self-clearing. (transient)
53	Drive flow valve (EDC)	12 15	Value too high Value too low	Limited speed and direction frozen at zero and neutral. Alarm sounds indicating fault.	Power up controller with problem corrected.
		17	Not calibrated	Normal function except threshold for	Calibrate valve thresholds.
		18	Just calibrated	one or both directions is zero.	Self-clearing. (transient)
54	Drive brake valve	21	Fault	Limited speed and direction frozen at zero and neutral. Alarm sounds indicating fault.	Power up controller with problem corrected.
55	High speed drive motor Valve	21	Fault	Motor speed frozen in the low state. Alarm sounds indicating fault.	Power up controller with problem corrected.
61	Steer joystick	11 12 15 16	Value at 5V Value too high Value too low Value at 0V	Limited speed and direction frozen at zero and neutral. Alarm sounds indicating fault.	Power up controller with problem corrected.
		17	Not calibrated	Joystick speed and direction frozen at zero and neutral.	Calibrate joystick.
		18	Just calibrated	Initiate 1-second beep of alarm.	Self-clearing. (transient)
62	Steer directional valves	21	Fault	Limited speed and direction frozen at zero and neutral. Alarm sounds indicating fault.	Power up controller with problem corrected.

Section 5 • Fault Codes February 2012



This page intentionally left blank.

February 2012 Section 6 • Schematics

Schematics



Observe and Obey:

- ☑ Troubleshooting and repair procedures shall be completed by a person trained and qualified on the repair of this machine.
- ☑ Immediately tag and remove from service a damaged or malfunctioning machine.
- ☑ Repair any machine damage or malfunction before operating the machine.

Before Troubleshooting:

- ☑ Read, understand and obey the safety rules and operating instructions printed in the Genie S-80 and Genie S-85 Operator's Manual on your machine.
- ☑ Be sure that all necessary tools and test equipment are available and ready for use.

About This Section

There are two groups of schematics in this section. An illustration legend precedes each group of drawings.

Electrical Schematics

AWARNING


Electrocution/burn hazard. Contact with electrically charged circuits could result in death or serious injury. Remove all rings, watches and other jewelry.

Hydraulic Schematics


AWARNING

Bodily injury hazard. Spraying hydraulic oil can penetrate and burn skin. Loosen hydraulic connections very slowly to allow the oil pressure to dissipate gradually. Do not allow oil to squirt or spray.

General Repair Process

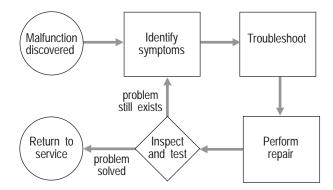


Electrical Symbols Legend

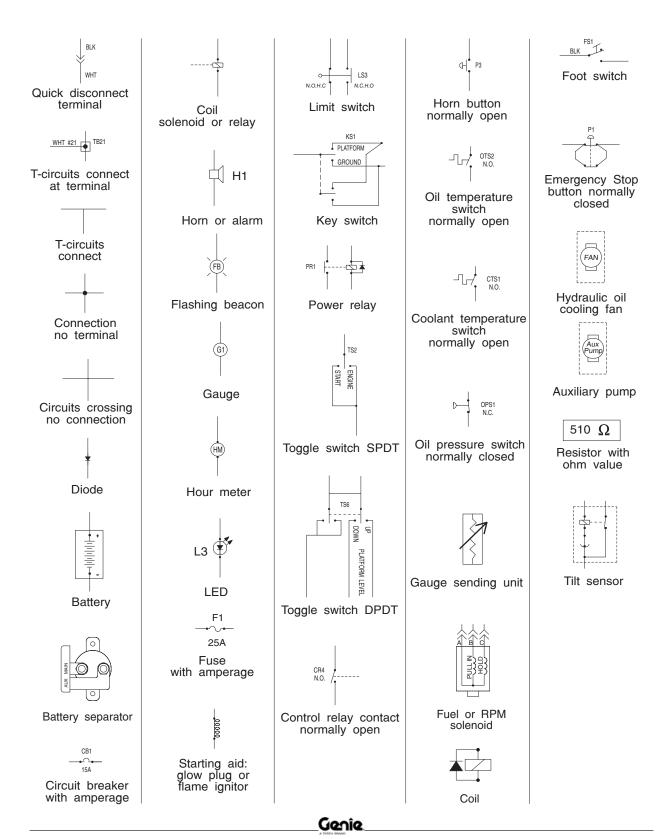

February 2012 Section 6 • Schematics

 Hydraulic Symbols Legend





Pump bi-directional, variable displacement



Motor bi-directional




Motor 2-speed, bi-directional



Pump prime mover (engine or motor)

Double acting cylinder

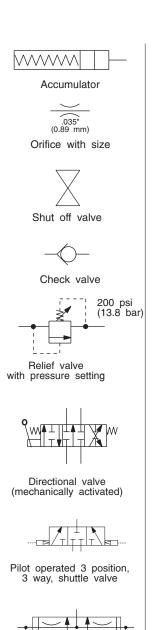


50%


Flow divider/combiner valve

with pressure balancing orifice and flow percentages

Differential sensing valve

 
50%

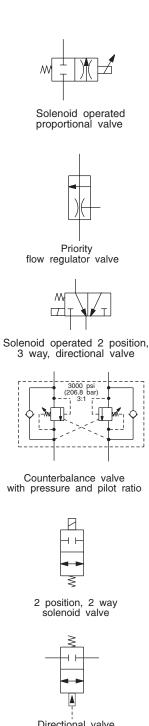





 Solenoid operated 3 position, 4 way, directional valve



2 position, 3 way, shuttle valve



Hydraulic oil cooler








This page intentionally left blank.

Connector Pin Legend






Connector Pin Legend

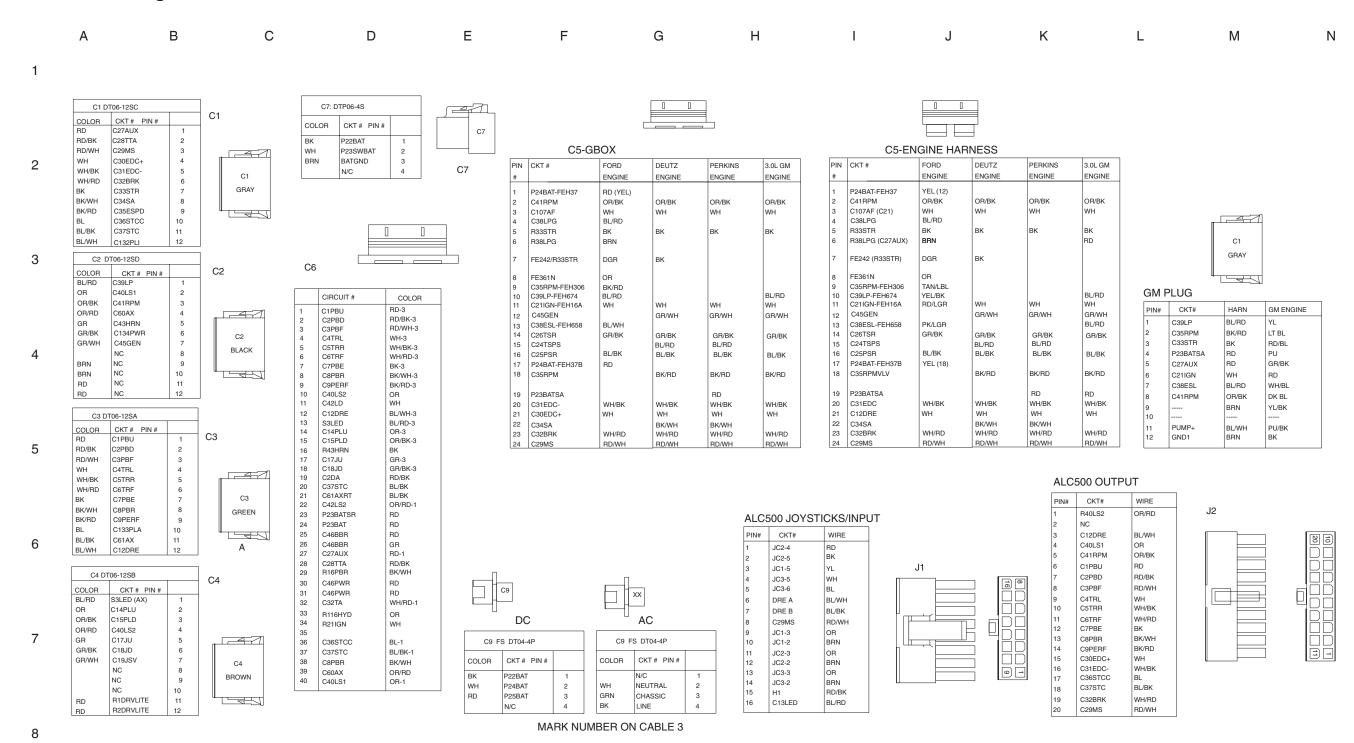

GM 3.0L Engine Wiring Harness

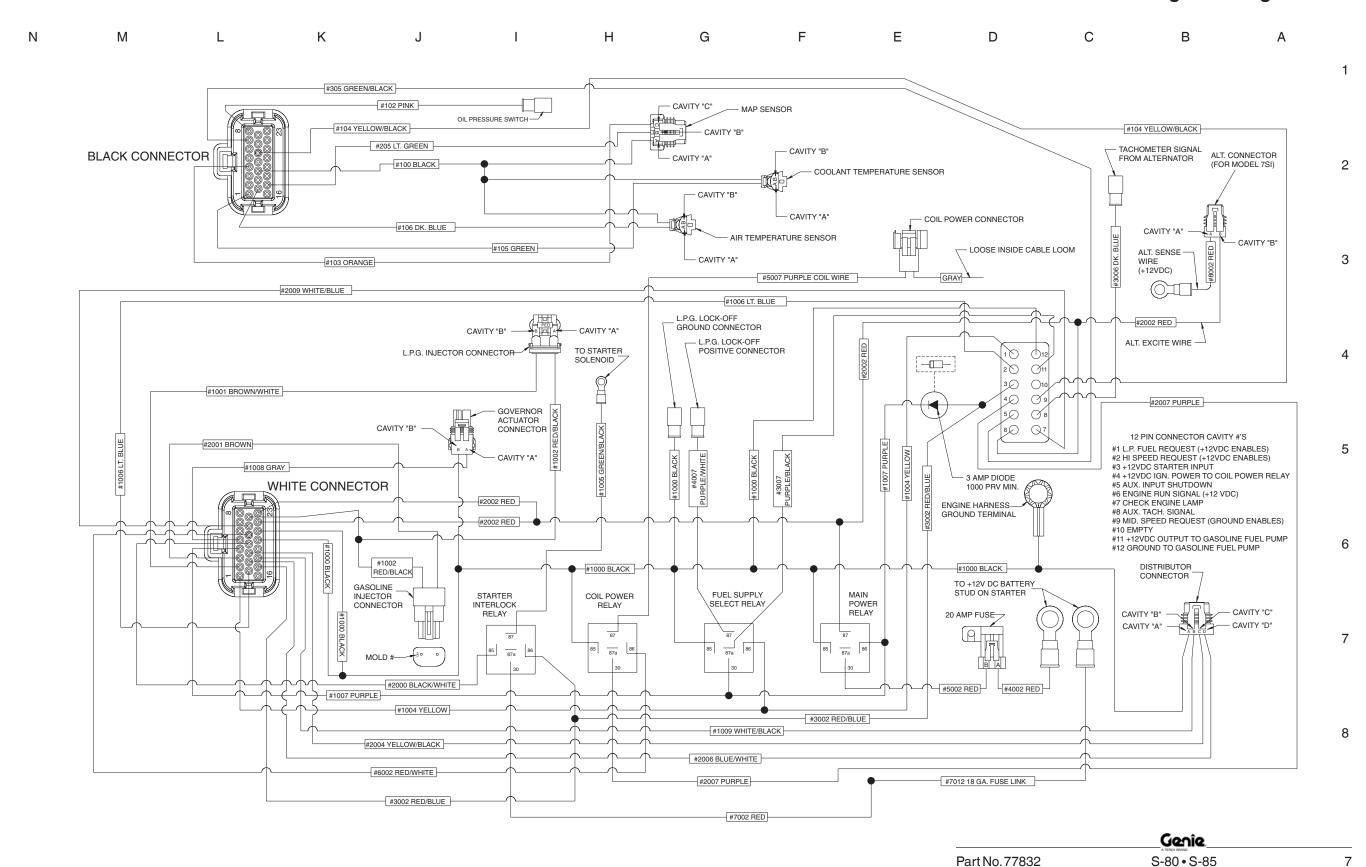

Section 6 • Schematics

GM 3.0L Engine Wiring Harness







Ground Control Box Wiring Diagram, S-80 Deutz F4L 913 Models (before serial number 3577)



Ground Control Box Wiring Diagram, S-80

Deutz F4L 913 Models (before serial number 3577)

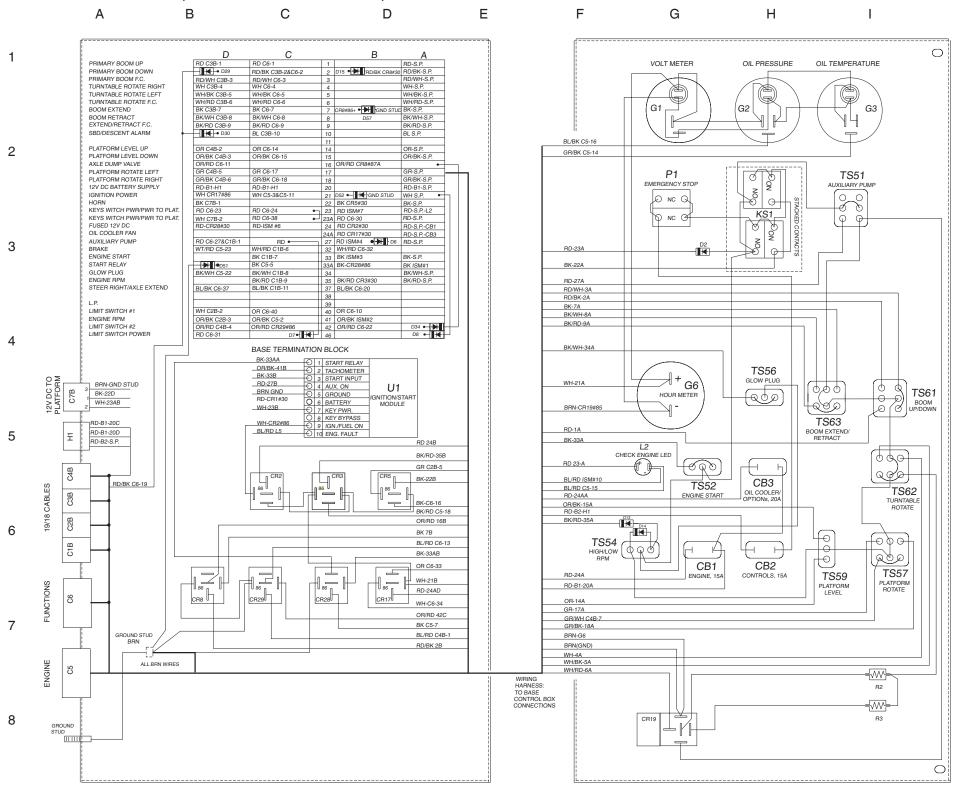

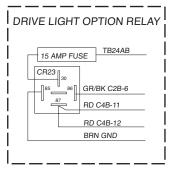

LABEL	DESCRIPTION
P1	RED EMERGENCY STOP BUTTON
KS1	KEY SWITCH
TS51	AUXILIARY TOGGLE SWITCH
TS52	ENGINE START TOGGLE SWITCH
TS56	GLOW PLUG TOGGLE SWITCH
TS54	FUNCTION ENABLE TOGGLE SWITCH
TS57	PLATFORM ROTATE TOGGLE SWITCH
TS59	PLATFORM LEVEL TOGGLE SWITCH
TS61	PRIMARY BOOM UP/DOWN TOGGLE SWITCH
TS62	TURNTABLE ROTATE TOGGLE SWITCH
TS63	PRIMARY BOOM EXTEND/RETRACT TOGGLE SWITCH
CB1	CIRCUIT BREAKER, ENGINE, 15A
CB2	CIRCUIT BREAKER, CONTROLS, 15A
CB3	CIRCUIT BREAKER, OIL COOLER/OPTION, 20A
G1	VOLT METER GAUGE (OPTIONAL)
G2	OIL PRESSURE GAUGE (OPTIONAL)
G3	OIL TEMPERATURE GAUGE (OPTIONAL)
G6	HOUR METER
L2	CHECK ENGINE LED
CR2	IGNITION POWER RELAY
CR3	HIGH IDLE CUTOUT RELAY
CR5	HORN RELAY
CR17	HYDRAULIC COOLER FAN RELAY
CR23	DRIVE LIGHT RELAY OPTION
CR28	TROMBETTA PULL IN RELAY
CR29	AXLE EXTEND LED RELAY
R2	10 OHM RESISTOR
R3	5 OHM RESISTOR
U1	IGNITION/START MODULE

CIRCUIT DESCRIPTION	FROM	то
12 DRIVE ENABLE	BL/WH C6-12	BL/WH C3B-12
19 JIB VALVE	GR/WH C4B-7	GR/WH-S.P.
25 OIL PRESSEURE SENDER	BL/BK C5-16	BL/BK-S.P
26 WATER TEMP SENDER	GR/BK C5-14	GR/BK-S.P.
28 TILT ALARM	RD/BK C1B-2	RD/BK C6-28
29 2WD/4WD	RD/WH C5-24	RD/WH C1B-3
30 E.D.C. REV	WH C1B-4	WH C5-21
31 E.D.C. FWD	WH/BK C5-20	WH/BK C1B-5
36 STEER LEFT/AXLE RETRACT	BL CB1-10	BL C6-36
43 HORN	GR C2B-5	GR CR5#86
45 GEN. OPTION	GR/WH C2B-7	GR/WH C5-12
60 AXLE EXT/RET SELECT	OR/RD C6-39	OR/RD C2B-4
61 AXLE RETRACT	BL/BK C3B-11	BL/BK C6-21

February 2012 Section 6 • Schematics

Platform Control Box Wiring Diagram, S-80

Deutz F4L 913 Models (before serial number 3577)

2


3


5


N M L K J I H G F E D C B A

COMPONENT INDEX

P2	EMERGENCY STOP BUTTON
P3	HORN SWITCH
TS1	AUXILIARY TOGGLE SWITCH
TS2	ENGINE START SWITCH
TS6	GLOW PLUG OPTION
TS4	HIGH RPM SWITCH
TS7	PLATFORM ROTATE TOGGLE SWITCH
TS9	PLATFORM LEVEL TOGGLE SWITCH
TS14	LOW/HIGH DRIVE SPEED TOGGLE SWITCH
TS15	DRIVE ENABLE TOGGLE SWITCH
TS16	AXLE EXTEND/RETRACT TOGGLE SWITCH
TS47	GENERATOR TOGGLE SWITCH (OPTION)
TS48	WORK LIGHT TOGGLE SWITCH (OPTION)
L1	DRIVE ENABLE LED
L40	AXLE EXTENDED LED
JC3	DRIVE PROPORTIONAL JOYSTICK, STEER LEFT/RIGHT
JC1	BOOM PROPORTIONAL JOYSTICK: BOOM EXTEND/RETRACT
JC2	BOOM PROPORTIONAL JOYSTICK: BOOM UP/DOWN, TURNTABLE ROTATE
CR26	AXLE CUT-OUT RELAY
U13	ALC500
H1	TILT ALARM

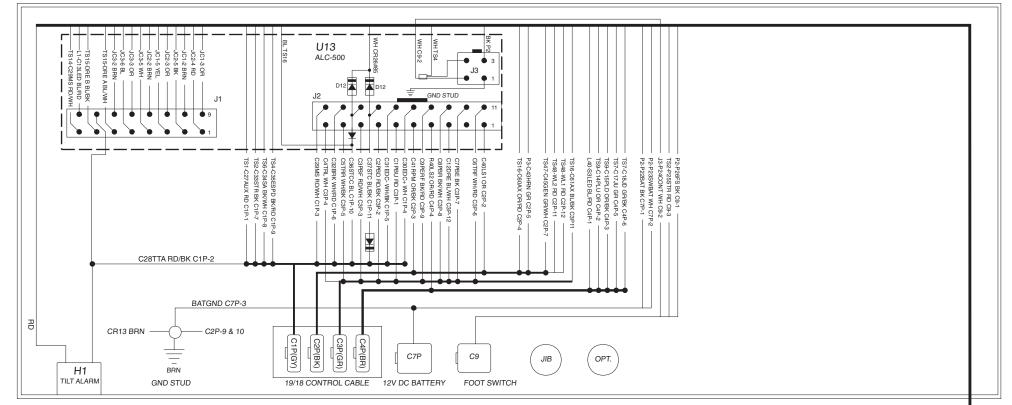

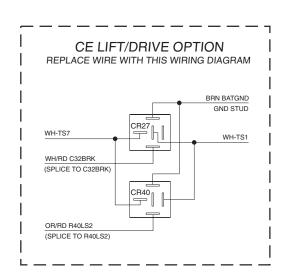

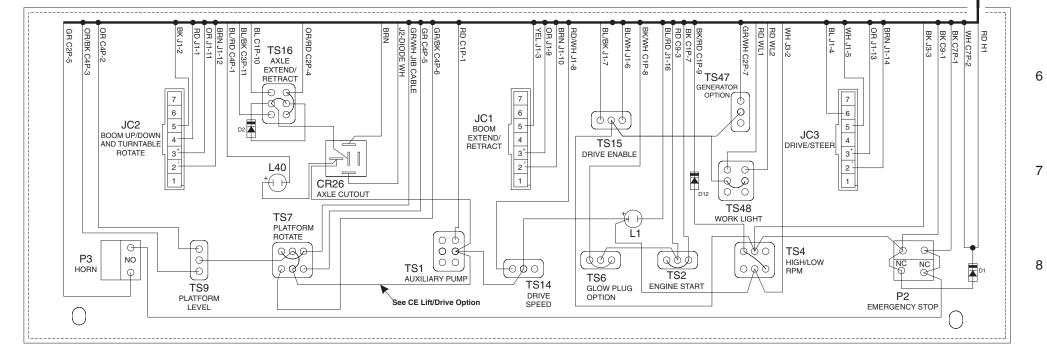

Genîe

Section 6 • Schematics

Platform Control Box Wiring Diagram, S-80 Deutz F4L 913 Models (before serial number 3577)





Electrical Schematic, S-80

Deutz F4L 913 Models (after serial number 3576)



Ε

Electrical Schematic, S-80

Deutz F4L 913 Models (after serial number 3576)

1 C28TTA RD/BK P26ESTP BK P26ESTP BK 2 3 4 5 6

- NOTES:
 1. ALL LIMIT SWITCHES SHOWN WITH BOOM IN STOWED POSITION.
- > C1B & C1P GRAY; C2B & C2P BLACK; C3B & C3P GREEN; C4B & C4P BROWN.

Ν

> ROCKER STEER OPTION ONLY.

ADD D40 ONLY IF UNIT HAS L4 AND L48.

Genîe

S-80 • S-85

Part No. 77832

8

February 2012 Section 6 • Schematics


Part No. 77832

S-80 • S-85

15

Electrical Schematic, S-80

Deutz F4L 913 Models (after serial number 3576)

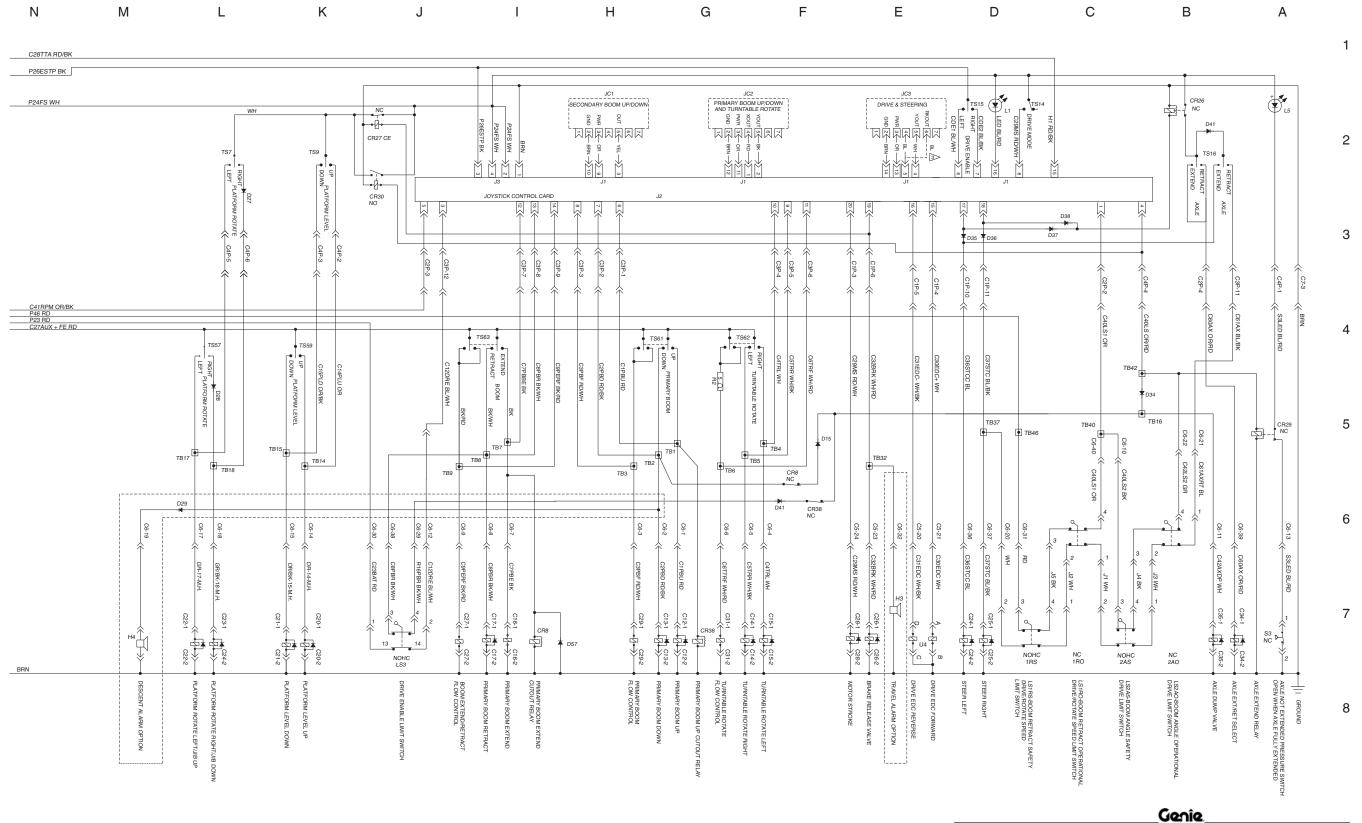

Section 6 • Schematics

Electrical Schematic, S-80

Deutz F4L 913 Models (after serial number 3576)






Electrical Schematic, S-80, CE Models Deutz F4L 913 Models (after serial number 3576)




Electrical Schematic, S-80, CE Models

Deutz F4L 913 Models (after serial number 3576)

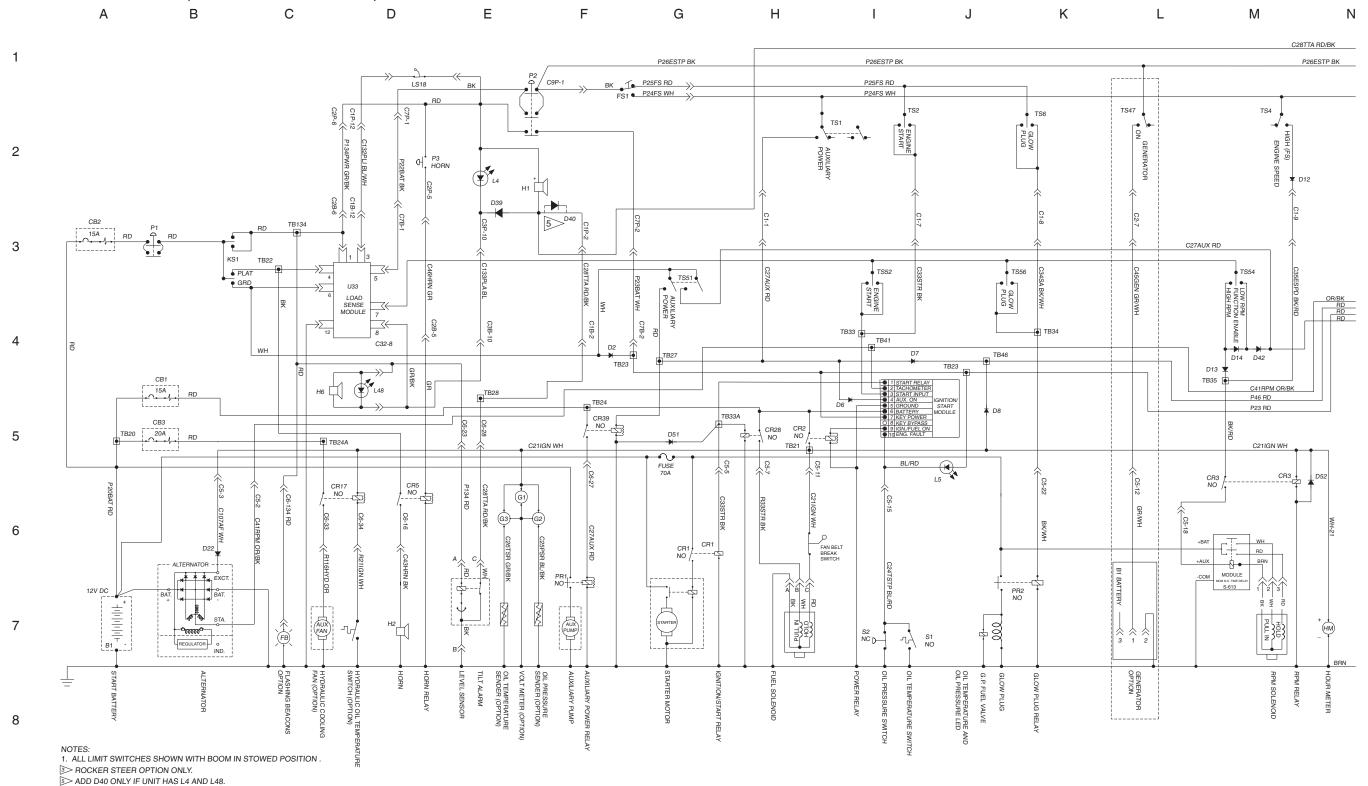

Electrical Schematic, S-80, CE Models

Deutz F4L 913 Models (after serial number 3576)

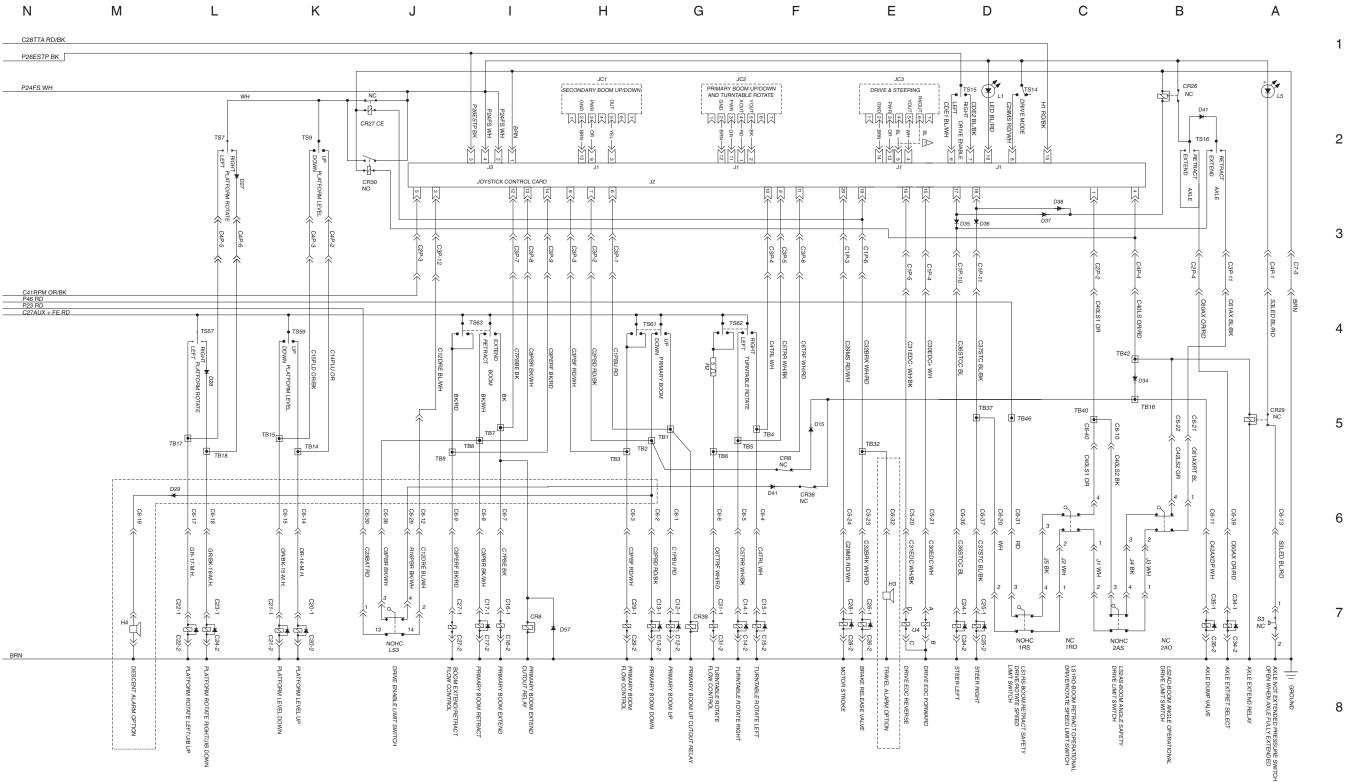

Section 6 • Schematics

Electrical Schematic, S-80, CE Models Deutz F4L 913 Models (after serial number 3576)







Ground Control Box Wiring Diagram, S-80 Deutz F4L 913 Models (after serial number 3576)



Ground Control Box Wiring Diagram, S-80

Deutz F4L 913 Models (after serial number 3576)

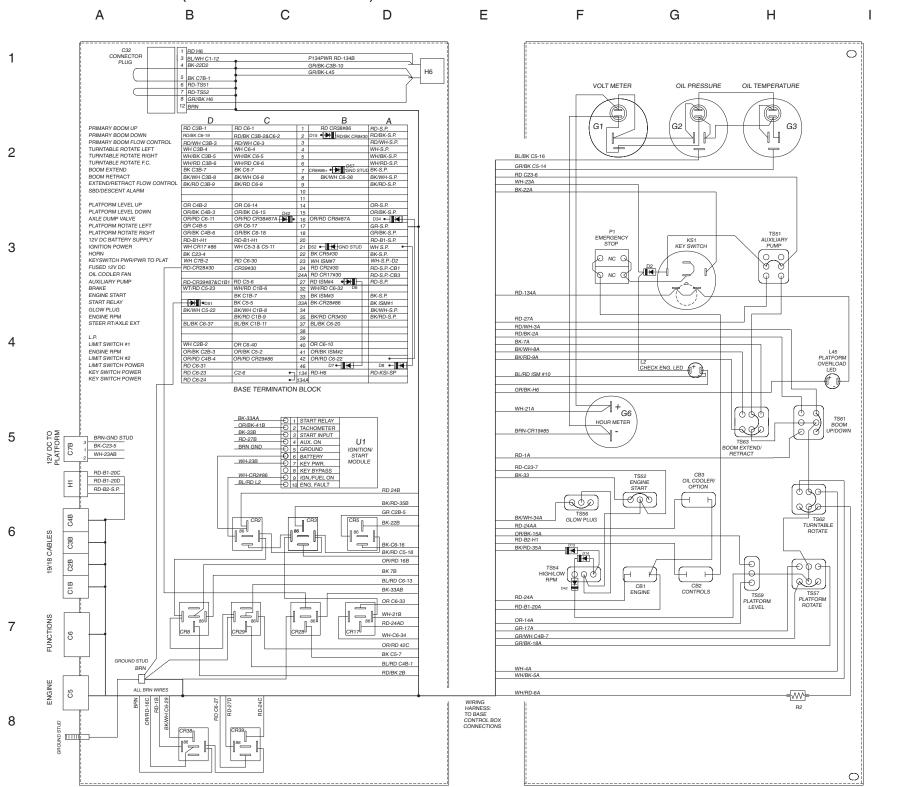

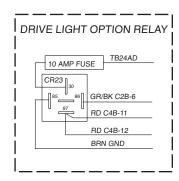

Ν

K


LABEL	DESCRIPTION
P1	RED EMERGENCY STOP BUTTON
KS1	KEY SWITCH
TS51	AUXILIARY TOGGLE SWITCH
TS52	ENGINE START TOGGLE SWITCH
TS56	GLOW PLUG TOGGLE SWITCH
TS54	FUNCTION ENABLE TOGGLE SWITCH
TS57	PLATFORM ROTATE TOGGLE SWITCH
TS59	PLATFORM LEVEL TOGGLE SWITCH
TS61	PRIMARY BOOM UP/DOWN TOGGLE SWITCH
TS62	TURNTABLE ROTATE TOGGLE SWITCH
TS63	PRIMARY BOOM EXTEND/RETRACT TOGGLE SWITCH
CB1	CIRCUIT BREAKER, ENGINE, 15A
CB2	CIRCUIT BREAKER, CONTROLS, 15A
CB3	CIRCUIT BREAKER, OIL COOLER/OPTION, 15A
G1	VOLT METER GAUGE (OPTIONAL)
G2	OIL PRESSURE GAUGE (OPTIONAL)
G3	OIL TEMPERATURE GAUGE (OPTIONAL)
G6	HOUR METER
L2	CHECK ENGINE LED
L45	PLATFORM OVERLOAD LED
CR2	IGNITION POWER RELAY
CR3	HIGH IDLE CUTOUT RELAY
CR5	HORN RELAY
CR17	HYDRAULIC COOLER FAN RELAY
CR23	DRIVE LIGHT RELAY OPTION
CR25	AXLE RET L/O RELAY
CR28	TROMBETTA PULL IN RELAY
CR29	AXLE EXTEND LED RELAY
CR38	EXTEND FUNCTION CUTOUT RELAY
CR39	AUXILIARY PUMP RELAY
R2	5 OHM RESISTOR
U1	IGNITION/START MODULE

CIRCUIT DESCRIPTION	FROM	то
12 DRIVE ENABLE	BL/WH C6-12	BL/WH C3B-12
19 JIB VALVE	GR/WH C4B-7	GR/WH-S.P.
25 OIL PRESSURE SENDER	BL/BK C5-16	BL/BK-S.P
26 OIL TEMP SENDER	GR/BK C5-14	GR/BK-S.P.
28 TILT ALARM	RD/BK C1-2	RD/BK C6-28
29 2WD/4WD	RD/WH C5-24	RD/WH C1B-3
30 E.D.C. REV	WH C1B-4	WH C5-21
31 E.D.C. FWD	WH/BK C5-20	WH/BK C1B-5
36 STEER LEFT/AXLE RETRACT	BL CB1-10	BL C6-36
43 HORN	GR C2B-5	GR CR5#86
45 GEN. OPTION	GR/WH C2B-7	GR/WH C5-12
60 AXLE EXT/RET SELECT	OR/RD C6-39	OR/RD C2B-4
61 AXLE RETRACT	BL/BK C3B-11	BL/BK C6-21

February 2012 Section 6 • Schematics

Platform Control Box Wiring Diagram, S-80

Deutz F4L 913 Models (after serial number 3576)

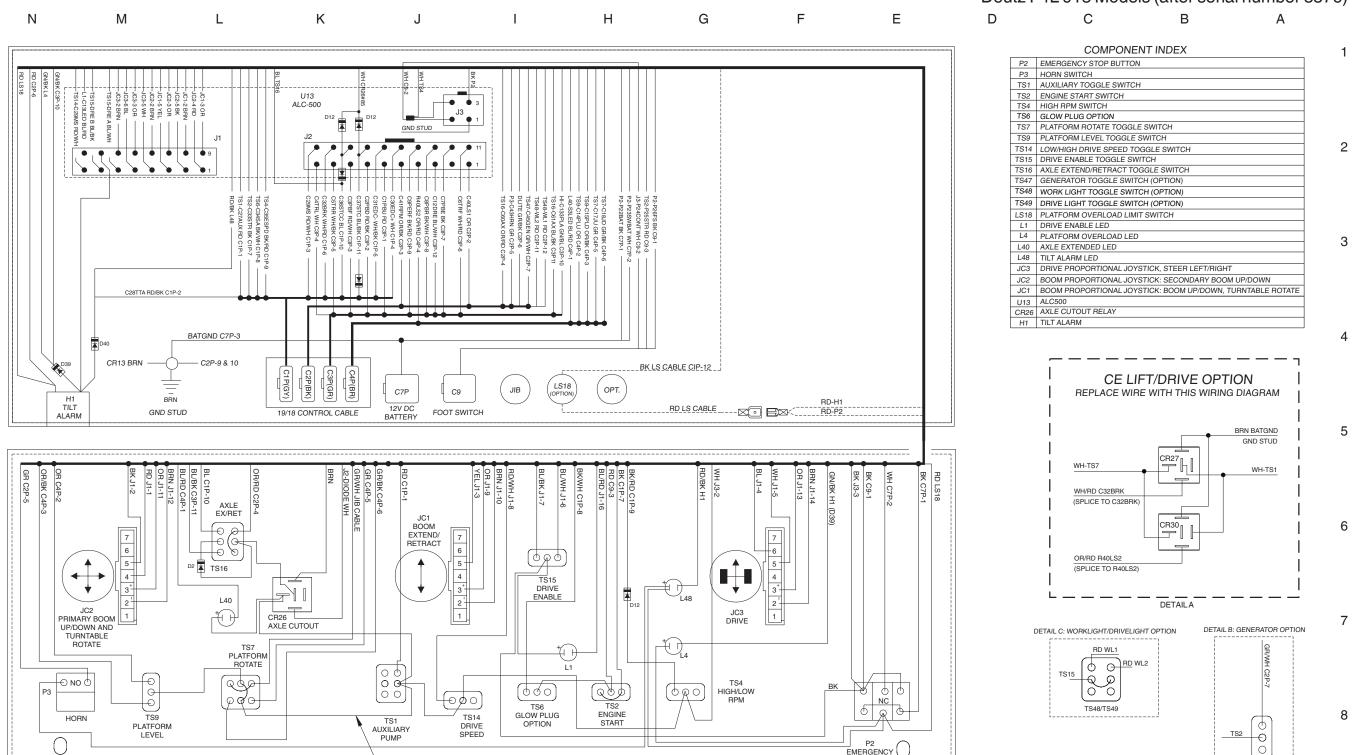

CE MODELS (SEE DETAIL A)

Part No. 77832 S-80 • S-85 23

Genîe

Section 6 • Schematics

Platform Control Box Wiring Diagram, S-80 Deutz F4L 913 Models (after serial number 3576)







Ground Control Box Wiring Diagram, S-80, CE Models
Deutz F4L 913 Models (after serial number 3576)



Ground Control Box Wiring Diagram, S-80, CE Models

Deutz F4L 913 Models (after serial number 3576)

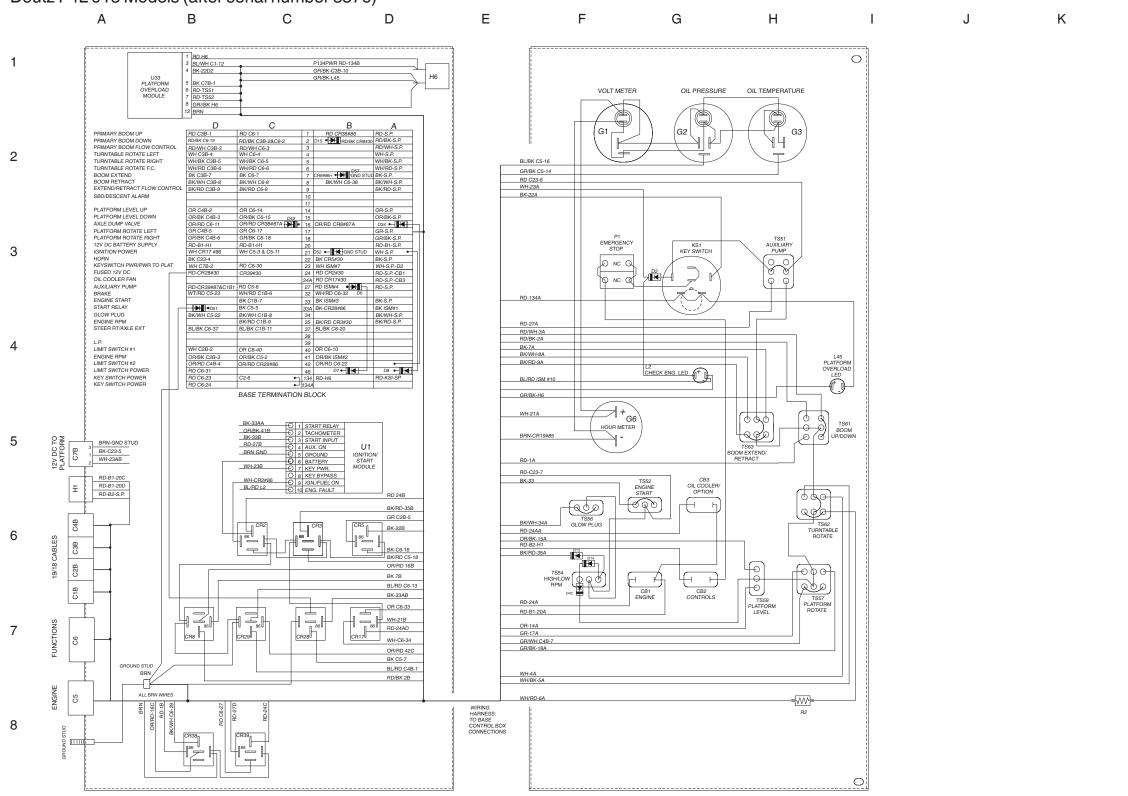

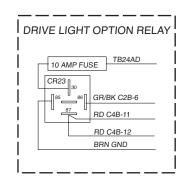

Ν


DESCRIPTION
RED EMERGENCY STOP BUTTON
KEY SWITCH
AUXILIARY TOGGLE SWITCH
ENGINE START TOGGLE SWITCH
GLOW PLUG TOGGLE SWITCH
FUNCTION ENABLE TOGGLE SWITCH
PLATFORM ROTATE TOGGLE SWITCH
PLATFORM LEVEL TOGGLE SWITCH
PRIMARY BOOM UP/DOWN TOGGLE SWITCH
TURNTABLE ROTATE TOGGLE SWITCH
PRIMARY BOOM EXTEND/RETRACT TOGGLE SWITCH
CIRCUIT BREAKER, ENGINE, 15A
CIRCUIT BREAKER, CONTROLS, 15A
CIRCUIT BREAKER, OIL COOLER/OPTION, 15A
VOLT METER GAUGE (OPTIONAL)
OIL PRESSURE GAUGE (OPTIONAL)
OIL TEMPERATURE GAUGE (OPTIONAL)
HOUR METER
CHECK ENGINE LED
PLATFORM OVERLOAD LED
IGNITION POWER RELAY
HIGH IDLE CUTOUT RELAY
HORN RELAY
HYDRAULIC COOLER FAN RELAY
DRIVE LIGHT RELAY OPTION
AXLE RET L/O RELAY
TROMBETTA PULL IN RELAY
AXLE EXTEND LED RELAY
EXTEND FUNCTION CUTOUT RELAY
AUXILIARY PUMP RELAY
5 OHM RESISTOR
IGNITION/START MODULE
PLATFORM OVERLOAD MODULE

CIRCUIT DESCRIPTION	FROM	то
12 DRIVE ENABLE	BL/WH C6-12	BL/WH C3B-12
19 JIB VALVE	GR/WH C4B-7	GR/WH-S.P.
25 OIL PRESSURE SENDER	BL/BK C5-16	BL/BK-S.P
26 OIL TEMP SENDER	GR/BK C5-14	GR/BK-S.P.
28 TILT ALARM	RD/BK C1-2	RD/BK C6-28
29 2WD/4WD	RD/WH C5-24	RD/WH C1B-3
30 E.D.C. REV	WH C1B-4	WH C5-21
31 E.D.C. FWD	WH/BK C5-20	WH/BK C1B-5
36 STEER LEFT/AXLE RETRACT	BL CB1-10	BL C6-36
43 HORN	GR C2B-5	GR CR5#86
45 GEN. OPTION	GR/WH C2B-7	GR/WH C5-12
60 AXLE EXT/RET SELECT	OR/RD C6-39	OR/RD C2B-4
61 AXLE RETRACT	BL/BK C3B-11	BL/BK C6-21

February 2012 Section 6 • Schematics

Platform Control Box Wiring Diagram, S-80, CE Models

Deutz F4L 913 Models (after serial number 3576)

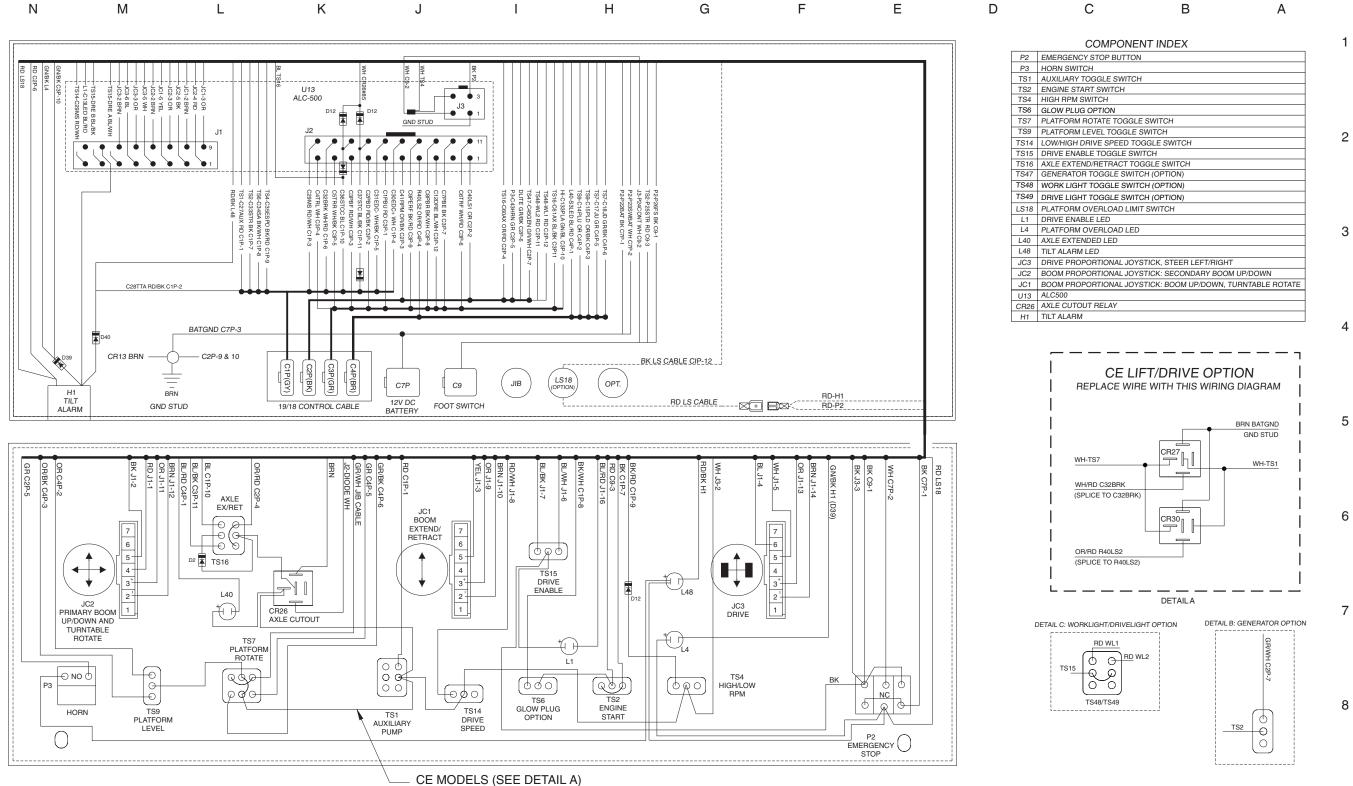

Part No. 77832 S-80 • S-85 27

Genîe

February 2012 Section 6 • Schematics

Platform Control Box Wiring Diagram, S-80, CE Models Deutz F4L 913 Models (after serial number 3576)






Ground Control Box Wiring Diagram, S-80


GM 3.0L Models (before serial number 3577)



Ground Control Box Wiring Diagram, S-80

GM 3.0L Models (before serial number 3577)

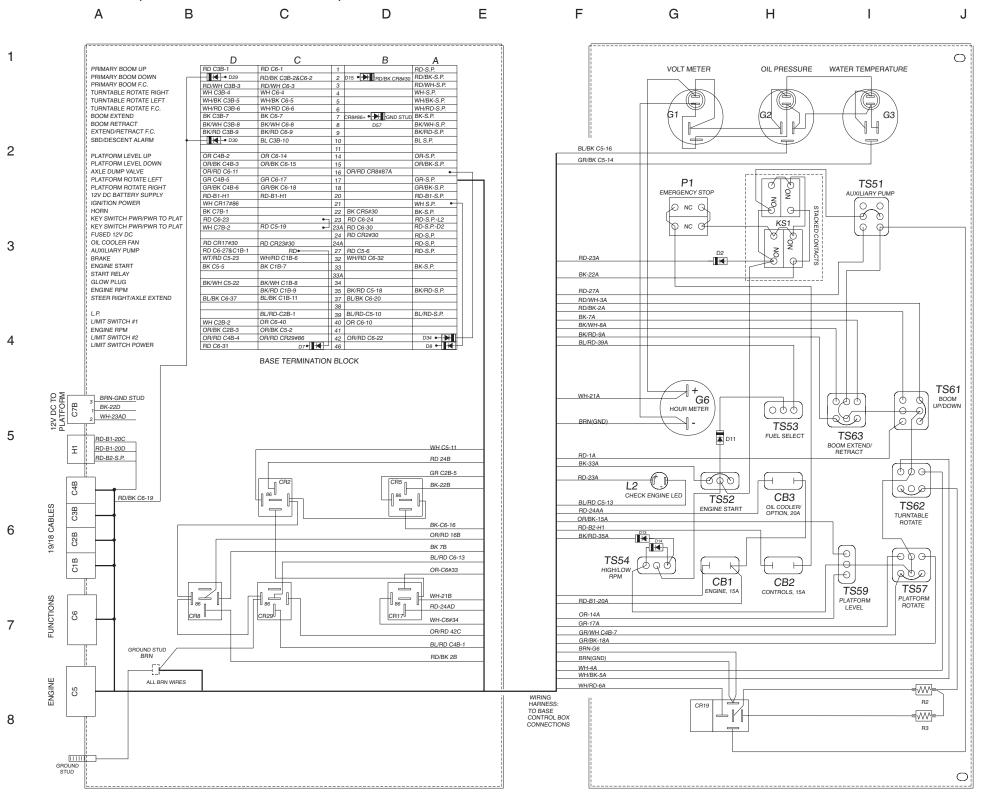

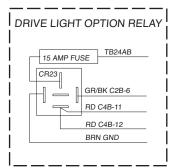

Ν

LABEL	DESCRIPTION
P1	EMERGENCY STOP BUTTON
KS1	KEY SWITCH
TS51	AUXILIARY POWER TOGGLE SWITCH
TS52	ENGINE START TOGGLE SWITCH
TS53	LP/GAS SELECT TOGGLE SWITCH
TS54	FUNCTION ENABLE/RPM SELECT TOGGLE SWITCH
TS57	PLATFORM ROTATE TOGGLE SWITCH
TS59	PLATFORM LEVEL TOGGLE SWITCH
TS61	PRIMARY BOOM UP/DOWN TOGGLE SWITCH
TS62	TURNTABLE ROTATE TOGGLE SWITCH
TS63	PRIMARY BOOM EXTEND/RETRACT TOGGLE SWITCH
CB1	CIRCUIT BREAKER, ENGINE, 15A
CB2	CIRCUIT BREAKER, CONTROLS, 15A
CB3	CIRCUIT BREAKER, OIL COOLER/OPTION, 20A
G1	VOLT METER GAUGE (OPTIONAL)
G2	OIL PRESSURE GAUGE (OPTIONAL)
G3	COOLANT TEMPERATURE GAUGE (OPTIONAL)
G6	HOUR METER
L2	CHECK ENGINE LED
R2	TURNTABLE ROTATE LIMITING RESISTOR, 10 OHMS
R3	TURNTABLE ROTATE LIMITING RESISTOR, 5 OHMS (APU)
CR2	IGNITION POWER RELAY
CR5	HORN RELAY
CR8	BOOM FUNCTION CUTOUT
CR17	HYDRAULIC COOLER FAN RELAY
CR19	TURNTABLE ROTATE LIMITING RELAY
CR23	DRIVE LIGHT RELAY (OPTIONAL)
CR29	AXLE EXTEND LED RELAY
U1	IGNITION/START MODULE

CIRCUIT DESCRIPTION	FROM	TO
12 DRIVE ENABLE	BL/WH C6-12	BL/WH C3B-12
19 JIB VALVE	GR/WH C4B-7	GR/WH-S.P.
25 OIL PRESSURE SENDER	BL/BK C5-16	BL/BK-S.P
26 WATER TEMP SENDER	GR/BK C5-14	GR/BK-S.P.
28 TILT ALARM	RD/BK C1B-2	RD/BK C6-28
29 2WD/4WD	RD/WH C5-24	RD/WH C1B-3
30 E.D.C. REVERSE	WH C1B-4	WH C5-21
31 E.D.C. FORWARD	WH/BK C5-20	WH/BK C1B-5
36 STEER LEFT/AXLE RETRACT	BL CB1-10	BL C6-36
43 HORN	GR C2B-5	GR CR5#86
45 GENERATOR OPTION	GR/WH C2B-7	GR/WH C5-12
60 AXLE EXTEND/RETRACT SELECT	OR/RD C6-39	OR/RD C2B-4
61 AXLE RETRACT	BL/BK C3B-11	BL/BK C6-21

February 2012 Section 6 • Schematics

Platform Control Box Wiring Diagram, S-80

С

GM 3.0L Models (before serial number 3577)

Α

3


5

6

COMPONENT INDEX


Ν


P2	EMERGENCY STOP BUTTON
P3	HORN SWITCH
TS1	AUXILIARY TOGGLE SWITCH
TS2	ENGINE START TOGGLE SWITCH
TS3	FUEL SELECT TOGGLE SWITCH
TS4	HIGH RPM TOGGLE SWITCH
TS7	PLATFORM ROTATE TOGGLE SWITCH
TS9	PLATFORM LEVEL TOGGLE SWITCH
TS14	LOW/HIGH DRIVE SPEED TOGGLE SWITCH
TS15	DRIVE ENABLE TOGGLE SWITCH
TS16	AXLE EXTEND/RETRACT TOGGLE SWITCH
TS47	GENERATOR TOGGLE SWITCH (OPTION)
TS48	WORK LIGHT TOGGLE SWITCH (OPTION)
L1	DRIVE ENABLE LED
L40	AXLE EXTENDED LED
JC3	DRIVE PROPORTIONAL JOYSTICK, STEER LEFT/RIGHT
JC1	BOOM PROPORTIONAL JOYSTICK: BOOM EXTEND/RETRACT
JC2	BOOM PROPORTIONAL JOYSTICK: BOOM UP/DOWN, TURNTABLE ROTATE
U13	PLATFORM CONTROLS CIRCUIT BOARD (ALC500)
H1	TILT ALARM

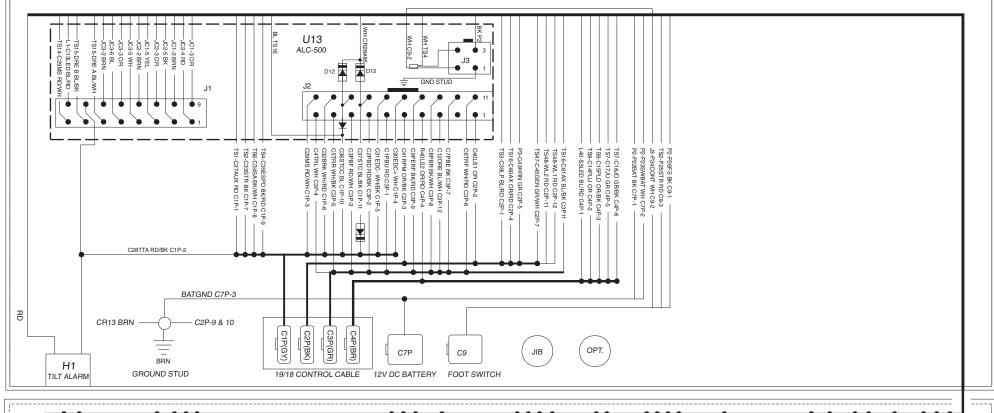

Ε

D

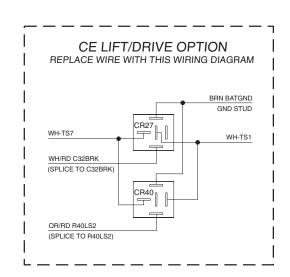

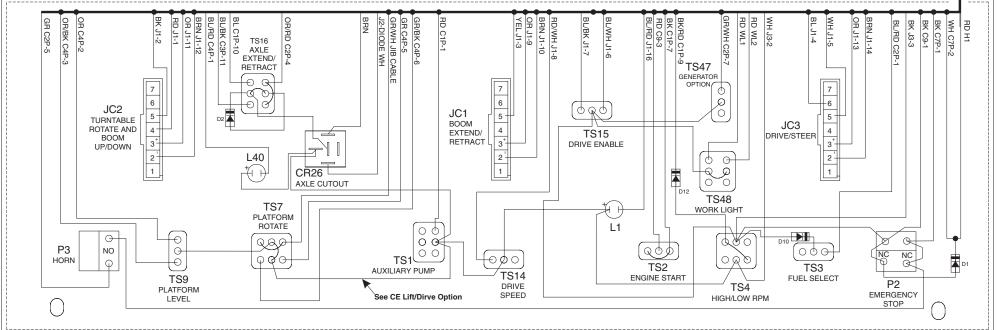

Part No. 77832

Section 6 • Schematics

Platform Control Box Wiring Diagram, S-80

GM 3.0L Models (before serial number 3577)






Electrical Schematic, S-80

GM 3.0L Models (after serial number 3576)




Electrical Schematic, S-80

GM 3.0L Models (after serial number 3576)

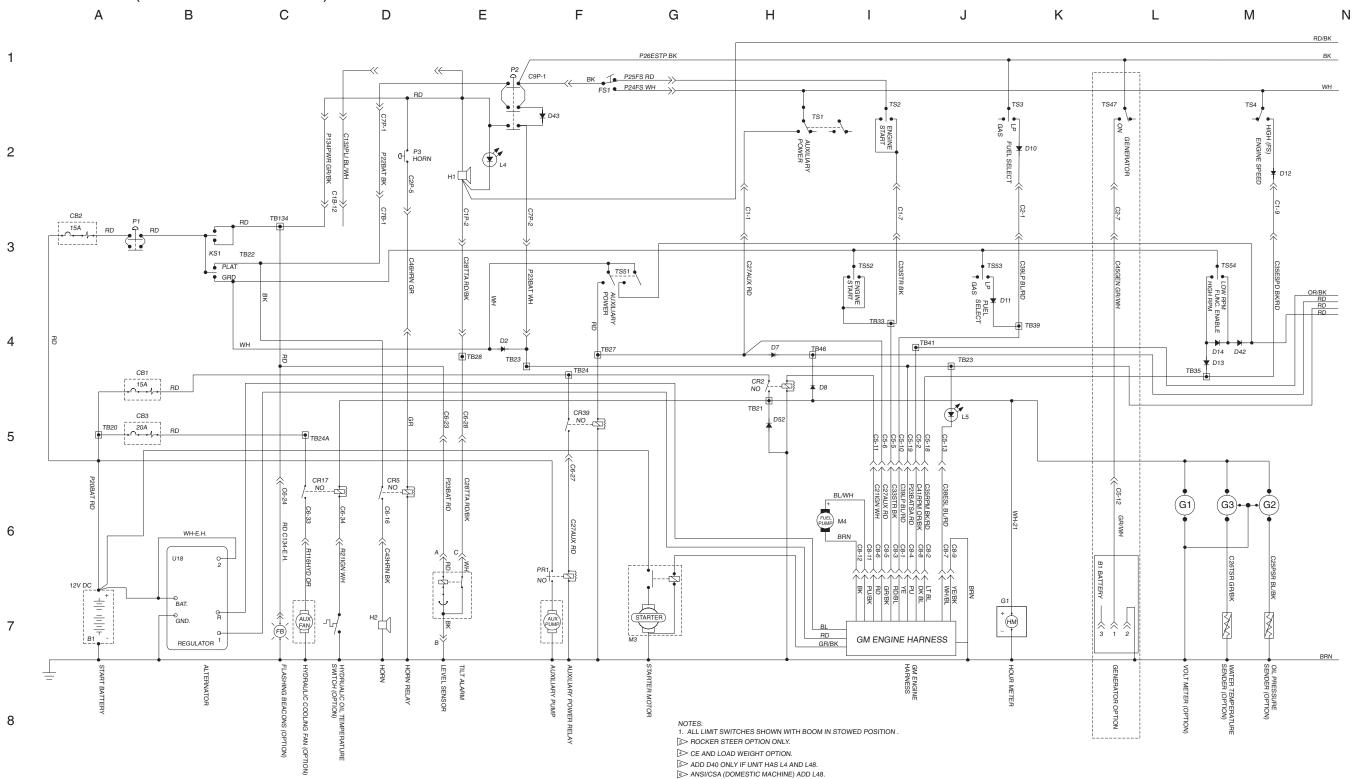

Electrical Schematic, S-80

GM 3.0L Models (after serial number 3576)

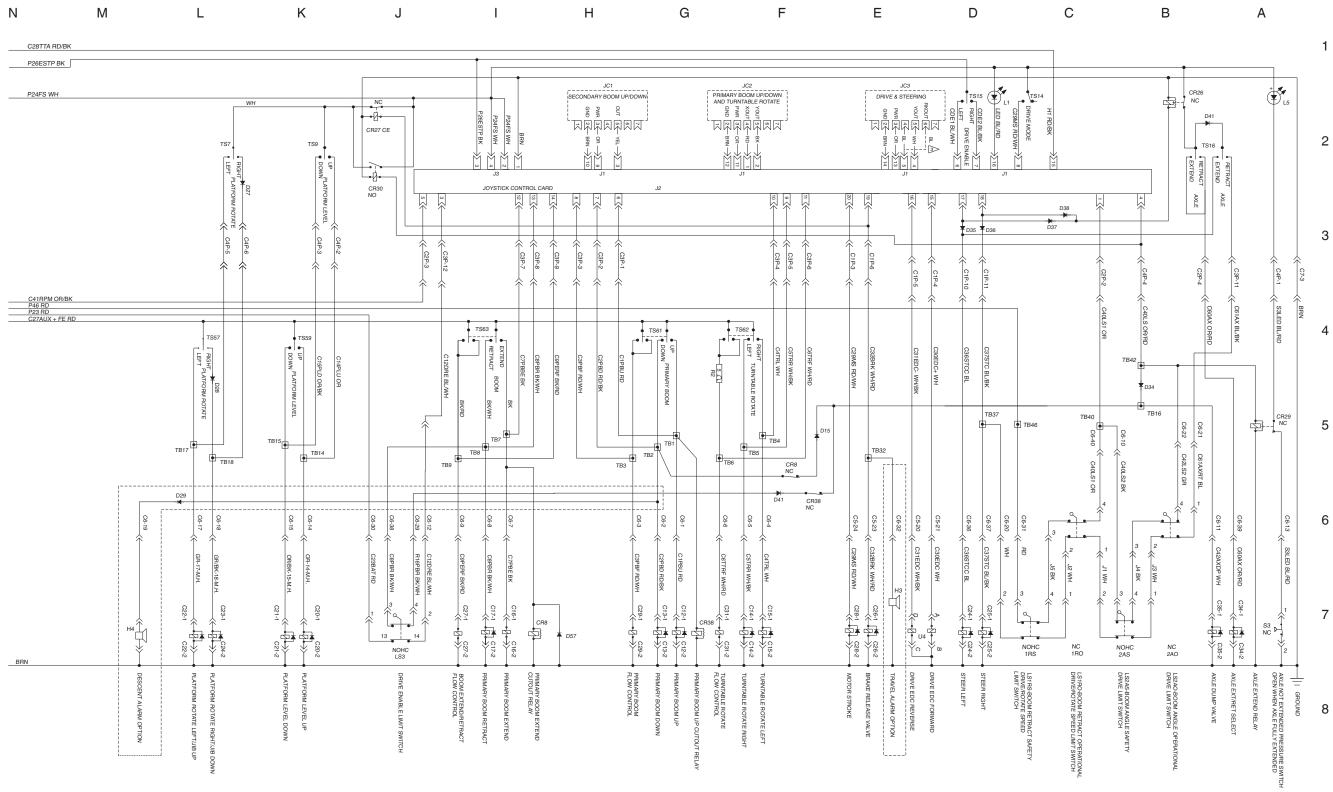

Section 6 • Schematics

Electrical Schematic, S-80

GM 3.0L Models (after serial number 3576)






Ground Control Box Wiring Diagram, S-80


GM 3.0L Models (after serial number 3576)



Ground Control Box Wiring Diagram, S-80

GM 3.0L Models (after serial number 3576)

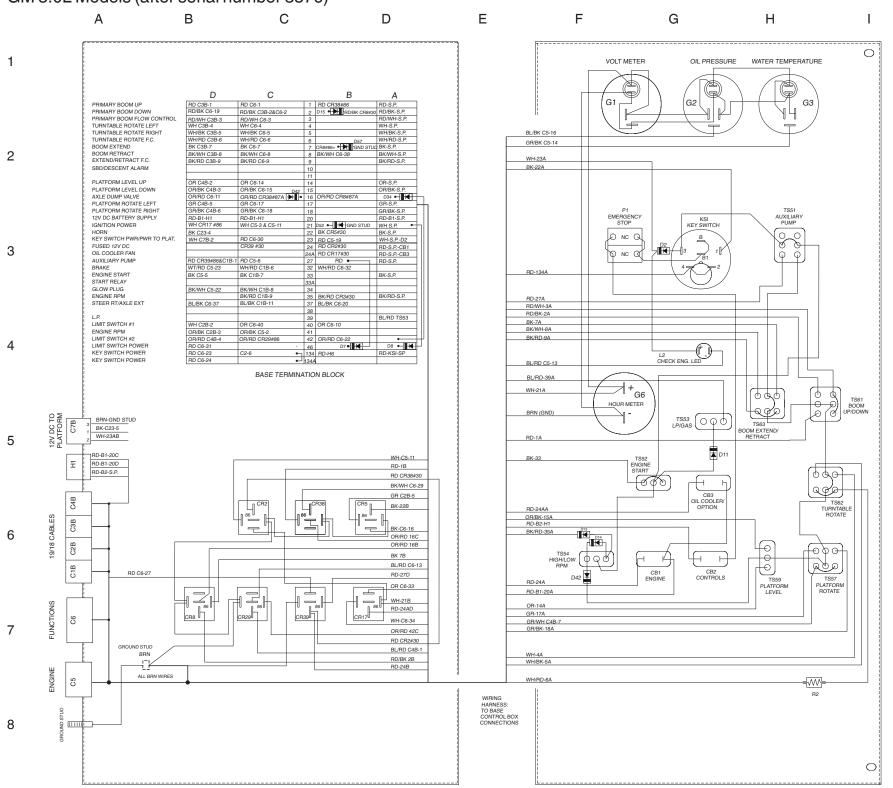

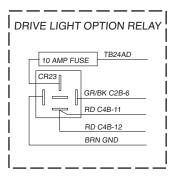

Ν


K

LABEL	DESCRIPTION	
P1	EMERGENCY STOP BUTTON	
KS1	KEY SWITCH	
TS51	AUXILIARY POWER TOGGLE SWITCH	
TS52	ENGINE START TOGGLE SWITCH	
TS53	LP/GAS SELECT TOGGLE SWITCH	
TS54	FUNCTION ENABLE/RPM SELECT TOGGLE SWITCH	
TS57	PLATFORM ROTATE TOGGLE SWITCH	
TS59	PLATFORM LEVEL TOGGLE SWITCH	
TS61	PRIMARY BOOM UP/DOWN TOGGLE SWITCH	
TS62	TURNTABLE ROTATE TOGGLE SWITCH	
TS63	PRIMARY BOOM EXTEND/RETRACT TOGGLE SWITCH	
CB1	CIRCUIT BREAKER, ENGINE, 15A	
CB2	CIRCUIT BREAKER, CONTROLS, 15A	
CB3	CIRCUIT BREAKER, OIL COOLER/OPTION, 20A	
G1	VOLT METER GAUGE (OPTIONAL)	
G2	OIL PRESSURE GAUGE (OPTIONAL)	
G3	WATER TEMP. GAUGE (OPTIONAL)	
G6	HOUR METER	
L2	CHECK ENGINE LED	
R2	TURNTABLE ROTATE LIMITING RESISTOR, 5 OHMS	
CR2	IGNITION POWER RELAY	
CR3	HIGH IDLE CUTOUT RELAY	
CR5	HORN RELAY	
CR8	BOOM FUNCTION CUTOUT	
CR17	HYDRAULIC COOLER FAN RELAY	
CR23	DRIVE LIGHT RELAY (OPTIONAL)	
CR25	AXLE RET L/O RELAY	
CR29	AXLE EXTEND LED RELAY	
CR38	EXTEND FUNCTION CUTOUT RELAY	
CR39	AUXILIARY PUMP RELAY	
U1	IGNITION/START MODULE	

CIRCUIT DESCRIPTION	FROM	TO
12 DRIVE ENABLE	BL/WH C6-12	BL/WH C3B-12
19 JIB VALVE	GR/WH C4B-7	GR/WH-S.P.
25 OIL PRESSURE SENDER	BL/BK C5-16	BL/BK-S.P
26 WATER TEMP SENDER	GR/BK C5-14	GR/BK-S.P.
28 TILT ALARM	RD/BK C1-2	RD/BK C6-28
29 2WD/4WD	RD/WH C5-24	RD/WH C1B-3
30 E.D.C. REVERSE	WH C1B-4	WH C5-21
31 E.D.C. FORWARD	WH/BK C5-20	WH/BK C1B-5
36 STEER LEFT/AXLE RETRACT	BL CB1-10	BL C6-36
43 HORN	GR C2B-5	GR CR5#86
45 GENERATOR OPTION	GR/WH C2B-7	GR/WH C5-12
60 AXLE EXTEND/RETRACT SELECT	OR/RD C6-39	OR/RD C2B-4
61 AXLE RETRACT	BL/BK C3B-11	BL/BK C6-21

Platform Control Box Wiring Diagram, S-80

GM 3.0L Models (after serial number 3576)

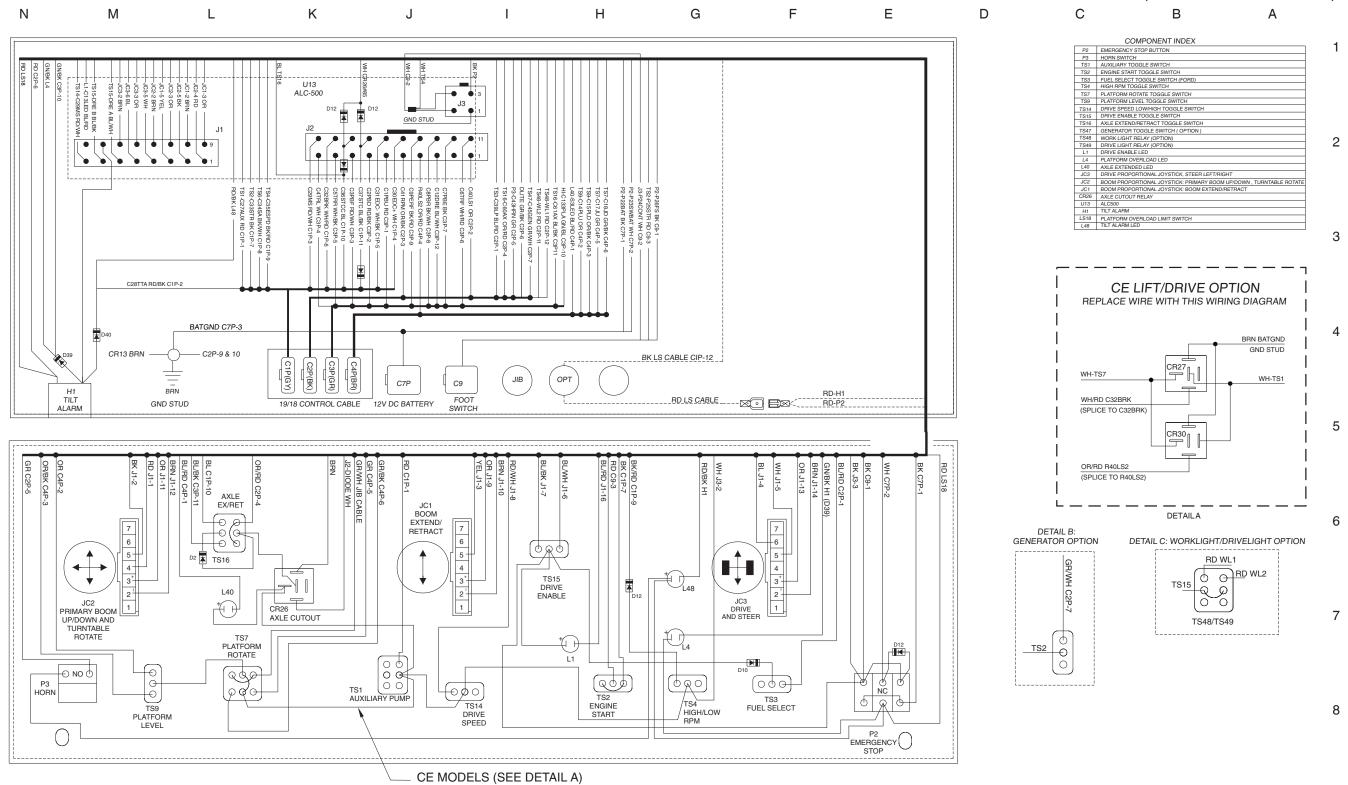

Part No. 77832 S-80 • S-85 39

Genîe

Section 6 • Schematics

Platform Control Box Wiring Diagram, S-80 GM 3.0L Models (after serial number 3576)







Ground Control Box Wiring Diagram, S-80Perkins 704-30 Models (before serial number 3577)



Ground Control Box Wiring Diagram, S-80

Perkins 704-30 Models (before serial number 3577)

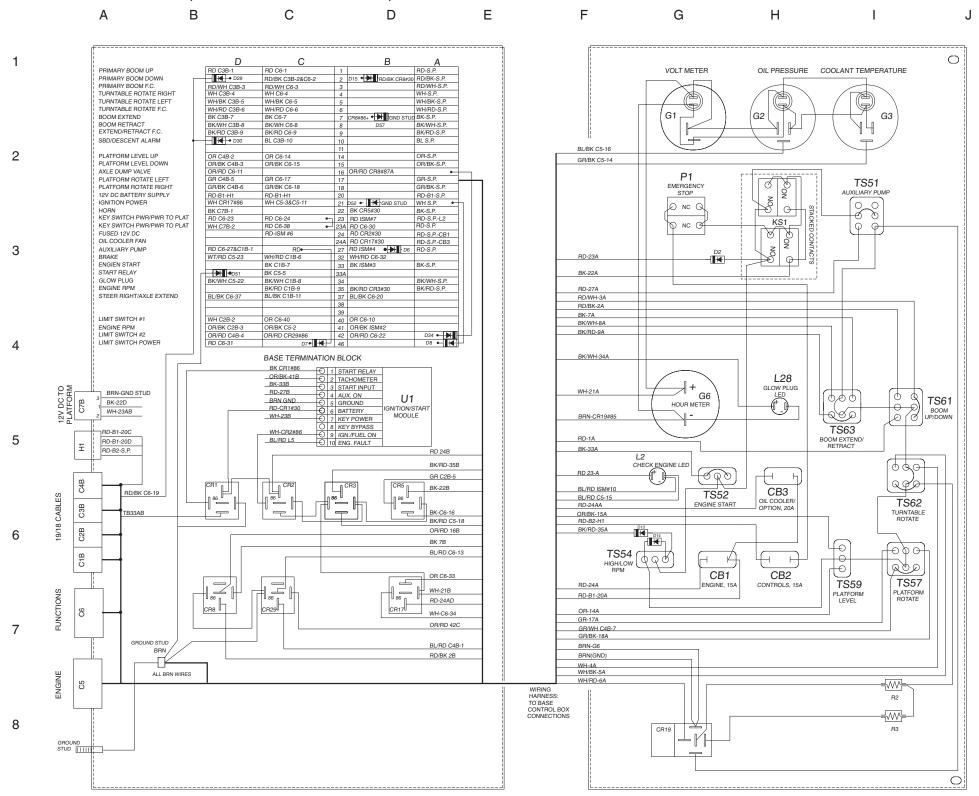

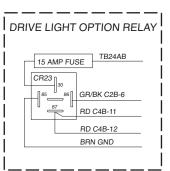

LABEL	DESCRIPTION
P1	EMERGENCY STOP BUTTON
KS1	KEY SWITCH
TS51	AUXILIARY POWER TOGGLE SWITCH
TS52	ENGINE START SWITCH
TS54	FUNCTION ENABLE/RPM SELECT TOGGLE SWITCH
TS57	PLATFORM ROTATE TOGGLE SWITCH
TS59	PLATFORM LEVEL TOGGLE SWITCH
TS61	PRIMARY BOOM UP/DOWN TOGGLE SWITCH
TS62	TURNTABLE ROTATE TOGGLE SWITCH
TS63	PRIMARY BOOM EXTEND/RETRACT TOGGLE SWITCH
CB1	CIRCUIT BREAKER, ENGINE, 15A
CB2	CIRCUIT BREAKER, CONTROLS, 15A
CB3	CIRCUIT BREAKER, OIL COOLER/OPTION, 20A
G1	VOLT METER GAUGE (OPTIONAL)
G2	OIL PRESSURE GAUGE (OPTIONAL)
G3	COOLANT TEMPERATURE GAUGE (OPTIONAL)
G6	HOUR METER
L2	CHECK ENGINE LED
L28	GLOW PLUG LED
CR1	IGNITION / START RELAY
CR2	IGNITION POWER RELAY
CR3	HIGH IDLE CUTOUT RELAY
CR5	HORN RELAY
CR8	BOOM FUNCTION CUTOUT
CR17	HYDRAULIC COOLER FAN RELAY
CR19	TURNTABLE ROTATE LIMITING RELAY
CR23	DRIVE LIGHT RELAY OPTION
CR29	AXLE EXTEND LED RELAY
R2	TURNTABLE ROTATE LIMITING RESISTOR 10 OHMS
R3	TURNTABLE ROTATE LIMITING RESISTOR 5 OHMS (APU)
U1	IGNITION/START MODULE

CIRCUIT DESCRIPTION	FROM	то
12 DRIVE ENABLE	BL/WH C6-12	BL/WH C3B-12
19 JIB VALVE	GR/WH C4B-7	GR/WH-S.P.
25 OIL PRESSEURE SENDER	BL/BK C5-16	BL/BK-S.P
26 WATER TEMP SENDER	GR/BK C5-14	GR/BK-S.P.
28 TILT ALARM	RD/BK C1B-2	RD/BK C6-28
29 2WD/4WD	RD/WH C5-24	RD/WH C1B-3
30 E.D.C. REV	WH C1B-4	WH C5-21
31 E.D.C. FWD	WH/BK C5-20	WH/BK C1B-5
36 STEER LEFT/AXLE RETRACT	BL CB1-10	BL C6-36
43 HORN	GR C2B-5	GR CR5#86
45 GEN. OPTION	GR/WH C2B-7	GR/WH C5-12
60 AXLE EXT/RET SELECT	OR/RD C6-39	OR/RD C2B-4
61 AXLE RETRACT	BL/BK C3B-11	BL/BK C6-21

Platform Control Box Wiring Diagram, S-80

Perkins 704-30 Models (before serial number 3577)


3


5


N M L K J I H G F E D C B A

COMPONENT INDEX

P2	EMERGENCY STOP BUTTON
P3	HORN BUTTON
TS1	AUXILIARY TOGGLE SWITCH
TS2	ENGINE START TOGGLE SWITCH
TS4	HIGH RPM TOGGLE SWITCH
TS7	PLATFORM ROTATE TOGGLE SWITCH
TS9	PLATFORM LEVEL TOGGLE SWITCH
TS14	LOW/HIGH DRIVE SPEED TOGGLE SWITCH
TS15	DRIVE ENABLE TOGGLE SWITCH
TS16	AXLE EXTEND/RETRACT TOGGLE SWITCH
TS47	GENERATOR TOGGLE SWITCH (OPTION)
TS48	WORK LIGHT TOGGLE SWITCH (OPTION)
L1	DRIVE ENABLE LED
L24	GLOW PLUG LED
L40	AXLE EXTENDED LED
JC3	DRIVE PROPORTIONAL JOYSTICK, STEER LEFT/RIGHT
JC1	BOOM PROPORTIONAL JOYSTICK: BOOM EXTEND/RETRACT
JC2	BOOM PROPORTIONAL JOYSTICK: BOOM UP/DOWN, TURNTABLE ROTATE
U13	ALC500
H1	TILT ALARM

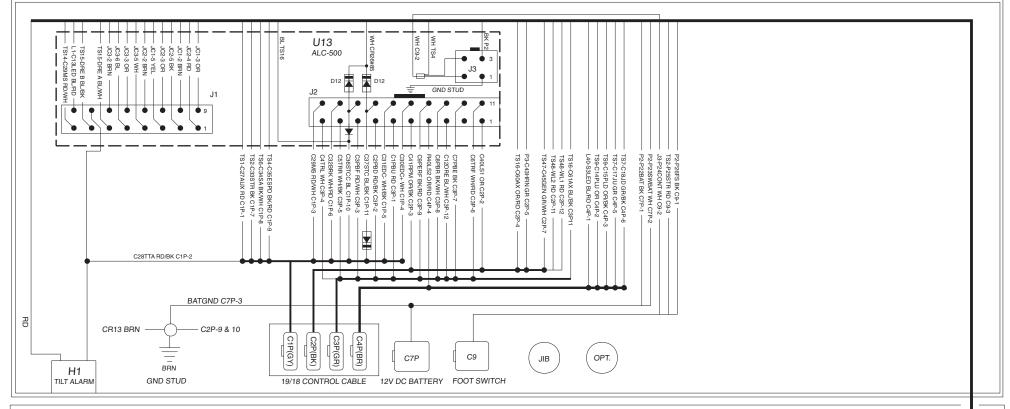

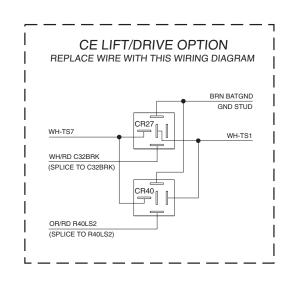

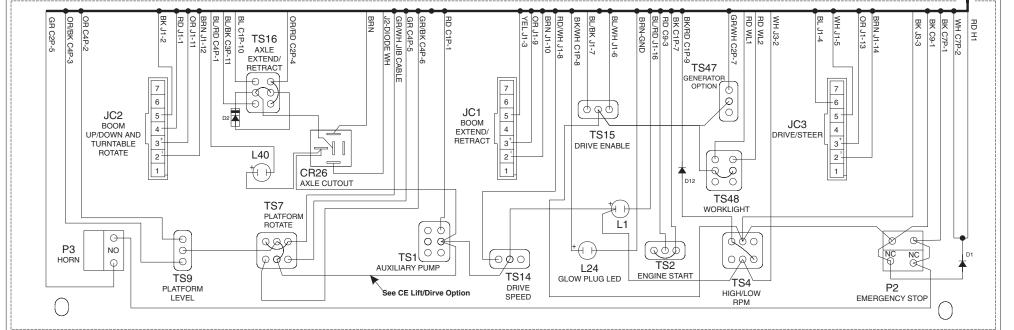

Genîe

Section 6 • Schematics

Platform Control Box Wiring Diagram, S-80

Perkins 704-30 Models (before serial number 3577)





Electrical Schematic, S-80

Perkins 704-30 Models (after serial number 3576)




Electrical Schematic, S-80

Perkins 704-30 Models (after serial number 3576)

Α Ε Ν C28TTA RD/BK 1 P26ESTP BK P26ESTP BK P25FS RD P24FS WH BK P25FS RD 2 4 C41RPM OR/BK 5 _____ TB24A 6 7 8 NOTES:
1. ALL LIMIT SWITCHES SHOWN WITH BOOM IN STOWED POSITION. 3> ROCKER STEER OPTION ONLY. 5> ADD D40 ONLY IF UNIT HAS L4 AND L48.

Electrical Schematic, S-80

Perkins 704-30 Models (after serial number 3576)

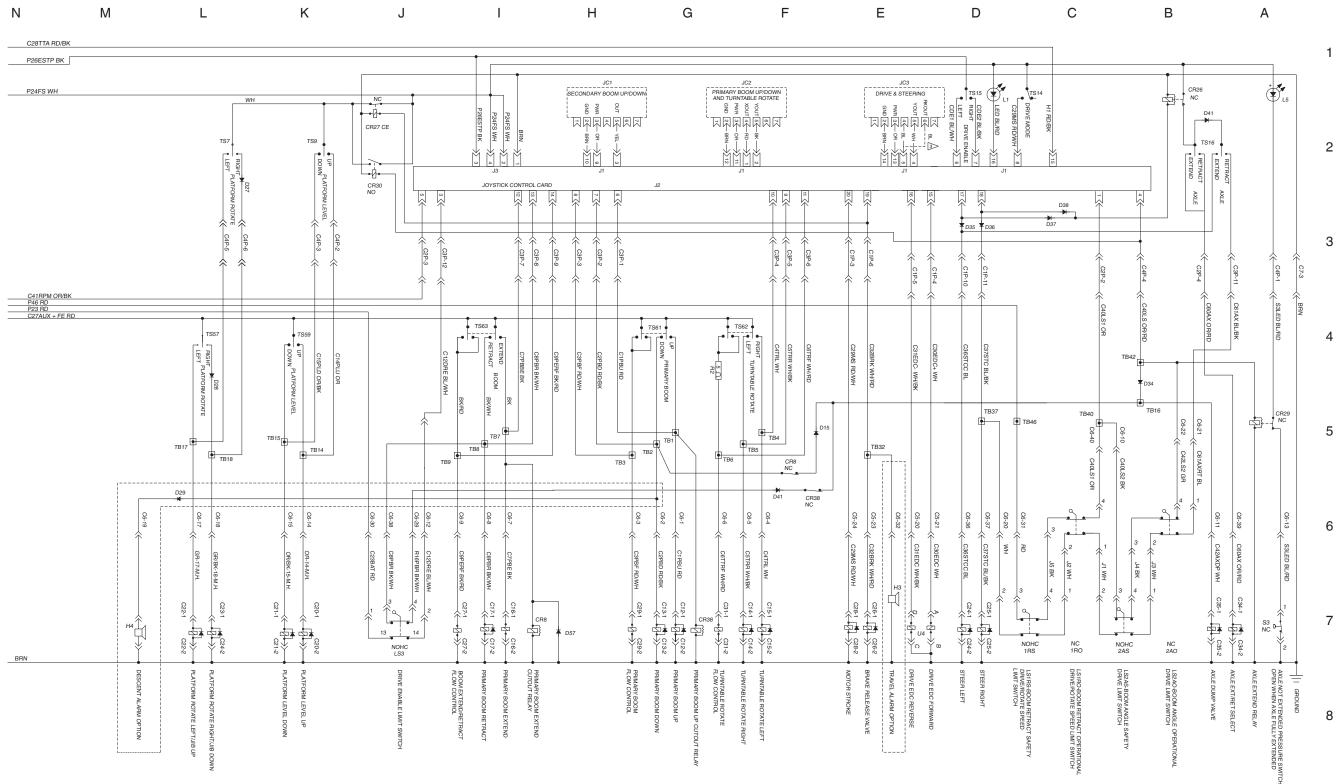

Section 6 • Schematics

Electrical Schematic, S-80

Perkins 704-30 Models (after serial number 3576)







Platform Control Box Wiring Diagram, S-80 Perkins 704-30 Models (after serial number 3576)



Ground Control Box Wiring Diagram, S-80

Perkins 704-30 Models (after serial number 3576)

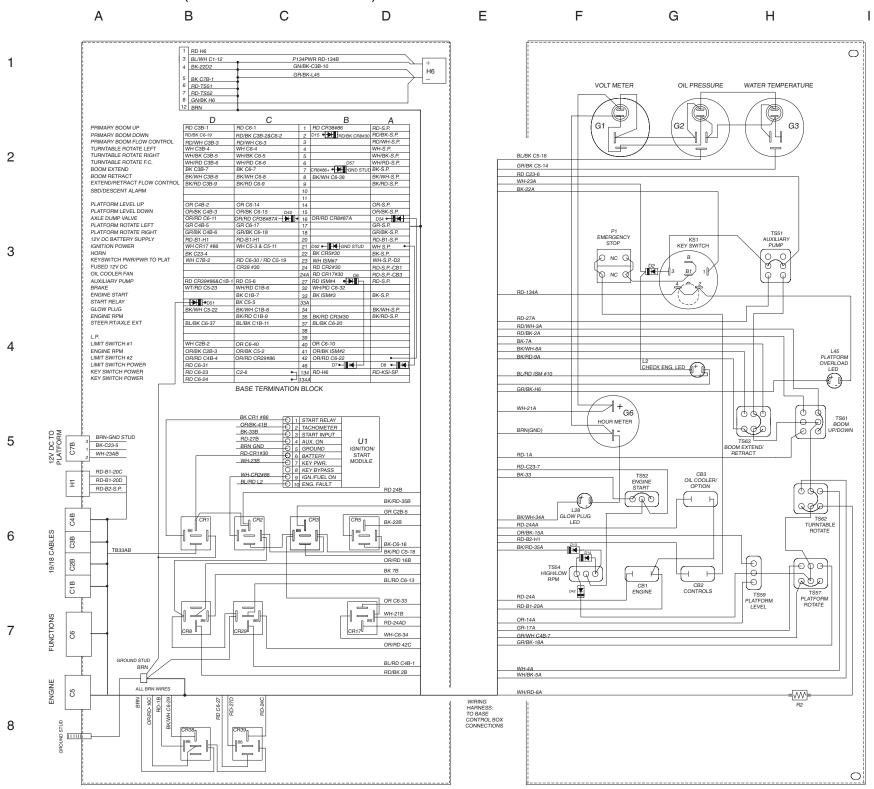

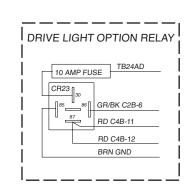

Ν


K

LABEL	DESCRIPTION
P1	RED EMERGENCY STOP BUTTON
KS1	KEY SWITCH
TS51	AUXILIARY TOGGLE SWITCH
TS52	ENGINE START TOGGLE SWITCH
TS54	FUNCTION ENABLE TOGGLE SWITCH
TS57	PLATFORM ROTATE TOGGLE SWITCH
TS59	PLATFORM LEVEL TOGGLE SWITCH
TS61	PRIMARY BOOM UP/DOWN TOGGLE SWITCH
TS62	TURNTABLE ROTATE TOGGLE SWITCH
TS63	PRIMARY BOOM EXTEND/RETRACT TOGGLE SWITCH
CB1	CIRCUIT BREAKER, ENGINE, 15A
CB2	CIRCUIT BREAKER, CONTROLS, 15A
CB3	CIRCUIT BREAKER, OIL COOLER/OPTION, 15A
G1	VOLT METER GAUGE (OPTIONAL)
G2	OIL PRESSURE GAUGE (OPTIONAL)
G3	OIL TEMPERATURE GAUGE (OPTIONAL)
G6	HOUR METER
L2	CHECK ENGINE LED
L28	GLOW PLUG LED
L45	PLATFORM OVERLOAD LED
CR1	IGNITION/START RELAY
CR2	IGNITION POWER RELAY
CR3	HIGH IDLE CUTOUT RELAY
CR5	HORN RELAY
CR17	HYDRAULIC COOLER FAN RELAY
CR23	DRIVE LIGHT RELAY OPTION
CR25	AXLE RET L/O RELAY
CR29	AXLE EXTEND LED RELAY
CR38	EXTEND FUNCTION CUTOUT RELAY
CR39	AUXILIARY PUMP RELAY
R2	5 OHM RESISTOR
U1	IGNITION/START MODULE

CIRCUIT DESCRIPTION	FROM	TO
12 DRIVE ENABLE	BL/WH C6-12	BL/WH C3B-12
19 JIB VALVE	GR/WH C4B-7	GR/WH-S.P.
25 OIL PRESSURE SENDER	BL/BK C5-16	BL/BK-S.P
26 WATER TEMP SENDER	GR/BK C5-14	GR/BK-S.P.
28 TILT ALARM	RD/BK C1-2	RD/BK C6-28
29 2WD/4WD	RD/WH C5-24	RD/WH C1B-3
30 E.D.C. REV	WH C1B-4	WH C5-21
31 E.D.C. FWD	WH/BK C5-20	WH/BK C1B-5
36 STEER LEFT/AXLE RETRACT	BL CB1-10	BL C6-36
43 HORN	GR C2B-5	GR CR5#86
45 GEN. OPTION	GR/WH C2B-7	GR/WH C5-12
60 AXLE EXT/RET SELECT	OR/RD C6-39	OR/RD C2B-4
61 AXLE RETRACT	BL/BK C3B-11	BL/BK C6-21

Platform Control Box Wiring Diagram, S-80

Perkins 704-30 Models (after serial number 3576)

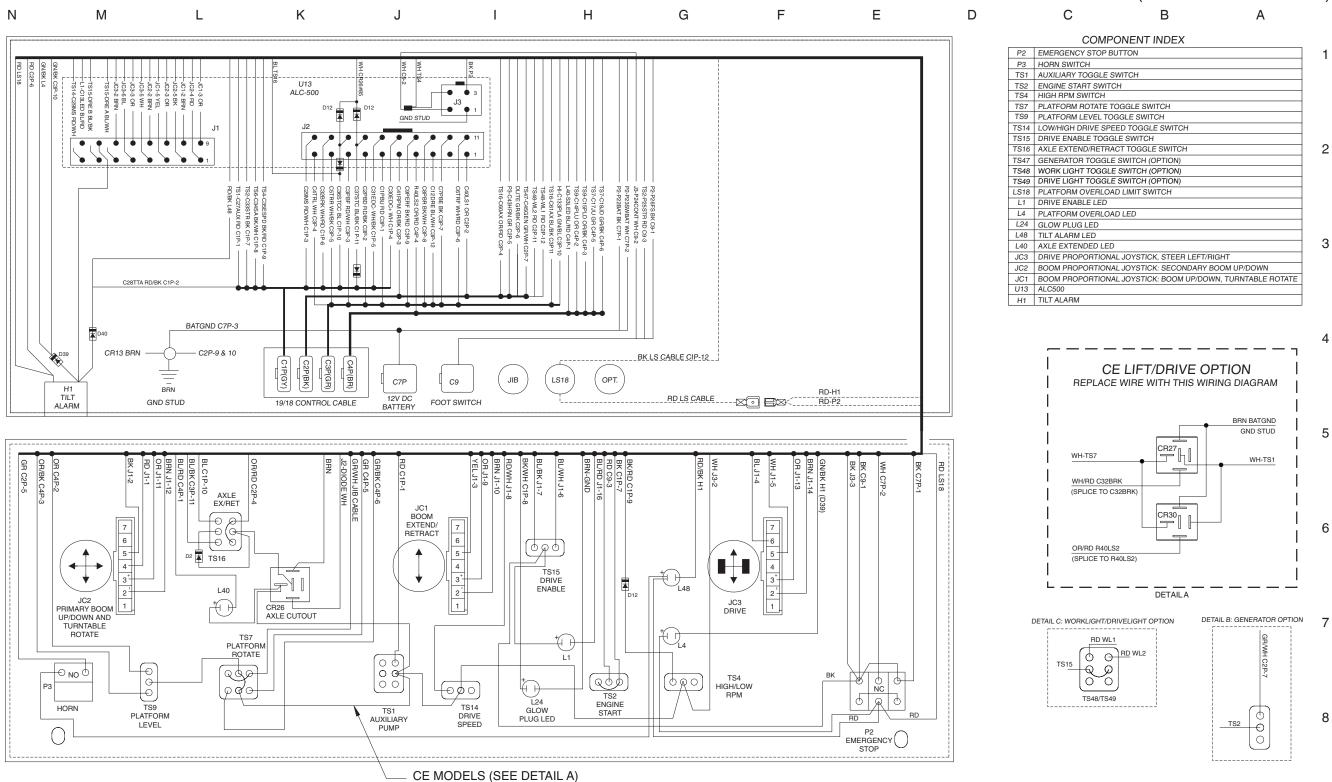

Part No. 77832 S-80 • S-85 51

Genîe

Section 6 • Schematics

Platform Control Box Wiring Diagram, S-80 Perkins 704-30 Models (after serial number 3576)







Ground Control Box Wiring Diagram, S-85Deutz F4L 913 Models (before serial number 3577)



Ground Control Box Wiring Diagram, S-85

Deutz F4L 913 Models (before serial number 3577)

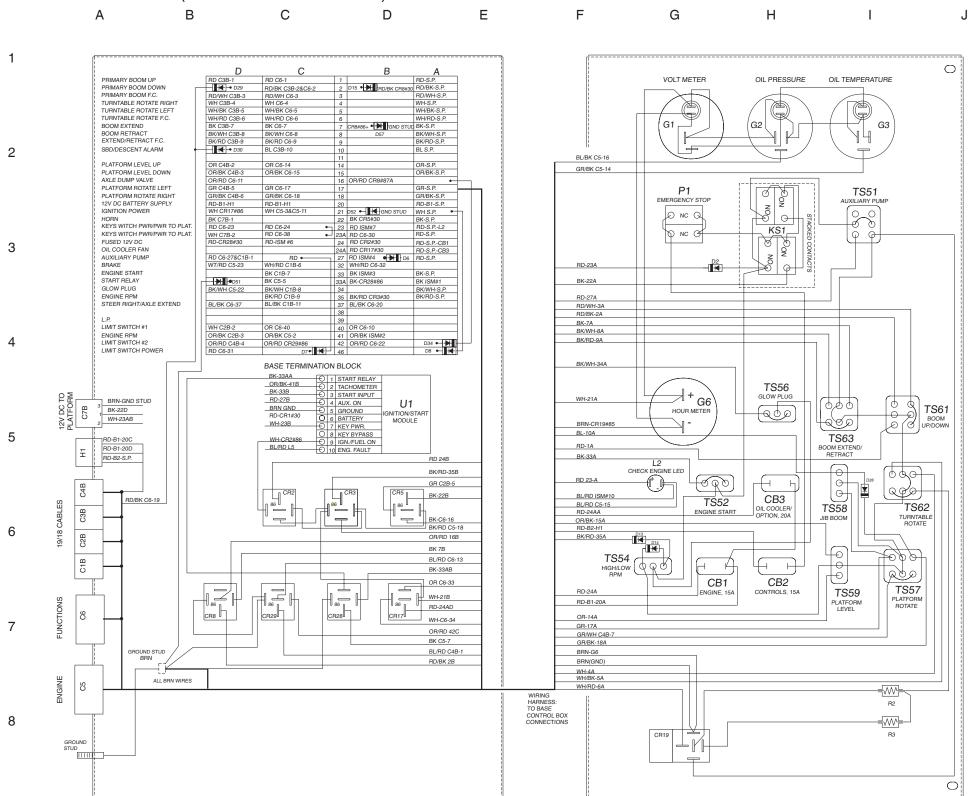

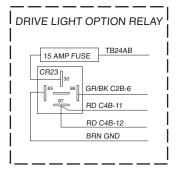

Ν

K

LABEL	DESCRIPTION
P1	RED EMERGENCY STOP BUTTON
KS1	KEY SWITCH
TS51	AUXILIARY TOGGLE SWITCH
TS52	ENGINE START TOGGLE SWITCH
TS56	GLOW PLUG TOGGLE SWITCH
TS54	FUNCTION ENABLE TOGGLE SWITCH
TS57	PLATFORM ROTATE TOGGLE SWITCH
TS58	JIB BOOM UP/DOWN TOGGLE SWITCH
TS59	PLATFORM LEVEL TOGGLE SWITCH
TS61	PRIMARY BOOM UP/DOWN TOGGLE SWITCH
TS62	TURNTABLE ROTATE TOGGLE SWITCH
TS63	PRIMARY BOOM EXTEND/RETRACT TOGGLE SWITCH
CB1	CIRCUIT BREAKER, ENGINE, 15A
CB2	CIRCUIT BREAKER, CONTROLS, 15A
CB3	CIRCUIT BREAKER, OIL COOLER/OPTION, 15A
G1	VOLT METER GAUGE (OPTIONAL)
G2	OIL PRESSURE GAUGE (OPTIONAL)
G3	OIL TEMPERATURE GAUGE (OPTIONAL)
G6	HOUR METER
L2	CHECK ENGINE LED
CR2	IGNITION POWER RELAY
CR3	HIGH IDLE CUTOUT RELAY
CR5	HORN RELAY
CR17	HYDRAULIC COOLER FAN RELAY
CR23	DRIVE LIGHT RELAY OPTION
CR28	TROMBETTA PULL IN RELAY
CR29	AXLE EXTEND LED RELAY
R2	10 OHM RESISTOR
R3	5 OHM RESISTOR
U1	IGNITION/START MODULE

CIRCUIT DESCRIPTION	FROM	то
12 DRIVE ENABLE	BL/WH C6-12	BL/WH C3B-12
19 JIB VALVE	GR/WH C4B-7	GR/WH-S.P.
25 OIL PRESSEURE SENDER	BL/BK C5-16	BL/BK-S.P
26 WATER TEMP SENDER	GR/BK C5-14	GR/BK-S.P.
28 TILT ALARM	RD/BK C1B-2	RD/BK C6-28
29 2WD/4WD	RD/WH C5-24	RD/WH C1B-3
30 E.D.C. REV	WH C1B-4	WH C5-21
31 E.D.C. FWD	WH/BK C5-20	WH/BK C1B-5
36 STEER LEFT/AXLE RETRACT	BL CB1-10	BL C6-36
43 HORN	GR C2B-5	GR CR5#86
45 GEN. OPTION	GR/WH C2B-7	GR/WH C5-12
60 AXLE EXT/RET SELECT	OR/RD C6-39	OR/RD C2B-4
61 AXLE RETRACT	BL/BK C3B-11	BL/BK C6-21

Genîe

Platform Control Box Wiring Diagram, S-85

Deutz F4L 913 Models (before serial number 3577)

3


5


6


N M L K J I H G F E D C B A

COMPONENT INDEX

	COMI CIVENT INDEX
P2	EMERGENCY STOP BUTTON
РЗ	HORN SWITCH
TS1	AUXILIARY TOGGLE SWITCH
TS2	ENGINE START SWITCH
TS6	GLOW PLUG OPTION
TS4	HIGH RPM SWITCH
TS7	PLATFORM ROTATE TOGGLE SWITCH
TS8	JIB BOOM UP/DOWN TOGGLE SWITCH
TS9	PLATFORM LEVEL TOGGLE SWITCH
TS14	LOW/HIGH DRIVE SPEED TOGGLE SWITCH
TS15	DRIVE ENABLE TOGGLE SWITCH
TS16	AXLE EXTEND/RETRACT TOGGLE SWITCH
TS47	GENERATOR TOGGLE SWITCH (OPTION)
TS48	WORK LIGHT TOGGLE SWITCH (OPTION)
L1	DRIVE ENABLE LED
L40	AXLE EXTENDED LED
JC3	DRIVE PROPORTIONAL JOYSTICK, STEER LEFT/RIGHT
JC1	BOOM PROPORTIONAL JOYSTICK: BOOM EXTEND/RETRACT
JC2	BOOM PROPORTIONAL JOYSTICK: BOOM UP/DOWN, TURNTABLE ROTATE
CR13	JIB BOOM CUTOUT RELAY (S-85 MODELS)
U13	ALC500
H1	TILT ALARM

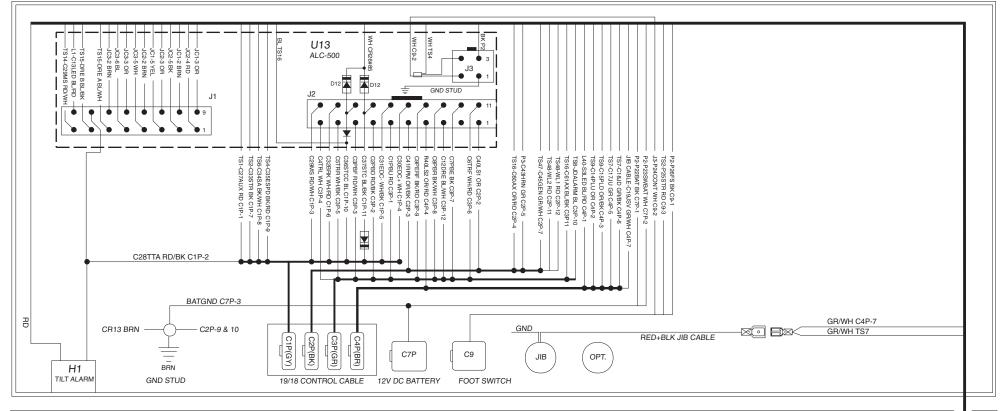

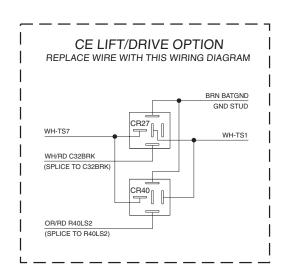

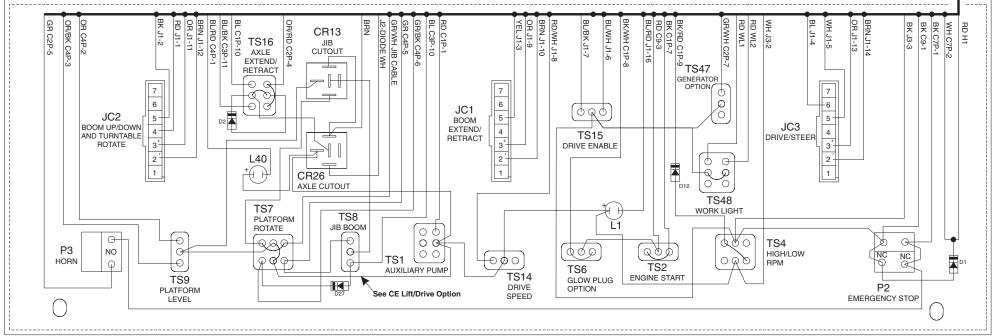

Genîe

Section 6 • Schematics

Platform Control Box Wiring Diagram, S-85 Deutz F4L 913 Models (before serial number 3577)






Electrical Schematic, S-85

Deutz F4L 913 Models (after serial number 3576)



Electrical Schematic, S-85

Deutz F4L 913 Models (after serial number 3576)

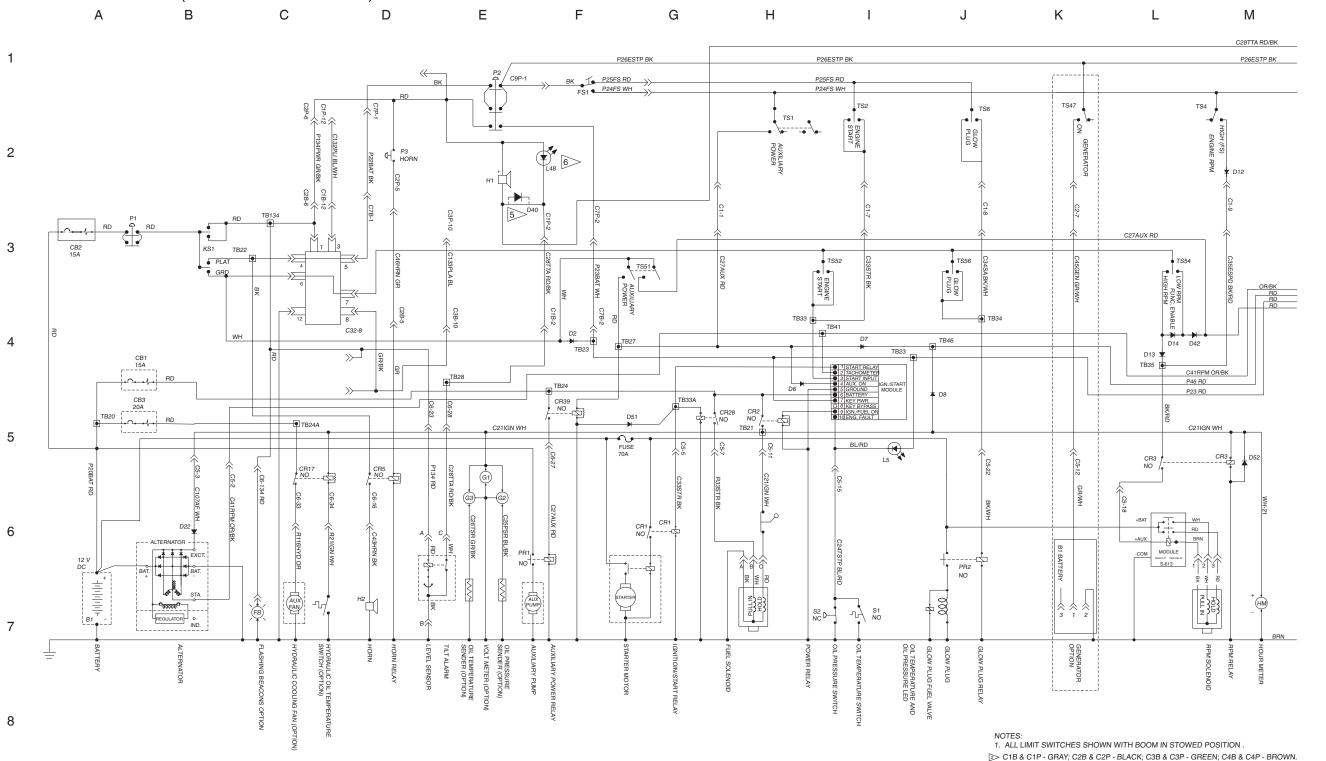


Ν

PROCKER STEER OPTION ONLY.
 ADD D40 ONLY IF UNIT HAS L4 AND L48.

Genîe

Electrical Schematic, S-85

Deutz F4L 913 Models (after serial number 3576)

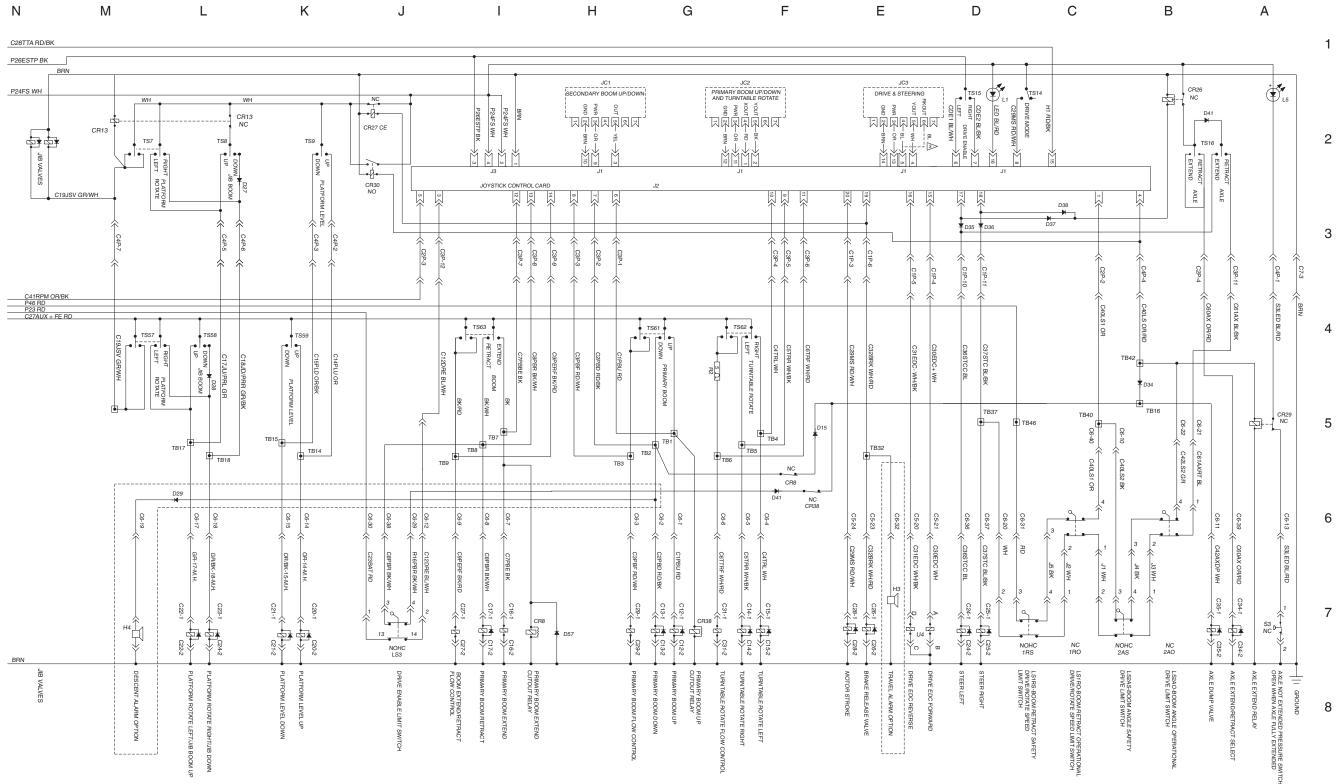

Section 6 • Schematics

Electrical Schematic, S-85

Deutz F4L 913 Models (after serial number 3576)






Electrical Schematic, S-85, CE Models Deutz F4L 913 Models (after serial number 3576)




Electrical Schematic, S-85, CE Models

Deutz F4L 913 Models (after serial number 3576)

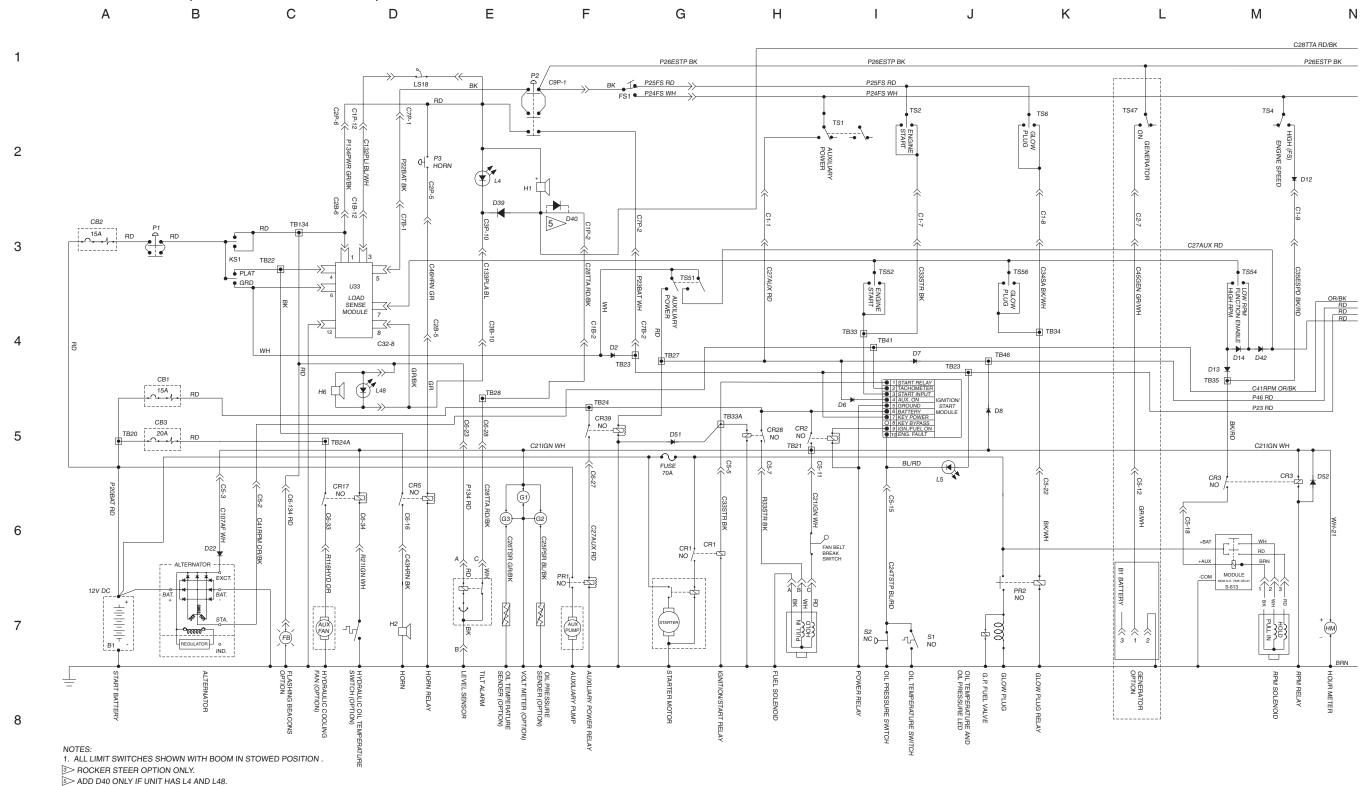

Electrical Schematic, S-85, CE Models

Deutz F4L 913 Models (after serial number 3576)
G F E D C B A

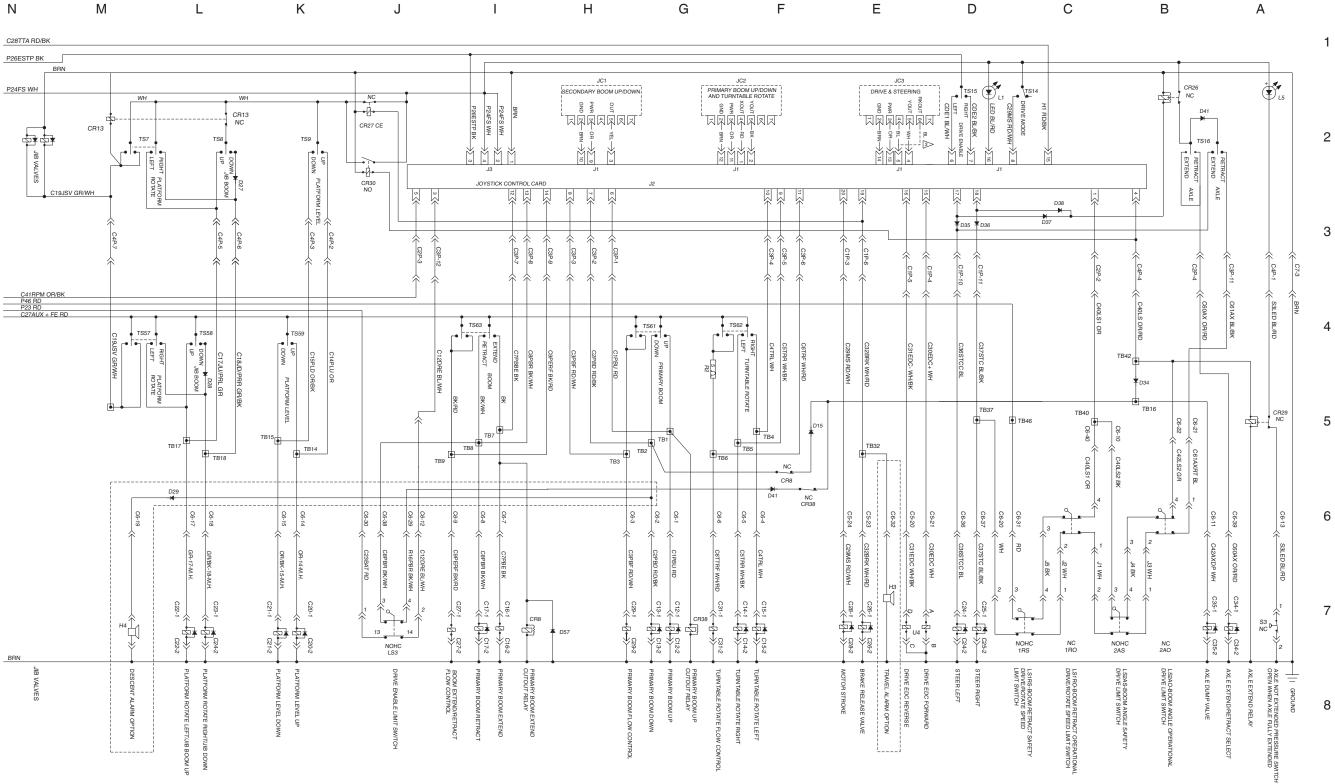

Section 6 • Schematics

Electrical Schematic, S-85, CE Models Deutz F4L 913 Models (after serial number 3576)







Ground Control Box Wiring Diagram, S-85 Deutz F4L 913 Models (after serial number 3576)



Ground Control Box Wiring Diagram, S-85

Deutz F4L 913 Models (after serial number 3576)

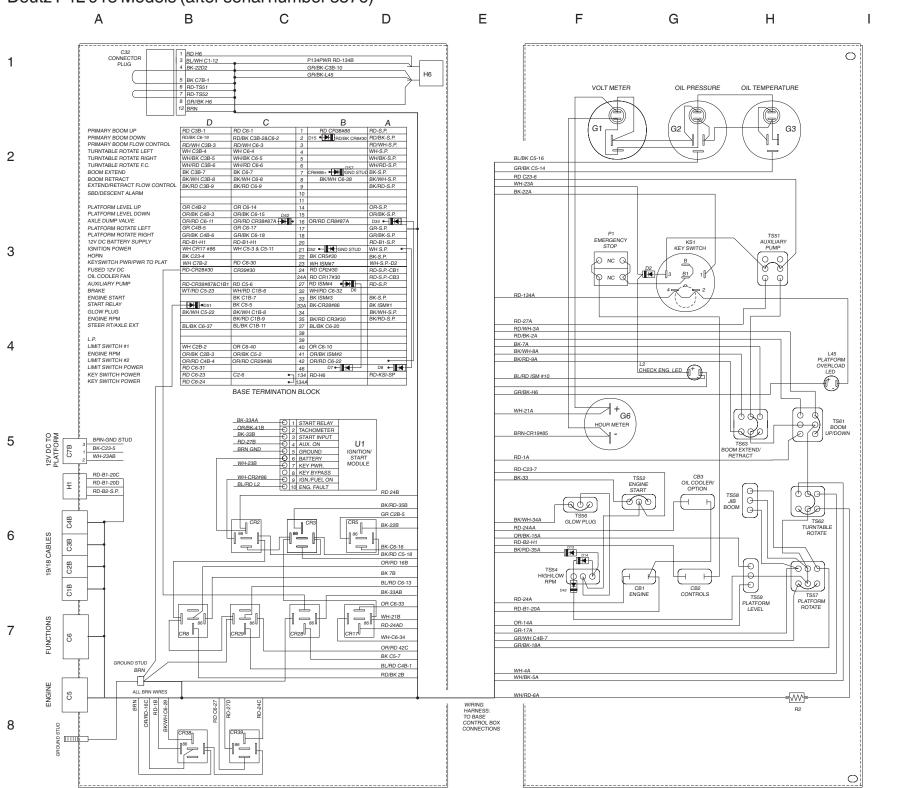

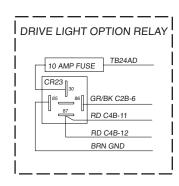

Ν


K

LABEL	DESCRIPTION	
P1	RED EMERGENCY STOP BUTTON	
KS1	S1 KEY SWITCH	
TS51	AUXILIARY TOGGLE SWITCH	
TS52	ENGINE START TOGGLE SWITCH	
TS56	GLOW PLUG TOGGLE SWITCH	
TS54	FUNCTION ENABLE TOGGLE SWITCH	
TS57	PLATFORM ROTATE TOGGLE SWITCH	
TS58	JIB BOOM UP/DOWN TOGGLE SWITCH	
TS59	PLATFORM LEVEL TOGGLE SWITCH	
TS61	PRIMARY BOOM UP/DOWN TOGGLE SWITCH	
TS62	TURNTABLE ROTATE TOGGLE SWITCH	
TS63	PRIMARY BOOM EXTEND/RETRACT TOGGLE SWITCH	
CB1	CIRCUIT BREAKER, ENGINE, 15A	
CB2	CIRCUIT BREAKER, CONTROLS, 15A	
CB3	CIRCUIT BREAKER, OIL COOLER/OPTION, 15A	
G1		
G2 OIL PRESSURE GAUGE (OPTIONAL)		
G3		
G6		
L2	L2 CHECK ENGINE LED	
L45	PLATFORM OVERLOAD LED	
CR2	IGNITION POWER RELAY	
CR3	HIGH IDLE CUTOUT RELAY	
CR5	HORN RELAY	
CR8	BOOM FUNCTION CUTOUT RELAY	
CR17	HYDRAULIC COOLER FAN RELAY	
CR23	DRIVE LIGHT RELAY OPTION	
CR25	AXLE RET L/O RELAY	
CR28	TROMBETTA PULL IN RELAY	
CR29	AXLE EXTEND LED RELAY	
CR38	EXTEND FUNCTION CUTOUT RELAY	
CR39	AUXILIARY PUMP RELAY	
R2	5 OHM RESISTOR	
U1	IGNITION/START MODULE	

FROM	то
BL/WH C6-12	BL/WH C3B-12
GR/WH C4B-7	GR/WH-S.P.
BL/BK C5-16	BL/BK-S.P
GR/BK C5-14	GR/BK-S.P.
RD/BK C1-2	RD/BK C6-28
RD/WH C5-24	RD/WH C1B-3
WH C1B-4	WH C5-21
WH/BK C5-20	WH/BK C1B-5
BL CB1-10	BL C6-36
GR C2B-5	GR CR5#86
GR/WH C2B-7	GR/WH C5-12
OR/RD C6-39	OR/RD C2B-4
BL/BK C3B-11	BL/BK C6-21
	BLWH C6-12 GRWH C4B-7 BL/BK C5-16 GR/BK C5-16 GR/BK C1-2 RD/WH C5-24 WH C1B-4 WH/BK C5-20 BL CB1-10 GR C2B-5 GR/WH C2B-7 OP/RD C6-39

Platform Control Box Wiring Diagram, S-85

Deutz F4L 913 Models (after serial number 3576)

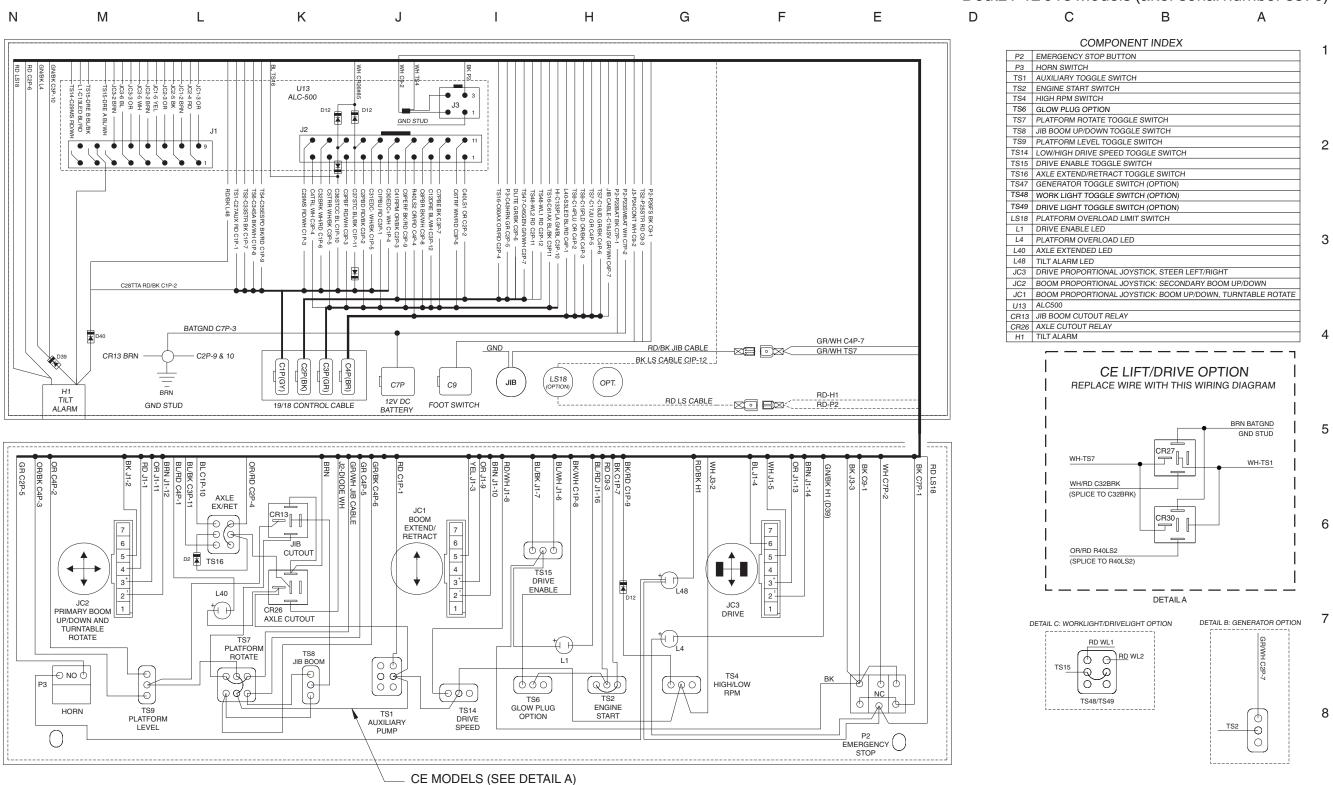

Part No. 77832 S-80 • S-85 67

Genîe

Section 6 • Schematics

Platform Control Box Wiring Diagram, S-85 Deutz F4L 913 Models (after serial number 3576)





Platform Control Box Wiring Diagram, S-85, CE Models
Deutz F4L 913 Models (after serial number 3576)



Ground Control Box Wiring Diagram, S-85, CE Models


Deutz F4L 913 Models (after serial number 3576)

Genîe

S-80 • S-85

Part No. 77832

70

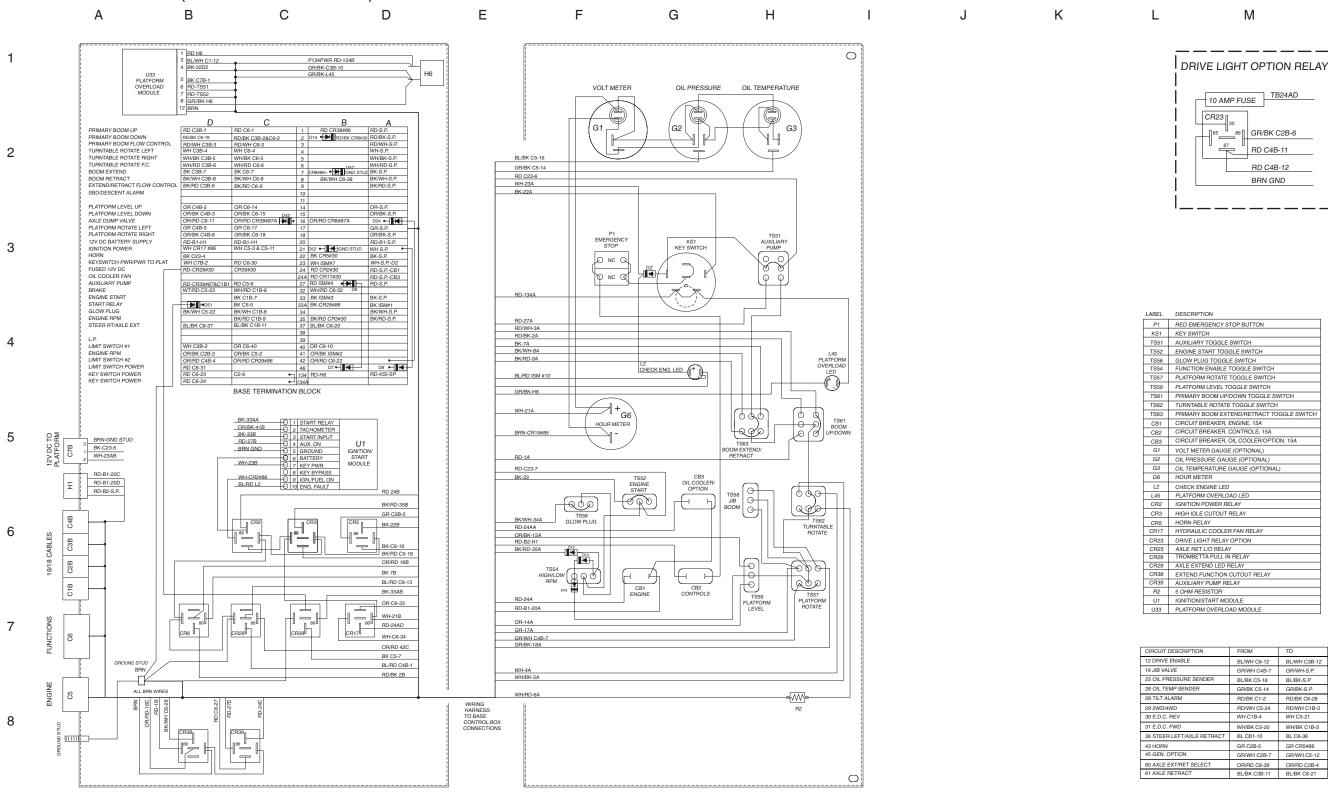

Ν

RD C4B-11 RD C4B-12

BRN GND

BL/BK-S.P


RD/BK C6-28

WH C5-21

GR CR5#86

Platform Control Box Wiring Diagram, S-85, CE Models

Deutz F4L 913 Models (after serial number 3576)

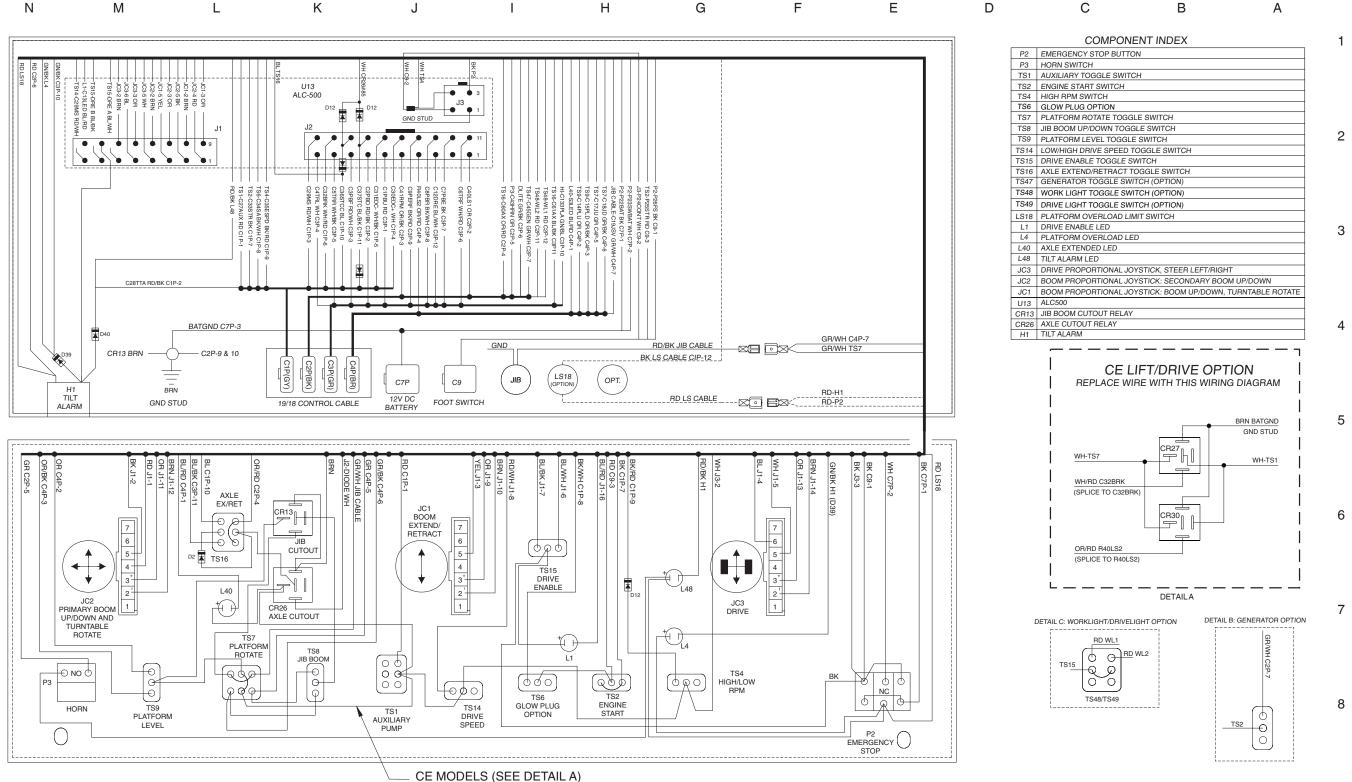

Part No. 77832 S-80 • S-85 71

Genîe

Platform Control Box Wiring Diagram, S-85, CE Models
Deutz F4L 913 Models (after serial number 3576)





Section 6 • Schematics February 2012


Ground Control Box Wiring Diagram, S-85


GM 3.0L Models (before serial number 3577)



Ground Control Box Wiring Diagram, S-85

GM 3.0L Models (before serial number 3577)

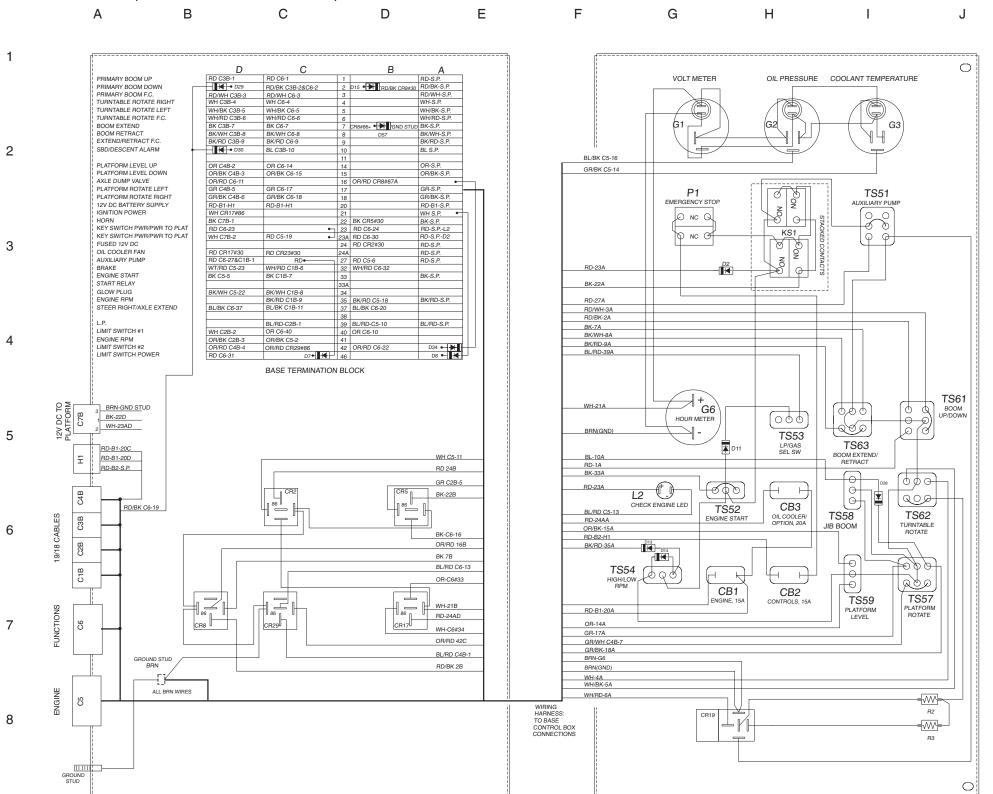

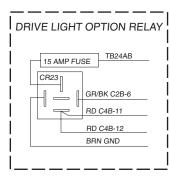

Ν

LABEL	DESCRIPTION	
P1	EMERGENCY STOP BUTTON	
KS1	KEY SWITCH	
TS51	AUXILIARY POWER TOGGLE SWITCH	
TS52	ENGINE START TOGGLE SWITCH	
TS53	LP/GAS SELECT TOGGLE SWITCH	
TS54	FUNCTION ENABLE/RPM SELECT TOGGLE SWITCH	
TS57	PLATFORM ROTATE TOGGLE SWITCH	
TS58	JIB BOOM UP/DOWN TOGGLE SWITCH	
TS59	PLATFORM LEVEL TOGGLE SWITCH	
TS61	PRIMARY BOOM UP/DOWN TOGGLE SWITCH	
TS62	TURNTABLE ROTATE TOGGLE SWITCH	
TS63	PRIMARY BOOM EXTEND/RETRACT TOGGLE SWITCH	
CB1	CIRCUIT BREAKER, ENGINE, 15A	
CB2	CIRCUIT BREAKER, CONTROLS, 15A	
CB3	CIRCUIT BREAKER, OIL COOLER/OPTION, 20A	
G1	VOLT METER GAUGE (OPTIONAL)	
G2	OIL PRESSURE GAUGE (OPTIONAL)	
G3	WATER TEMP. GAUGE (OPTIONAL)	
G6	HOUR METER	
L2	CHECK ENGINE LED	
R2	TURNTABLE ROTATE LIMITING RESISTOR, 10 OHMS	
R3	TURNTABLE ROTATE LIMITING RESISTOR, 5 OHMS (APU)	
CR2	IGNITION POWER RELAY	
CR5	HORN RELAY	
CR8	BOOM FUNCTION CUTOUT	
CR17	HYDRAULIC COOLER FAN RELAY	
CR19	TURNTABLE ROTATE LIMITING RELAY	
CR23	DRIVE LIGHT RELAY (OPTIONAL)	
CR29	AXLE EXTEND LED RELAY	
U1	IGNITION/START MODULE	

CIRCUIT DESCRIPTION	FROM	TO
12 DRIVE ENABLE	BL/WH C6-12	BL/WH C3B-12
19 JIB VALVE	GR/WH C4B-7	GR/WH-S.P.
25 OIL PRESSURE SENDER	BL/BK C5-16	BL/BK-S.P
26 WATER TEMP SENDER	GR/BK C5-14	GR/BK-S.P.
28 TILT ALARM	RD/BK C1B-2	RD/BK C6-28
29 2WD/4WD	RD/WH C5-24	RD/WH C1B-3
30 E.D.C. REVERSE	WH C1B-4	WH C5-21
31 E.D.C. FORWARD	WH/BK C5-20	WH/BK C1B-5
36 STEER LEFT/AXLE RETRACT	BL CB1-10	BL C6-36
43 HORN	GR C2B-5	GR CR5#86
45 GENERATOR OPTION	GR/WH C2B-7	GR/WH C5-12
60 AXLE EXTEND/RETRACT SELECT	OR/RD C6-39	OR/RD C2B-4
61 AXLE RETRACT	BL/BK C3B-11	BL/BK C6-21

74

Platform Control Box Wiring Diagram, S-85

С

D

GM 3.0L Models (before serial number 3577)

В

Α

3

5


6

75


COMPONENT INDEX


Ν

	001111 0112111 1112211
P2	EMERGENCY STOP BUTTON
P3	HORN SWITCH
TS1	AUXILIARY TOGGLE SWITCH
TS2	ENGINE START TOGGLE SWITCH
TS3	FUEL SELECT TOGGLE SWITCH
TS4	HIGH RPM TOGGLE SWITCH
TS7	PLATFORM ROTATE TOGGLE SWITCH
TS8	JIB BOOM UP/DOWN TOGGLE SWITCH
TS9	PLATFORM LEVEL TOGGLE SWITCH
TS14	LOW/HIGH DRIVE SPEED TOGGLE SWITCH
TS15	DRIVE ENABLE TOGGLE SWITCH
TS16	AXLE EXTEND/RETRACT TOGGLE SWITCH
TS47	GENERATOR TOGGLE SWITCH (OPTION)
TS48	WORK LIGHT TOGGLE SWITCH (OPTION)
L1	DRIVE ENABLE LED
L40	AXLE EXTENDED LED
JC3	DRIVE PROPORTIONAL JOYSTICK, STEER LEFT/RIGHT
JC1	BOOM PROPORTIONAL JOYSTICK: BOOM EXTEND/RETRACT
JC2	BOOM PROPORTIONAL JOYSTICK: BOOM UP/DOWN, TURNTABLE ROTATE
CR13	JIB CUTOUT RELAY
U13	PLATFORM CONTROLS CIRCUIT BOARD (ALC500)
H1	TILT ALARM

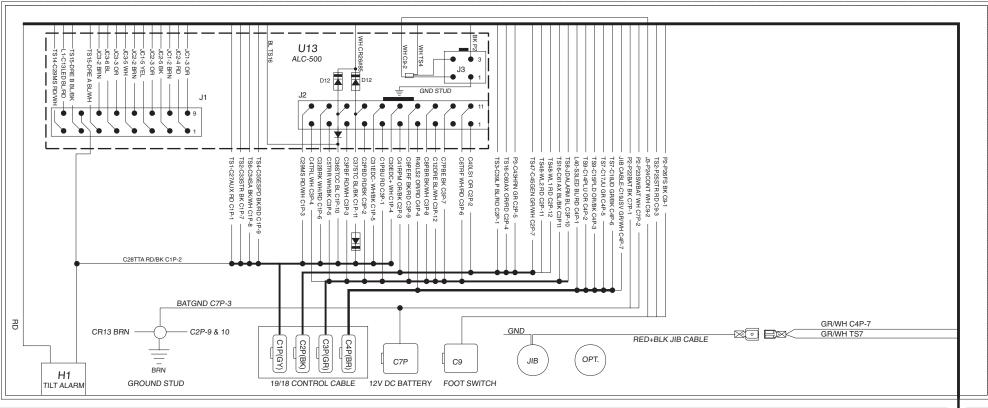

Н

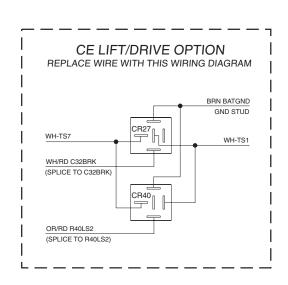

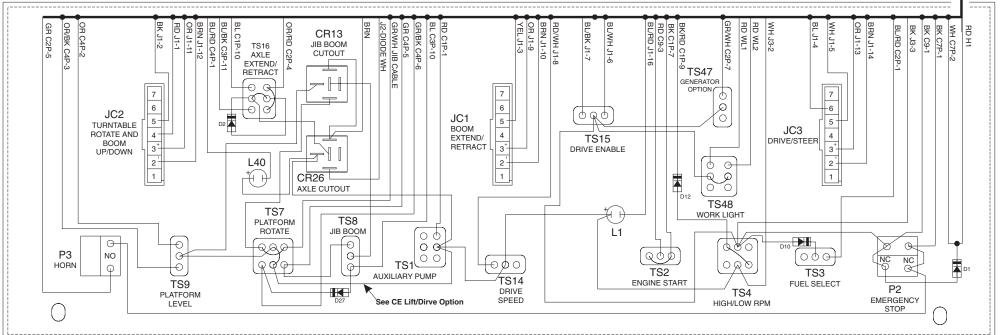

Section 6 • Schematics

Platform Control Box Wiring Diagram, S-85

GM 3.0L Models (before serial number 3577)





Section 6 • Schematics February 2012


Electrical Schematic, S-85

GM 3.0L Models (after serial number 3576)



Electrical Schematic, S-85

GM 3.0L Models (after serial number 3576)

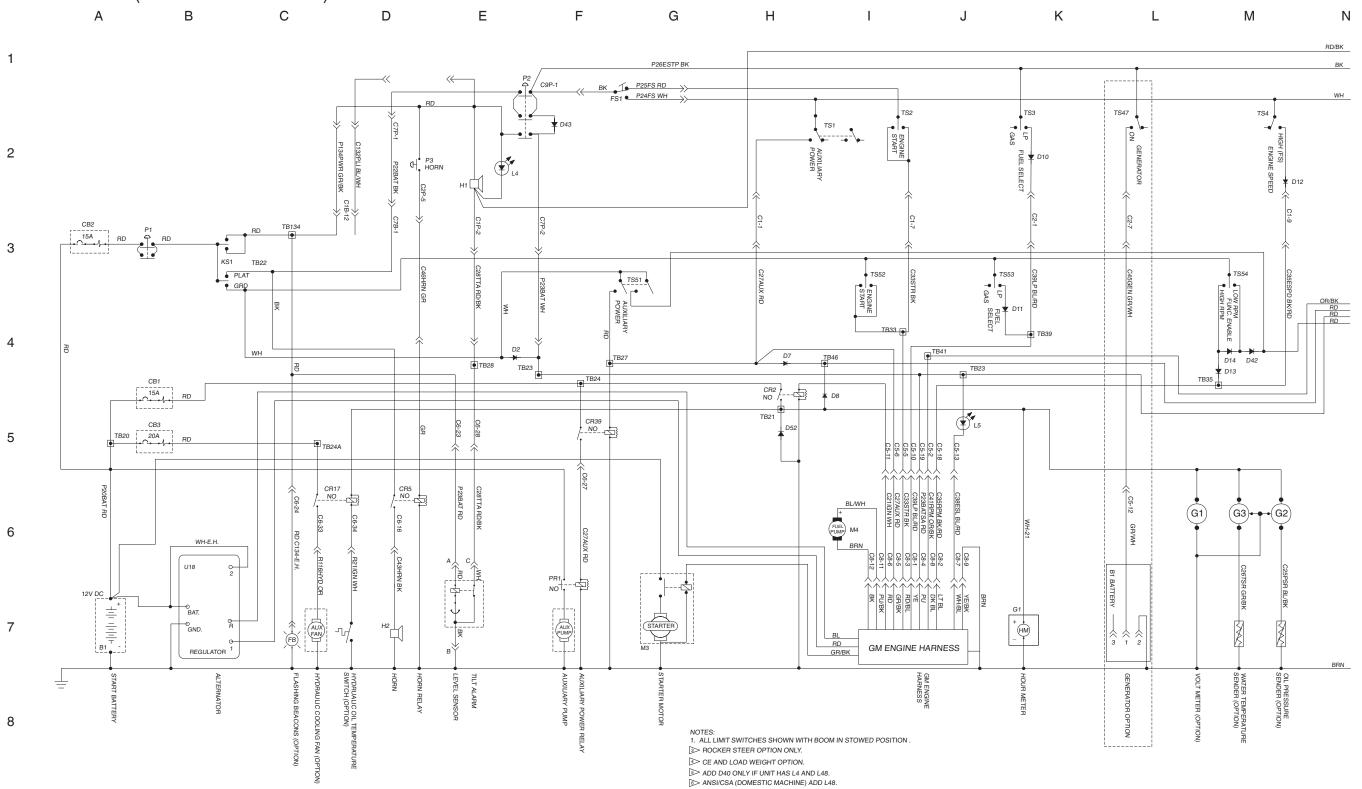


Part No. 77832

Electrical Schematic, S-85

GM 3.0L Models (after serial number 3576)

S-80 • S-85

79

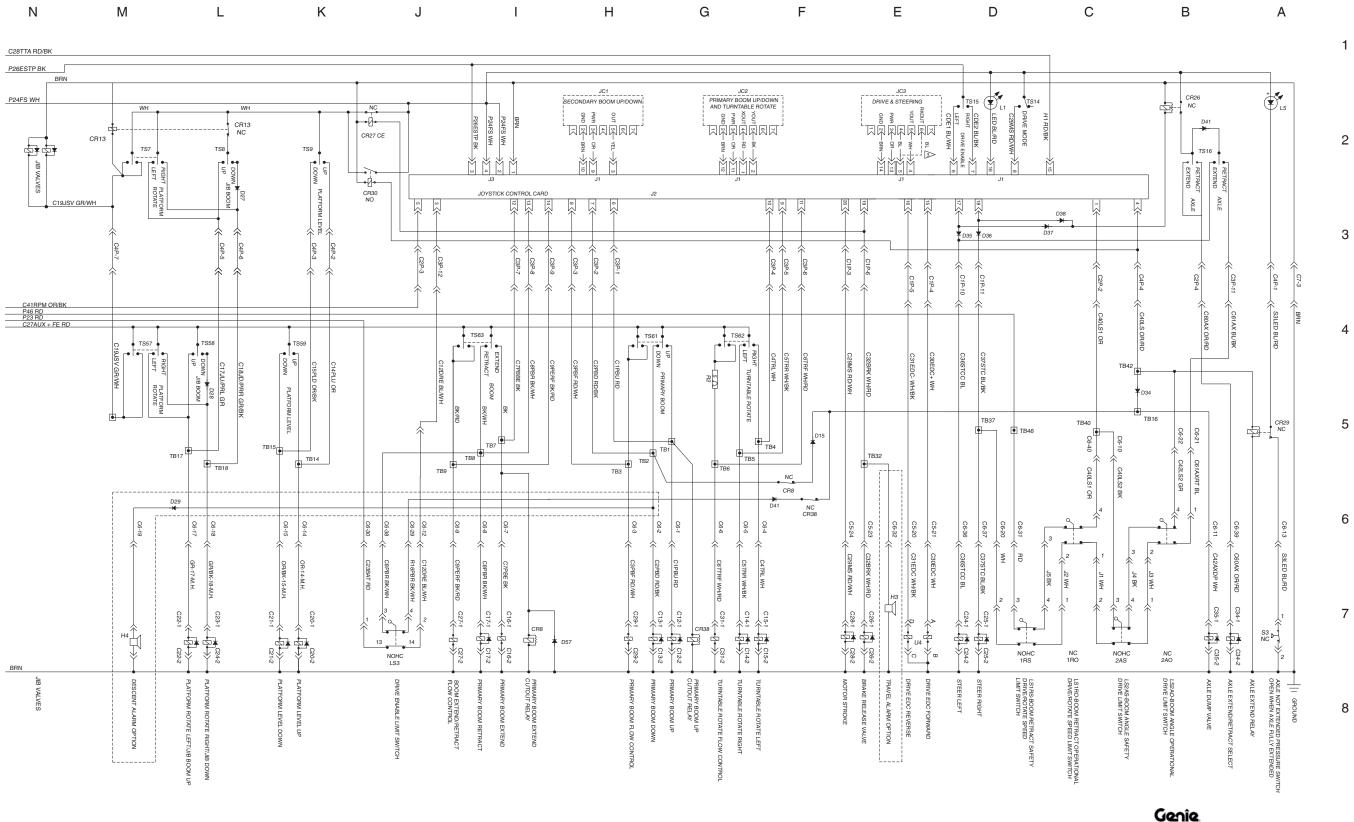

Section 6 • Schematics

Electrical Schematic, S-85

GM 3.0L Models (after serial number 3576)





Section 6 • Schematics February 2012


Ground Control Box Wiring Diagram, S-85


GM 3.0L Models (after serial number 3576)



Ground Control Box Wiring Diagram, S-85

GM 3.0L Models (after serial number 3576)

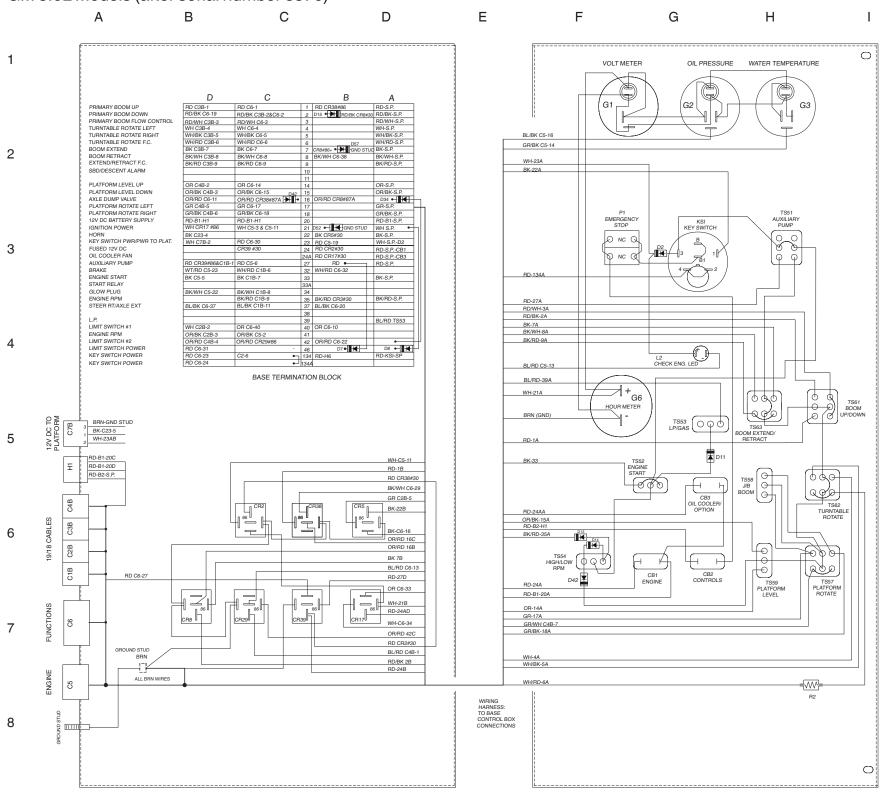

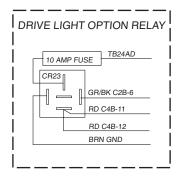


Ν

LABEL	DESCRIPTION
P1	EMERGENCY STOP BUTTON
KS1	KEY SWITCH
TS51	AUXILIARY POWER TOGGLE SWITCH
TS52	ENGINE START TOGGLE SWITCH
TS53	LP/GAS SELECT TOGGLE SWITCH
TS54	FUNCTION ENABLE/RPM SELECT TOGGLE SWITCH
TS57	PLATFORM ROTATE TOGGLE SWITCH
TS58	JIB BOOM UP/DOWN TOGGLE SWITCH
TS59	PLATFORM LEVEL TOGGLE SWITCH
TS61	PRIMARY BOOM UP/DOWN TOGGLE SWITCH
TS62	TURNTABLE ROTATE TOGGLE SWITCH
TS63	PRIMARY BOOM EXTEND/RETRACT TOGGLE SWITCH
CB1	CIRCUIT BREAKER, ENGINE, 15A
CB2	CIRCUIT BREAKER, CONTROLS, 15A
CB3	CIRCUIT BREAKER, OIL COOLER/OPTION, 20A
G1	VOLT METER GAUGE (OPTIONAL)
G2	OIL PRESSURE GAUGE (OPTIONAL)
G3	WATER TEMP. GAUGE (OPTIONAL)
G6	HOUR METER
L2	CHECK ENGINE LED
R2	TURNTABLE ROTATE LIMITING RESISTOR, 5 OHMS
CR2	IGNITION POWER RELAY
CR3	HIGH IDLE CUTOUT RELAY
CR5	HORN RELAY
CR8	BOOM FUNCTION CUTOUT
CR17	HYDRAULIC COOLER FAN RELAY
CR23	DRIVE LIGHT RELAY (OPTIONAL)
CR25	AXLE RET L/O RELAY
CR29	AXLE EXTEND LED RELAY
CR38	EXTEND FUNCTION CUTOUT RELAY
CR39	AUXILIARY PUMP RELAY
U1	IGNITION/START MODULE

CIRCUIT DESCRIPTION	FROM	TO
12 DRIVE ENABLE	BL/WH C6-12	BL/WH C3B-12
19 JIB VALVE	GR/WH C4B-7	GR/WH-S.P.
25 OIL PRESSURE SENDER	BL/BK C5-16	BL/BK-S.P
26 WATER TEMP SENDER	GR/BK C5-14	GR/BK-S.P.
28 TILT ALARM	RD/BK C1-2	RD/BK C6-28
29 2WD/4WD	RD/WH C5-24	RD/WH C1B-3
30 E.D.C. REVERSE	WH C1B-4	WH C5-21
31 E.D.C. FORWARD	WH/BK C5-20	WH/BK C1B-5
36 STEER LEFT/AXLE RETRACT	BL CB1-10	BL C6-36
43 HORN	GR C2B-5	GR CR5#86
45 GENERATOR OPTION	GR/WH C2B-7	GR/WH C5-12
60 AXLE EXTEND/RETRACT SELECT	OR/RD C6-39	OR/RD C2B-4
61 AXLE RETRACT	BL/BK C3B-11	BL/BK C6-21
	12 DRIVE ENABLE 19 JIB VALVE 25 OIL PRESSURE SENDER 26 WATER TEMP SENDER 28 TILT ALARM 29 ZWD/4WD 30 E D.C. REVERSE 31 E.D.C. FORWARD 36 STEER LEFT/AXLE RETRACT 43 HORN 45 GENERATOR OPTION 60 AXLE EXTEND/RETRACT SELECT	12 DRIVE ENABLE BLWH C6-12 19 JIB VALVE GRWH C48-7 25 OIL PRESSURE SENDER BL/BK C5-16 26 WATER TEMP SENDER GR/BK C5-14 28 TILT ALARM RD/BK C1-2 29 ZWD/AWD RD/WH C5-24 31 E.D.C. FORWARD WH/BK C5-20 36 STEER LEFT/AXLE RETRACT BL C81-10 43 HORN GRVH C28-7 60 AXLE EXTEND/RETRACT SELECT OR/RD C6-39

Platform Control Box Wiring Diagram, S-85

GM 3.0L Models (after serial number 3576)

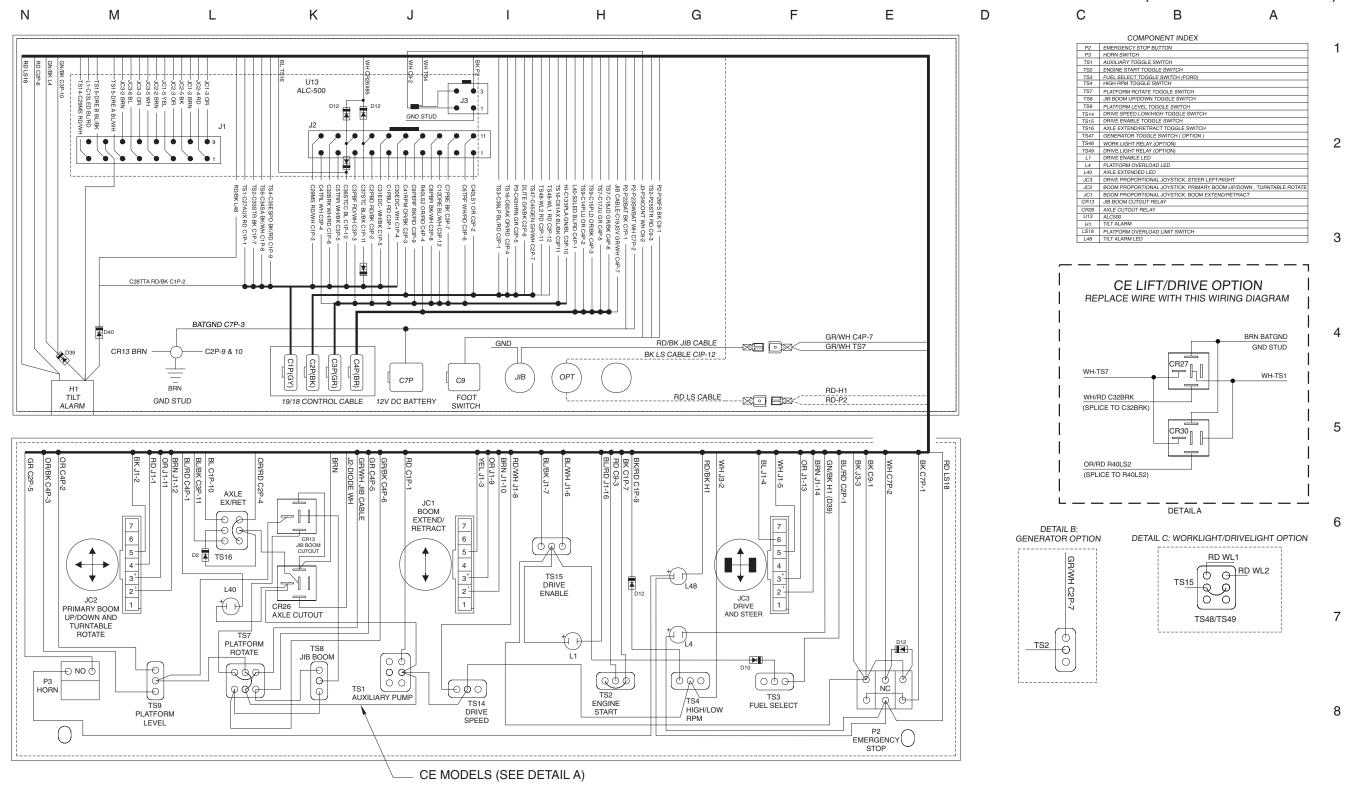

Part No. 77832 S-80 • S-85 83

Genîe

Section 6 • Schematics

Platform Control Box Wiring Diagram, S-85

GM 3.0L Models (after serial number 3576)





Section 6 • Schematics February 2012

Ground Control Box Wiring Diagram, S-85Perkins 704-30 Models (before serial number 3577)



Ground Control Box Wiring Diagram, S-85


Perkins 704-30 Models (before serial number 3577)


Genîe

S-80 • S-85

Part No. 77832

86

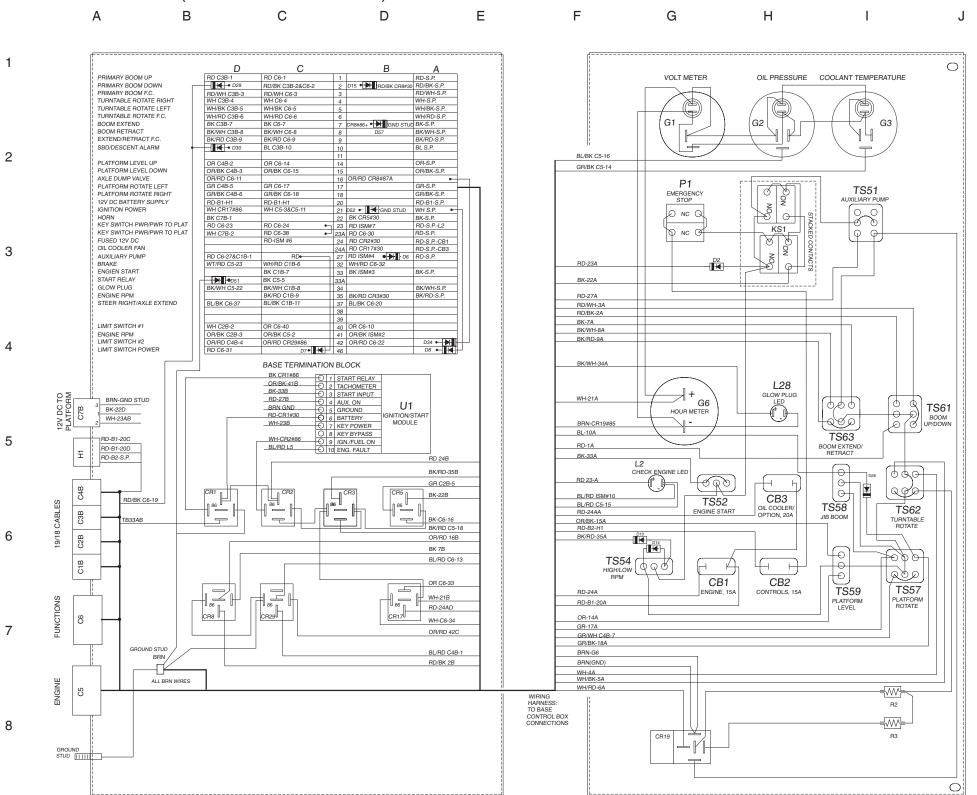

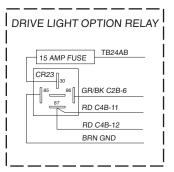

LABEL	DESCRIPTION
P1	EMERGENCY STOP BUTTON
KS1	KEY SWITCH
TS51	AUXILIARY POWER TOGGLE SWITCH
TS52	ENGINE START SWITCH
TS54	FUNCTION ENABLE/RPM SELECT TOGGLE SWITCH
TS57	PLATFORM ROTATE TOGGLE SWITCH
TS58	JIB BOOM UP/DOWN TOGGLE SWITCH
TS59	PLATFORM LEVEL TOGGLE SWITCH
TS61	PRIMARY BOOM UP/DOWN TOGGLE SWITCH
TS62	TURNTABLE ROTATE TOGGLE SWITCH
TS63	PRIMARY BOOM EXTEND/RETRACT TOGGLE SWITCH
CB1	CIRCUIT BREAKER, ENGINE, 15A
CB2	CIRCUIT BREAKER, CONTROLS, 15A
CB3	CIRCUIT BREAKER, OIL COOLER/OPTION, 20A
G1	VOLT METER GAUGE (OPTIONAL)
G2	OIL PRESSURE GAUGE (OPTIONAL)
G3	WATER TEMP. GAUGE (OPTIONAL)
G6	HOUR METER
L2	CHECK ENGINE LED
L28	GLOW PLUG LED
CR1	IGNITION / START RELAY
CR2	IGNITION POWER RELAY
CR3	HIGH IDLE CUTOUT RELAY
CR5	HORN RELAY
CR8	BOOM FUNCTION CUTOUT
CR17	HYDRAULIC COOLER FAN RELAY
CR19	TURNTABLE ROTATE LIMITING RELAY
CR23	DRIVE LIGHT RELAY OPTION
CR29	AXLE EXTEND LED RELAY
R2	TURNTABLE ROTATE LIMITING RESISTOR 10 OHMS
R3	TURNTABLE ROTATE LIMITING RESISTOR 5 OHMS (APU)
U1	IGNITION/START MODULE

CIRCUIT DESCRIPTION	FROM	то
12 DRIVE ENABLE	BL/WH C6-12	BL/WH C3B-12
19 JIB VALVE	GR/WH C4B-7	GR/WH-S.P.
25 OIL PRESSEURE SENDER	BL/BK C5-16	BL/BK-S.P
26 WATER TEMP SENDER	GR/BK C5-14	GR/BK-S.P.
28 TILT ALARM	RD/BK C1B-2	RD/BK C6-28
29 2WD/4WD	RD/WH C5-24	RD/WH C1B-3
30 E.D.C. REV	WH C1B-4	WH C5-21
31 E.D.C. FWD	WH/BK C5-20	WH/BK C1B-5
36 STEER LEFT/AXLE RETRACT	BL CB1-10	BL C6-36
43 HORN	GR C2B-5	GR CR5#86
45 GEN. OPTION	GR/WH C2B-7	GR/WH C5-12
60 AXLE EXT/RET SELECT	OR/RD C6-39	OR/RD C2B-4
61 AXLE RETRACT	BL/BK C3B-11	BL/BK C6-21


Platform Control Box Wiring Diagram, S-85


Perkins 704-30 Models (before serial number 3577)


N M L K J I H G F E D C B A

COMPONENT INDEX

P2	EMERGENCY STOP BUTTON	
P3	HORN BUTTON	
TS1	AUXILIARY TOGGLE SWITCH	
TS2	ENGINE START TOGGLE SWITCH	
TS4	HIGH RPM TOGGLE SWITCH	
TS7	PLATFORM ROTATE TOGGLE SWITCH	
TS8	JIB BOOM UP/DOWN TOGGLE SWITCH	
TS9	PLATFORM LEVEL TOGGLE SWITCH	
TS14	LOW/HIGH DRIVE SPEED TOGGLE SWITCH	
TS15	DRIVE ENABLE TOGGLE SWITCH	
TS16	AXLE EXTEND/RETRACT TOGGLE SWITCH	
TS47	GENERATOR TOGGLE SWITCH (OPTION)	
TS48	WORK LIGHT TOGGLE SWITCH (OPTION)	
L1	DRIVE ENABLE LED	
L24	GLOW PLUG LED	
L40	AXLE EXTENDED LED	
JC3	DRIVE PROPORTIONAL JOYSTICK, STEER LEFT/RIGHT	
JC1	BOOM PROPORTIONAL JOYSTICK: BOOM EXTEND/RETRACT	
JC2	BOOM PROPORTIONAL JOYSTICK: BOOM UP/DOWN, TURNTABLE ROTATE	
CR13	JIB CUTOUT RELAY	
U13	ALC500	
H1	TILT ALARM	

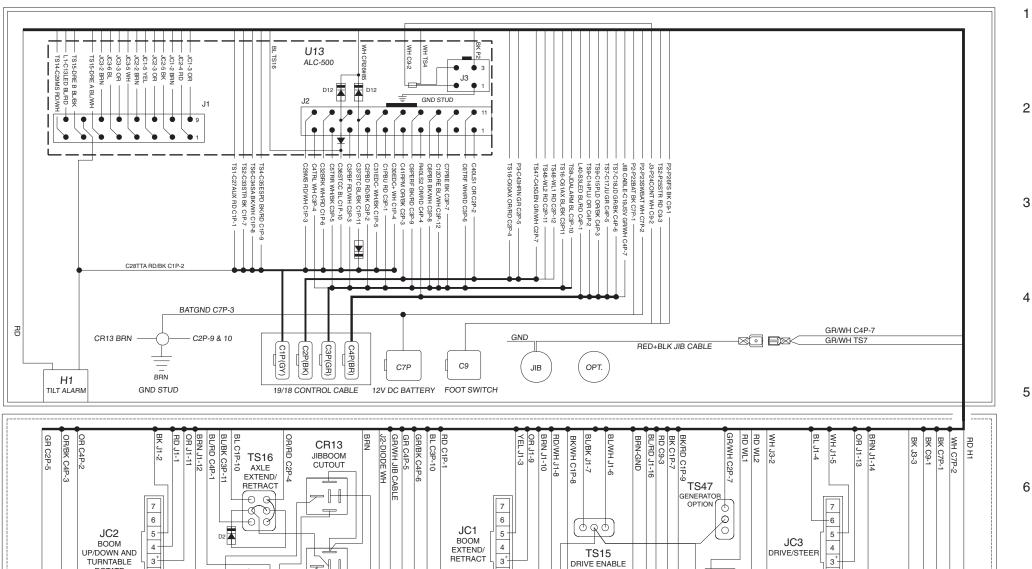

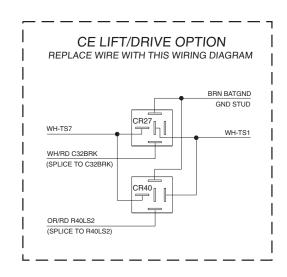

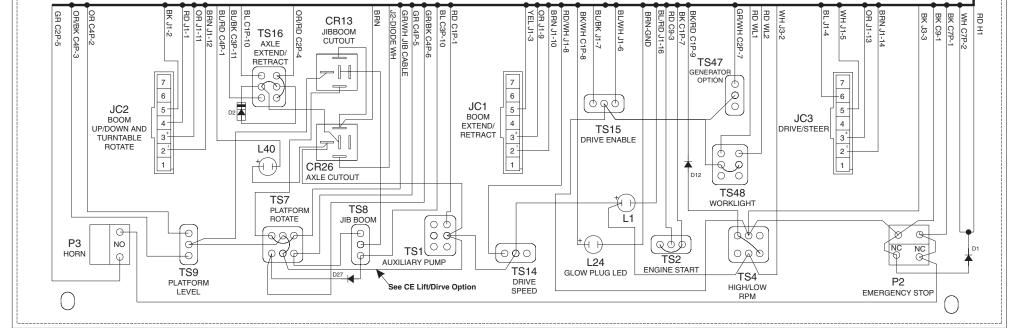

Genîe

Section 6 • Schematics

Platform Control Box Wiring Diagram, S-85






Section 6 • Schematics February 2012


Electrical Schematic, S-85



Electrical Schematic, S-85

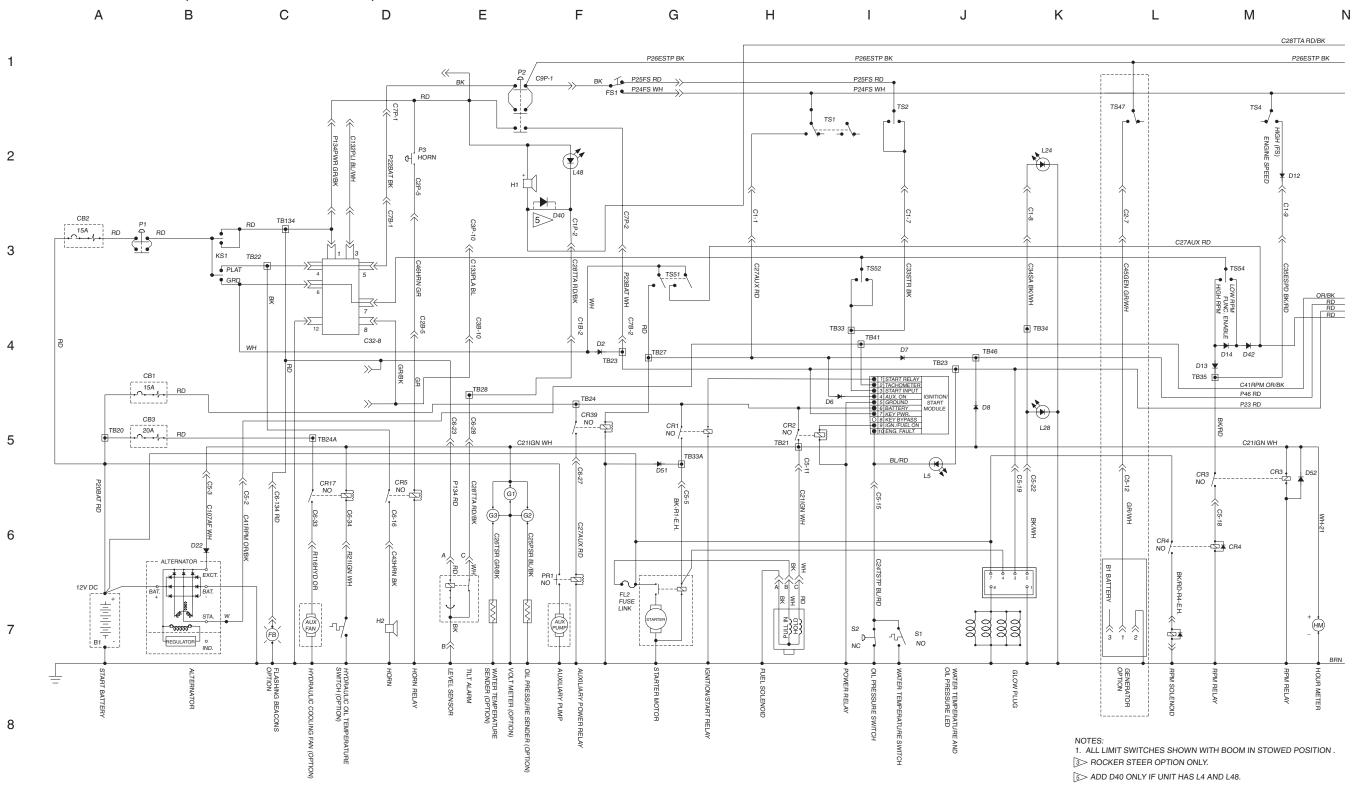

Electrical Schematic, S-85

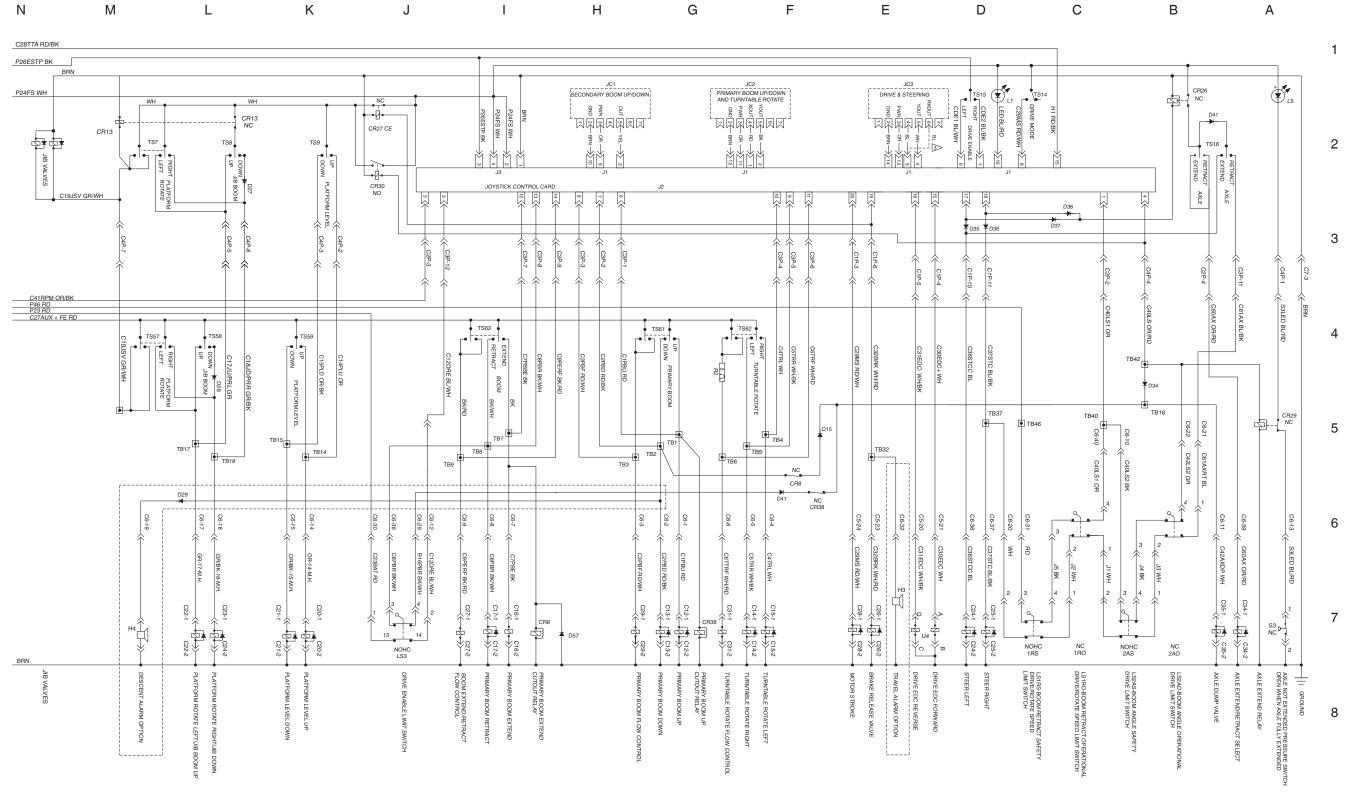

Section 6 • Schematics

Electrical Schematic, S-85






Section 6 • Schematics February 2012


Ground Control Box Wiring Diagram, S-85



Ground Control Box Wiring Diagram, S-85

Perkins 704-30 Models (after serial number 3576)

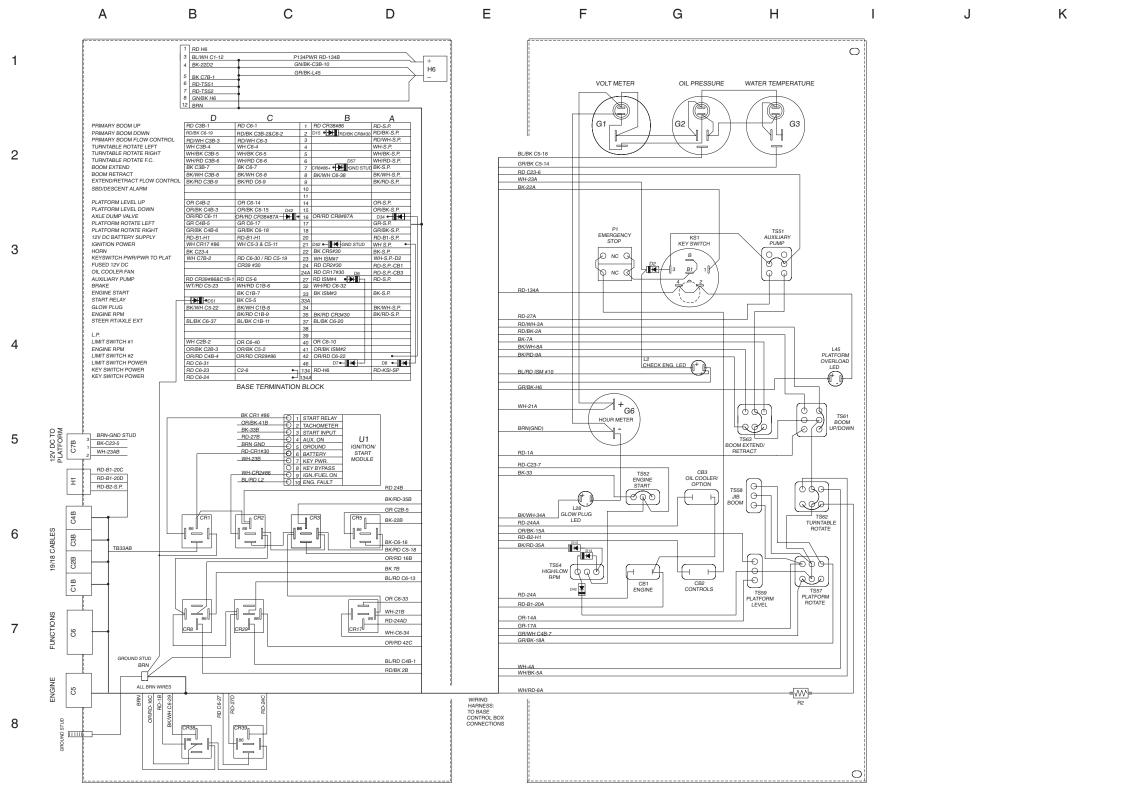

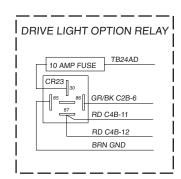


Ν

LABEL	DESCRIPTION
P1	RED EMERGENCY STOP BUTTON
KS1	KEY SWITCH
TS51	AUXILIARY TOGGLE SWITCH
TS52	ENGINE START TOGGLE SWITCH
TS54	FUNCTION ENABLE TOGGLE SWITCH
TS57	PLATFORM ROTATE TOGGLE SWITCH
TS58	JIB BOOM UP/DOWN TOGGLE SWITCH
TS59	PLATFORM LEVEL TOGGLE SWITCH
TS61	PRIMARY BOOM UP/DOWN TOGGLE SWITCH
TS62	TURNTABLE ROTATE TOGGLE SWITCH
TS63	PRIMARY BOOM EXTEND/RETRACT TOGGLE SWITCH
CB1	CIRCUIT BREAKER, ENGINE, 15A
CB2	CIRCUIT BREAKER, CONTROLS, 15A
CB3	CIRCUIT BREAKER, OIL COOLER/OPTION, 15A
G1	VOLT METER GAUGE (OPTIONAL)
G2	OIL PRESSURE GAUGE (OPTIONAL)
G3	OIL TEMPERATURE GAUGE (OPTIONAL)
G6	HOUR METER
L2	CHECK ENGINE LED
L28	GLOW PLUG LED
L45	PLATFORM OVERLOAD LED
CR1	IGNITION/START RELAY
CR2	IGNITION POWER RELAY
CR3	HIGH IDLE CUTOUT RELAY
CR5	HORN RELAY
CR17	HYDRAULIC COOLER FAN RELAY
CR23	DRIVE LIGHT RELAY OPTION
CR25	AXLE RET L/O RELAY
CR29	AXLE EXTEND LED RELAY
CR38	EXTEND FUNCTION CUTOUT RELAY
CR39	AUXILIARY PUMP RELAY
R2	5 OHM RESISTOR
U1	IGNITION/START MODULE

CIRCUIT DESCRIPTION	FROM	то
12 DRIVE ENABLE	BL/WH C6-12	BL/WH C3B-12
19 JIB VALVE	GR/WH C4B-7	GR/WH-S.P.
25 OIL PRESSURE SENDER	BL/BK C5-16	BL/BK-S.P
26 WATER TEMP SENDER	GR/BK C5-14	GR/BK-S.P.
28 TILT ALARM	RD/BK C1-2	RD/BK C6-28
29 2WD/4WD	RD/WH C5-24	RD/WH C1B-3
30 E.D.C. REV	WH C1B-4	WH C5-21
31 E.D.C. FWD	WH/BK C5-20	WH/BK C1B-5
36 STEER LEFT/AXLE RETRACT	BL CB1-10	BL C6-36
43 HORN	GR C2B-5	GR CR5#86
45 GEN. OPTION	GR/WH C2B-7	GR/WH C5-12
60 AXLE EXT/RET SELECT	OR/RD C6-39	OR/RD C2B-4
61 AXLE RETRACT	BL/BK C3B-11	BL/BK C6-21

Platform Control Box Wiring Diagram, S-85

Perkins 704-30 Models (after serial number 3576)

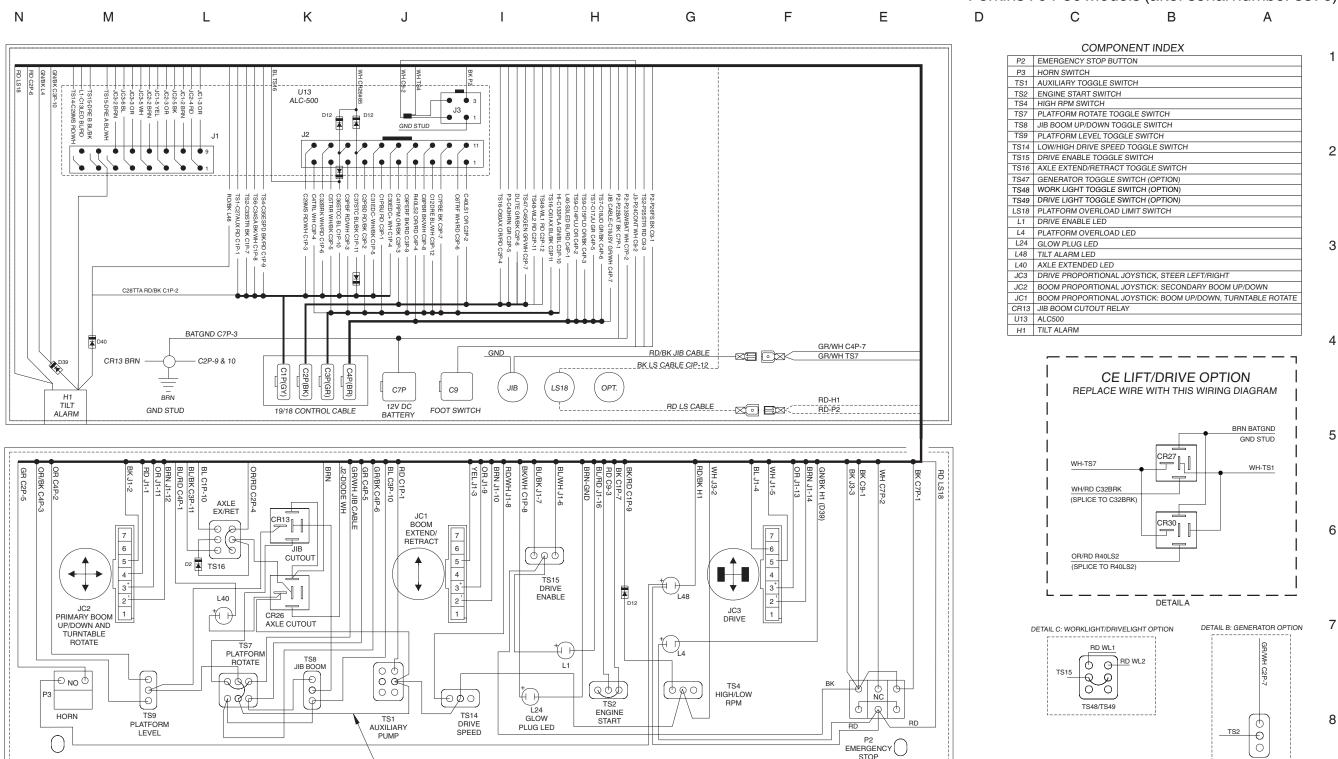

CE MODELS (SEE DETAIL A)

Part No. 77832 S-80 • S-85 95

Genîe


Section 6 • Schematics

Platform Control Box Wiring Diagram, S-85 Perkins 704-30 Models (after serial number 3576)



Dual Battery Option

N M L K J I H G F E D C B A

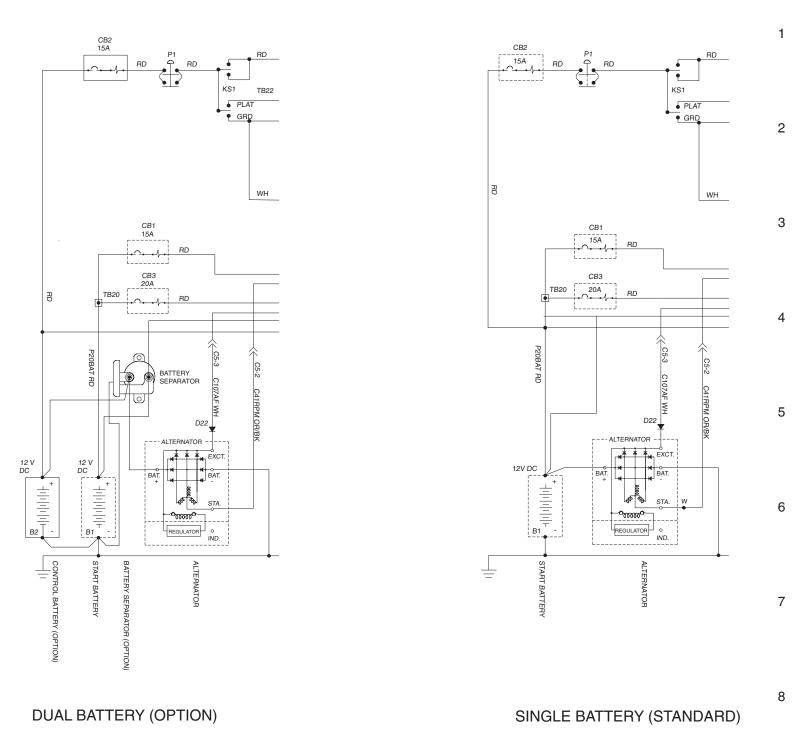

Part No. 77832 S-80 • S-85 97

Section 6 • Schematics


Dual Battery Option

Hydraulic Schematic, 2WD Models

S-80 • S-85

Part No. 77832

99

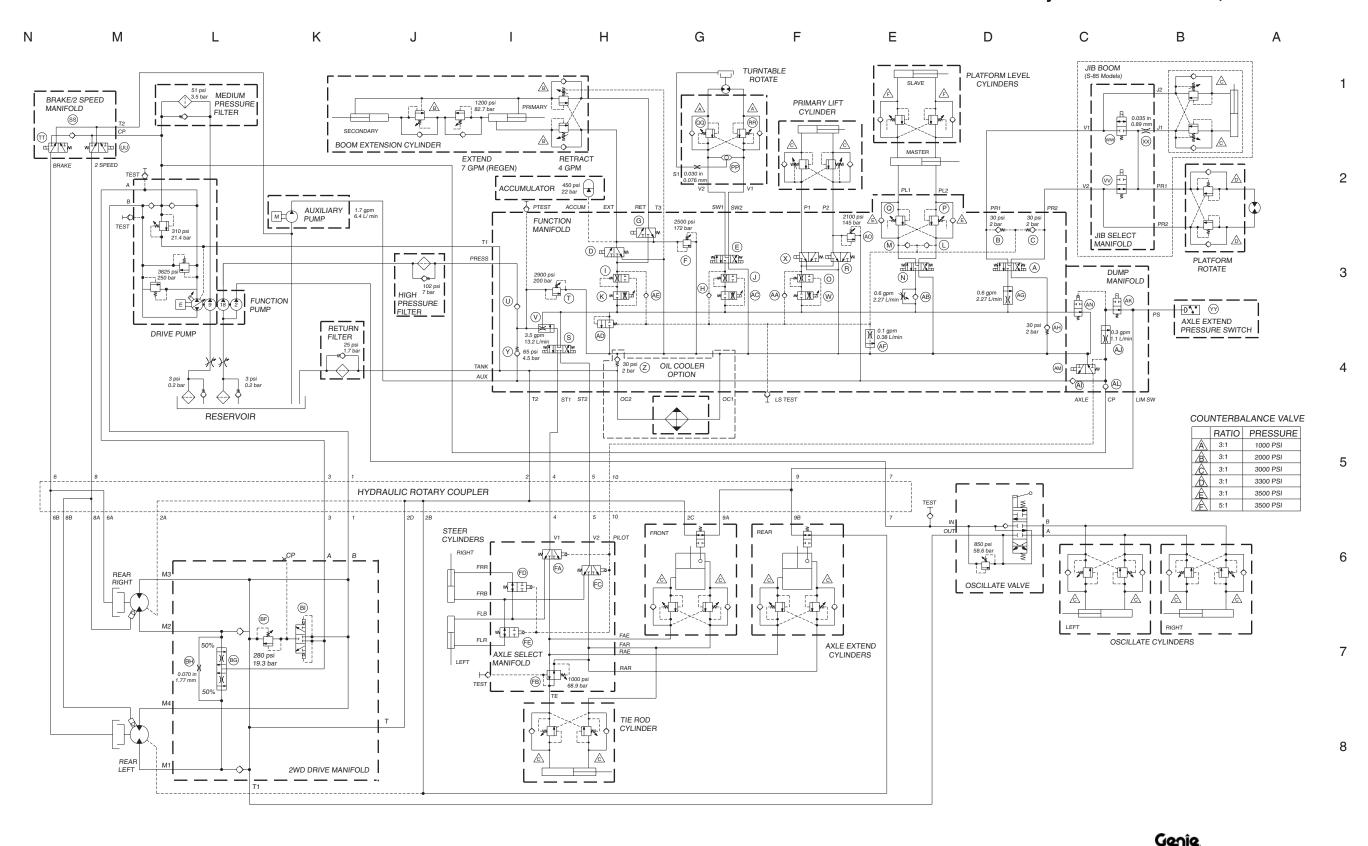

Section 6 • Schematics

Hydraulic Schematic, 2WD Models




Hydraulic Schematic, 4WD Models

Genie. S-80 • S-85

Part No. 77832

101

Section 6 • Schematics

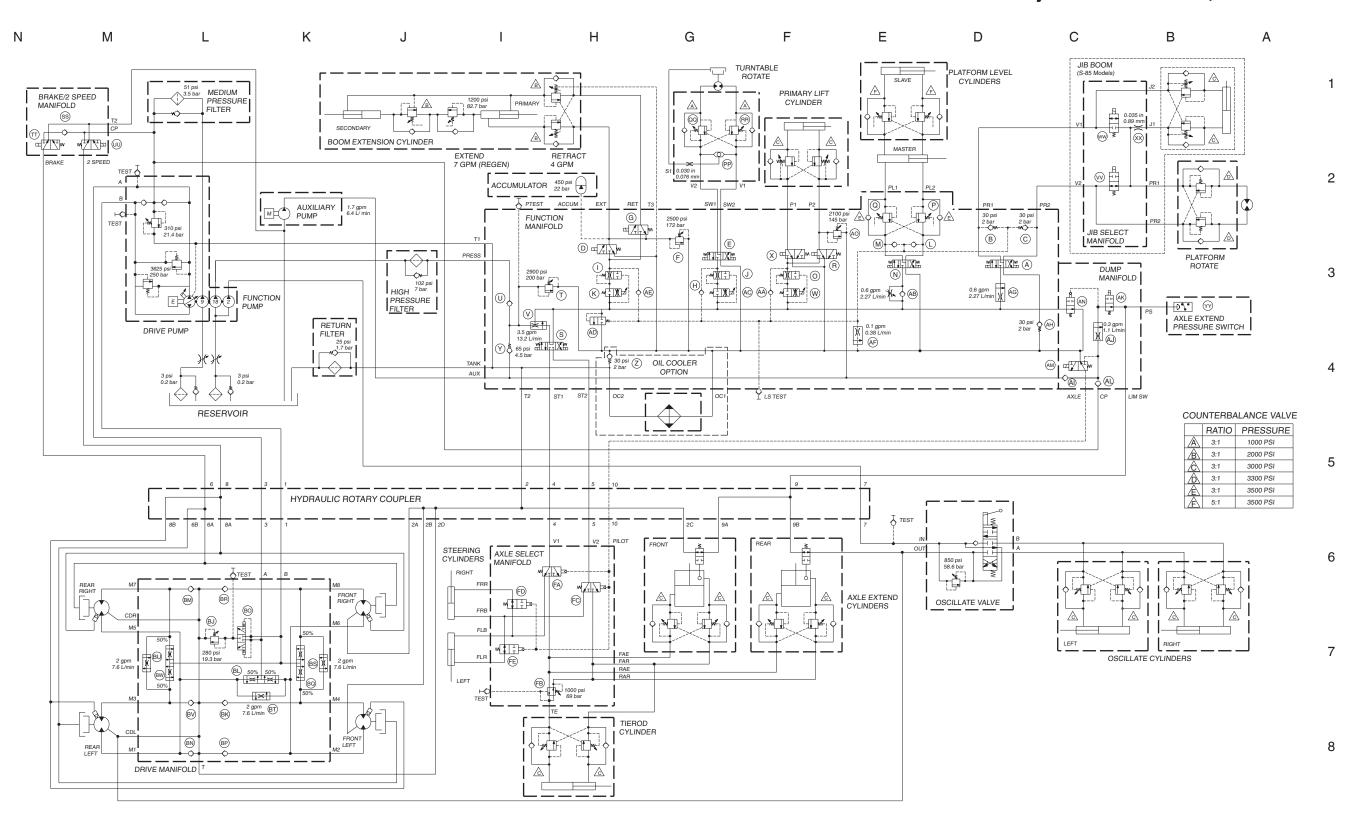

Section 6 • Schematics

Hydraulic Schematic, 4WD Models



California Proposition 65

Warning

The exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm.

Genie Sweden Phone 0046 3157 5101 Fax 0046 3157 5104

Genie France

Phone 0033 237 260 986 Fax 0033 237 260 998

Genie Iberica

Phone 0034 900 808 110 Fax 0034 935 725 080

Genie Germany

Phone 0800 180 9017 Phone 0049 4221 491 821 Fax 0049 4221 491 820

Genie U.K.

Phone 0044 1476 584 333 Fax 0044 1476 584 330

Genie Mexico City

Phone +52 55 5666 5242 Fax +52 55 5666 3241 Genie North America Phone 425.881.1800 Toll Free USA and Canada 800.536.1800

Fax 425.883.3475

Genie Australia Pty Ltd.
Phone +61 7 3375 1660
Fax +61 7 3375 1002

Genie China

Phone +86 21 53853768 Fax +86 21 53852569

Genie Singapore

Phone +65 67533544 Fax +65 67533544

Genie Japan

Phone +81 3 6436 2020 Fax +81 3 5445 1231

Genie Korea

Phone +82 2 558 7267 Fax +82 2 558 3910

Genie Brasil

Phone +55 11 4082 5600 Fax +55 22 4082 5630

Genie Holland

Phone +31 183 581 102 Fax +31 183 581 566

Distributed By:

